

Nautica NAPSPF203

Nautica Men's Spettacolare Reissue Watch NAPSPF203 Instruction Manual

Model: NAPSPF203

INTRODUCTION

This instruction manual provides detailed guidance for the proper use, setup, and maintenance of your Nautica Men's Spettacolare Reissue Watch, model NAPSPF203. Please read this manual thoroughly to ensure optimal performance and longevity of your timepiece.

The Nautica Spettacolare Reissue Watch features a robust stainless steel case, a precise quartz movement, and chronograph functionality, designed for both style and utility. It is water-resistant to 100 meters (330 feet), making it suitable for swimming and snorkeling.



Image: Front view of the Nautica Spettacolare Reissue Watch, showcasing its blue dial, chronograph subdials, and silver-tone stainless steel case and bracelet.

1. Setting the Time

1. **Unscrew the Crown:** Locate the crown on the right side of the watch case. Gently unscrew it counter-clockwise until it is free from the case.
2. **Pull the Crown Out:** Carefully pull the crown out to the second click position. The second hand will stop.
3. **Adjust the Time:** Rotate the crown to set the hour and minute hands to the desired time. Ensure you account for AM/PM if the watch has a 24-hour indicator or date function.
4. **Push and Screw Down the Crown:** Once the time is set, push the crown back into the first click position (or fully in if no date setting is needed). Then, screw the crown clockwise firmly back into the case to ensure water resistance.

2. Setting the Date

1. **Unscrew the Crown:** Unscrew the crown counter-clockwise.
2. **Pull the Crown Out to First Click:** Gently pull the crown out to the first click position.
3. **Adjust the Date:** Rotate the crown to change the date. If the date changes during the day, advance it by 12 hours.
4. **Push and Screw Down the Crown:** Push the crown fully back in and screw it clockwise firmly into the case.

3. Adjusting the Bracelet

The stainless steel bracelet is adjustable to fit wrist circumferences up to 8 inches. For proper fit, it may be necessary to remove or add links. This procedure typically requires specialized tools and is best performed by a qualified jeweler or watch technician to avoid damage.

OPERATING THE CHRONOGRAPH

Your Nautica Spettacolare Reissue Watch is equipped with a chronograph function for measuring elapsed time. The watch features three subdials and two pushers (buttons) located on the side of the case, typically at the 2 and 4 o'clock positions.



Image: Angled view of the Nautica Spettacolare Reissue Watch, highlighting the crown and the two chronograph pushers on the right side of the case.

Chronograph Functions:

- **Start/Stop:** Press the upper pusher (typically at 2 o'clock) to start the chronograph. Press it again to stop the measurement.
- **Reset:** While the chronograph is stopped, press the lower pusher (typically at 4 o'clock) to reset all chronograph hands to their zero positions.
- **Subdials:** The subdials typically measure seconds, minutes, and sometimes hours of elapsed time. Refer to the specific dial markings for precise readings.

Using the Tachymeter

The tachymeter scale on the bezel of your watch can be used to measure speed over a known distance (e.g., 1 kilometer or 1 mile). To use it:

1. Start the chronograph at the beginning of the measured distance.

2. Stop the chronograph when you reach the end of the distance.
3. The position of the chronograph second hand on the tachymeter scale indicates the average speed in units per hour (e.g., km/h or mph).

MAINTENANCE

Water Resistance

Your Nautica Spettacolare Reissue Watch is water-resistant to 100 meters (330 feet). This rating means it is suitable for recreational swimming and snorkeling. It is **not** suitable for diving. Always ensure the crown is fully screwed down before exposing the watch to water.

Cleaning

To maintain the appearance of your watch, wipe the case and bracelet regularly with a soft, dry cloth. For more thorough cleaning, especially after exposure to saltwater, rinse the watch with fresh water and dry it completely with a soft cloth. Avoid using harsh chemicals or abrasive materials.

Battery Replacement

The watch is powered by one nonstandard battery (included). When the battery power is low, the second hand may move in two-second intervals or stop completely. Battery replacement should be performed by a qualified watch technician to ensure proper sealing and water resistance.



Image: Rear view of the Nautica Spettacolare Reissue Watch, displaying the screw-down case back with engravings for water resistance (100 meters) and model number (NAPSPF203).

TROUBLESHOOTING

- **Watch Not Running:** Check if the crown is fully pushed in and screwed down. If the watch still does not run, the battery may need replacement.
- **Date Not Changing:** Ensure the time is set correctly, especially past midnight. If the date changes at noon, adjust the time by 12 hours.
- **Chronograph Hands Not Resetting to Zero:** This may indicate a need for calibration or service. Consult a watch technician.
- **Condensation Under Crystal:** If condensation appears under the crystal, it indicates a loss of water resistance. Have the watch inspected immediately by a professional to prevent internal damage.

SPECIFICATIONS

Feature	Detail
Model Number	NAPSPF203
Case Material	Stainless Steel
Case Diameter	45mm
Crystal Material	Mineral Glass
Dial Color	Blue
Bracelet Material	Stainless Steel
Bracelet Fit	Up to 8-inch wrist circumference
Water Resistance	100m (330ft)
Movement	Quartz (Japan Movement)
Battery Type	1 Nonstandard Battery (included)
Manufacturer	Timex
Package Dimensions	6.81 x 3.74 x 2.91 inches
Item Weight	10.55 ounces



Image: The black Nautica branded watch case, designed for protection and storage of the timepiece.

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official Nautica website. You may also contact the retailer where the watch was purchased for assistance.

For additional information about Nautica products, visit the [Nautica Store on Amazon](#).

© 2024 Nautica. All rights reserved.


Related Documents - NAPSPF203

	<p>Nautica T300 True Wireless Stereo Earbuds User Guide Features, Specs, and Support</p> <p>Comprehensive user guide for the Nautica T300 True Wireless Stereo Earbuds with Charging Case. Learn about features, setup, safety, warranty, and technical specifications.</p>
	<p>Nautica T220 True Wireless Stereo Earbuds with Charging Case - User Manual</p> <p>Get detailed instructions for your Nautica T220 True Wireless Stereo Earbuds. This guide covers setup, pairing, charging, technical specs, safety, and warranty. Visit technofashion.com for support.</p>
	<p>Nautica T120 True Wireless Stereo Earbuds User Manual & Specifications</p> <p>Comprehensive user guide and technical specifications for Nautica T120 True Wireless Stereo Earbuds with Charging Case. Learn how to use, pair, charge, and maintain your earbuds. Includes safety information and warranty details.</p>




[Инструкция по эксплуатации часов Nautica: Полное руководство пользователя](#)

Подробное руководство пользователя для часов Nautica. Узнайте о функциях, настройке и уходе за вашими часами Nautica, включая водостойкость, подсветку INDIGLO и различные модели.

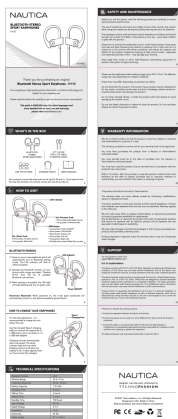

[Nautica H110 Bluetooth Stereo Sport Earphones User Manual and Specifications](#)

Official user manual and technical specifications for the Nautica H110 Bluetooth Stereo Sport Earphones, covering setup, usage, safety, warranty, and troubleshooting.

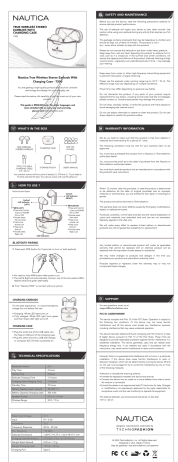

[Nautica T200 True Wireless Stereo Earbuds with Charging Case - User Manual and Specifications](#)

Comprehensive user manual for Nautica T200 True Wireless Stereo Earbuds, covering setup, usage, safety, technical specifications, and warranty information. Learn how to pair, charge, and maintain your earbuds.