

[Manuals.plus](#) /

› [Garden Winds](#) /

› Garden Winds RipLock 350 Replacement Canopy Top Cover for Purple Leaf Brentley Swing Models ZYPPS03, ZYPPS03-KK - Installation and Care Manual

Garden Winds ZYPPS03, ZYPPS03-KK

Garden Winds RipLock 350 Replacement Canopy Top Cover

COMPATIBLE WITH PURPLE LEAF BRENTLEY SWING MODELS ZYPPS03, ZYPPS03-KK

1. Introduction

This manual provides instructions for the installation, use, and maintenance of your Garden Winds RipLock 350 Replacement Canopy Top Cover. This product is designed to replace the canopy top on specific Purple Leaf Brentley Swing models, offering enhanced durability and protection from outdoor elements. Please read all instructions carefully before proceeding with installation.

2. Compatibility

This replacement canopy top is specifically designed for Purple Leaf Brentley Swing models ZYPPS03 and ZYPPS03-KK. It is crucial to verify your swing model number to ensure proper fit. The canopy dimensions are approximately 76 inches (W) x 49.5 inches (D) x 8 inches (H).

OURS



GENERIC



**High-denier
polyester**

Thin polyester

UV-resistant

**Minimal UV
protection**

Reinforced seams

Standard seams

Precision Fit

Universal fit

**1 Year Limited
Performance
Warranty**

No Warranty

THE DIFFERENCE IS IN THE DETAILS



Image: Compatibility details for Purple Leaf Brentley Swing models ZYPPS03 and ZYPPS03-KK, highlighting the specific models this canopy is designed for.

PLEASE CHECK YOUR MODEL

Compatible with the following model numbers:
ZYPPS03, ZYPPS03-KK



COMPATIBILITY



Image: Approximate measurements of the replacement canopy top, indicating 76" width, 49.5" depth, and 8" height.

3. Package Contents

- 1 x Garden Winds RipLock 350 Replacement Canopy Top Cover (Beige)

Note: The metal swing frame and any other accessories are not included with this replacement canopy top.

4. Safety Information

- Always exercise caution when working with outdoor furniture.
- It is recommended that two adults perform the installation to ensure safety and ease of handling.
- Do not attempt to install the canopy during strong winds or adverse weather conditions.
- Ensure all parts are securely fastened after installation.

5. Setup and Installation

The installation process involves removing your existing canopy and threading the support rods into the new replacement cover. This process typically requires two people.

VERIFY YOUR FRAME DETAILS



FRAME IDENTIFICATION



Image: Visual guide for identifying your swing frame details, showing various attachment points and structural elements.

1. **Prepare the Swing:** Remove any cushions or items from the swing seat.
2. **Remove Existing Canopy:** Carefully detach your old canopy top from the swing frame. This may involve prying off end caps and sliding out support rods. Note how the old canopy was attached, as the new one will use a similar method.
3. **Extract Support Rods:** Gently slide the support rods out of the pockets of the old canopy. These rods will be reused with your new replacement canopy.
4. **Insert Rods into New Canopy:** Locate the rod pockets on the new Garden Winds replacement canopy. With assistance, carefully thread the support rods into these pockets. It is important to align the rods properly to avoid straining the fabric or stitching. If the pockets feel tight, proceed slowly and ensure the fabric is not snagged.
5. **Attach New Canopy to Frame:** Once the rods are fully inserted, reattach the new canopy top to your swing frame. This typically involves sliding the rod ends back into their designated slots or re-securing them with end caps. Ensure all attachment points are firm and secure.
6. **Adjust and Secure:** Smooth out the canopy fabric and ensure it is evenly stretched across the frame. The canopy may feature Velcro straps or other fasteners; secure these to the frame as intended.



Image: The Garden Winds replacement canopy top fully installed on a Purple Leaf Brentley swing.

6. Operating Instructions

The Garden Winds RipLock 350 Replacement Canopy Top Cover provides shade and protection from light rain and UV rays. It is designed for continuous outdoor use under normal weather conditions.

- **UV Protection:** The canopy offers UPF 50+ UV resistance, reducing sun exposure.
- **Water Resistance:** The fabric is water-resistant, providing protection during light rainfall. For heavy rain or storms, consider removing the canopy or seeking additional shelter to prevent damage.
- **Wind Conditions:** While durable, prolonged exposure to strong winds can damage the canopy and swing frame. It is advisable to remove the canopy during severe weather conditions, such as high winds or hurricanes, to extend its lifespan.

7. Maintenance

Proper maintenance will extend the life and appearance of your replacement canopy.

- **Cleaning:** Clean the canopy regularly with a soft brush or cloth and mild soap diluted in water. Rinse

thoroughly with clean water and allow it to air dry completely before storage or re-installation. Do not use harsh chemicals, bleach, or abrasive cleaners, as these can damage the fabric.

- **Stain Removal:** For stubborn stains, use a specialized outdoor fabric cleaner, following the product's instructions.
- **Seasonal Storage:** During off-seasons or periods of prolonged severe weather, it is recommended to remove the canopy, clean it, and store it in a dry, protected area to prevent mildew and extend its lifespan.
- **Inspection:** Periodically inspect the canopy for any signs of wear, tear, or damage. Address minor issues promptly to prevent them from worsening.

8. Troubleshooting

- **Canopy Does Not Fit:**
 - Double-check your swing model number against the compatible models (ZYPPS03, ZYPPS03-KK).
 - Verify the dimensions of your swing frame against the canopy's approximate measurements (76"W x 49.5"D x 8"H).
 - Ensure the support rods are fully and correctly inserted into the canopy pockets. Sometimes, slight adjustments are needed for a snug fit.
- **Difficulty Inserting Rods:**
 - Ensure the fabric is not twisted or bunched up inside the rod pockets.
 - Apply gentle, even pressure. Avoid forcing the rods, which could damage the stitching.
 - Having a second person to hold and guide the fabric can significantly ease this step.
- **Water Pooling on Canopy:**
 - Ensure the canopy is taut and properly stretched across the frame. Sagging can lead to water accumulation.
 - Check that the frame itself is level and not causing an uneven surface for the canopy.

9. Specifications

- **Product Name:** Garden Winds RipLock 350 Replacement Canopy Top Cover
- **Compatible Models:** Purple Leaf Brentley Swing Models ZYPPS03, ZYPPS03-KK
- **Material:** RipLock 350 Polyester Fabric
- **Color:** Beige
- **Approximate Dimensions (L x W x H):** 76" x 49.5" x 8"
- **Item Weight:** 4 Pounds
- **Features:** UPF 50+ UV Resistant, Water Resistant, CPAI-84 Fire Retardant, Reinforced Grid Pattern



Image: Detailed view of the RipLock 350 fabric construction, highlighting its high-density, RipLock technology, and reinforced stitching.



DURABLE



**WATER
RESISTANT**



UV PROTECTED



**FIRE
RESISTANT**

BUILT FOR THE ELEMENTS



Image: Icons illustrating the canopy's resistance to elements: durable, water resistant, UV protected, and fire resistant.

10. Warranty and Support

Your Garden Winds RipLock 350 Replacement Canopy Top Cover is backed by a **1-year limited performance warranty**. This warranty covers manufacturing defects and performance issues under normal use. For any questions regarding fit, product issues, or warranty claims, please contact Garden Winds customer support. Our US-based customer support team is available to assist you.

- **Customer Support:** Refer to the contact information provided with your purchase or visit the official Garden Winds website for support details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question