

## UPERFECT 133A14

# UPERFECT 15.6-inch Portable Touch Monitor User Manual

Model: 133A14

## 1. INTRODUCTION

Thank you for purchasing the UPERFECT 15.6-inch Portable Touch Monitor. This manual provides detailed instructions on how to set up, operate, maintain, and troubleshoot your new device. Please read this manual thoroughly before use to ensure optimal performance and longevity of your monitor.



Image: The UPERFECT 15.6-inch portable touch monitor, showcasing its touch functionality and sleek design.

## 2. KEY FEATURES

- Large Capacity Built-in Battery:** Equipped with a 10000mAh battery, providing up to 4 hours of continuous use on a single charge, enabling extended work sessions even outdoors. Features 1.5-hour fast charging.



Image: The portable monitor displaying content alongside a laptop, emphasizing its built-in 10000mAh battery for up to 4 hours of continuous operation and 1.5-hour fast charging.

- 10-Point Multi-Touch Panel:** Offers highly accurate and responsive touch control for a seamless interactive experience, perfect for document editing, drawing, or gaming.

## タッチパネルで快適操作

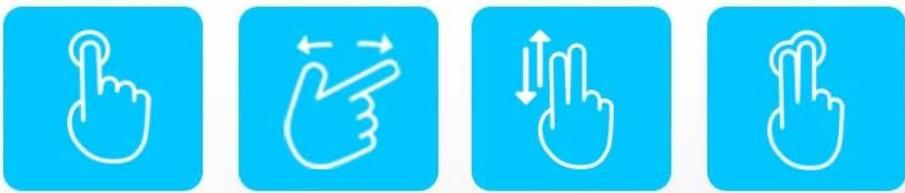


Image: A user demonstrating comfortable operation with the 10-point multi-touch panel, highlighting intuitive gestures.

- **Refined Slim Bezel Design:** Features a stylish, frameless design that makes the display appear larger and more immersive. The slim aluminum alloy body offers a premium matte finish that is comfortable to touch and scratch-resistant.
- **Superior Color Reproduction & Powerful Sound:** Delivers an excellent visual experience with high resolution and wide viewing angles, ensuring consistent color without blurring from any perspective. Built-in 2.0W stereo speakers provide immersive audio.

# 纖細な色彩美

どの角度からでもほとんど色味が変わらずに視聴できます


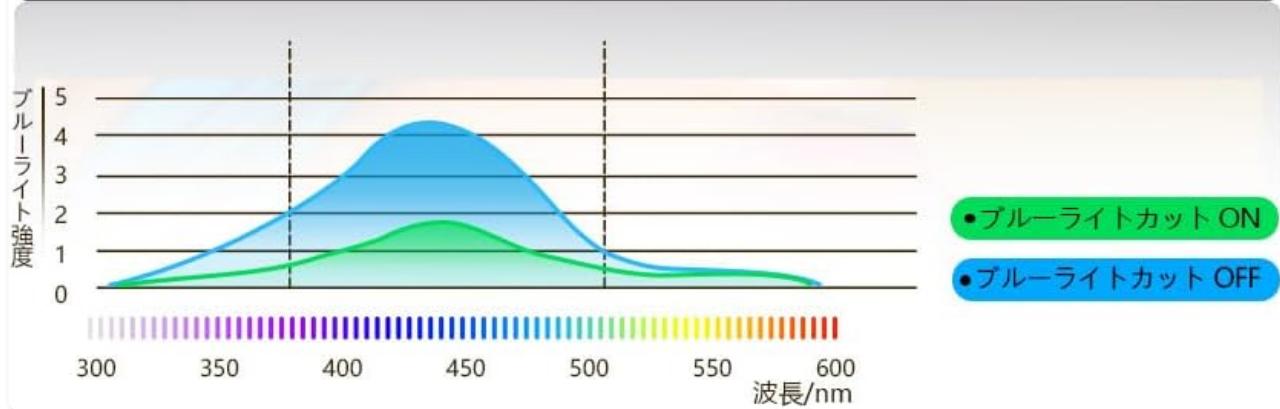


Image: The monitor showcasing its delicate color beauty and blue light reduction feature, ensuring comfortable viewing from any angle.

- **Wide Connectivity:** Supports hybrid signal USB Type-C and HDMI connections, allowing display of content from various devices including PCs, smartphones, game consoles, and cameras. USB Type-C enables video output and touch functionality with a single cable.

# 遅延なくゲーム用にも優秀

Switch、PS4、XBOXなど多種なゲーム機に対応可能

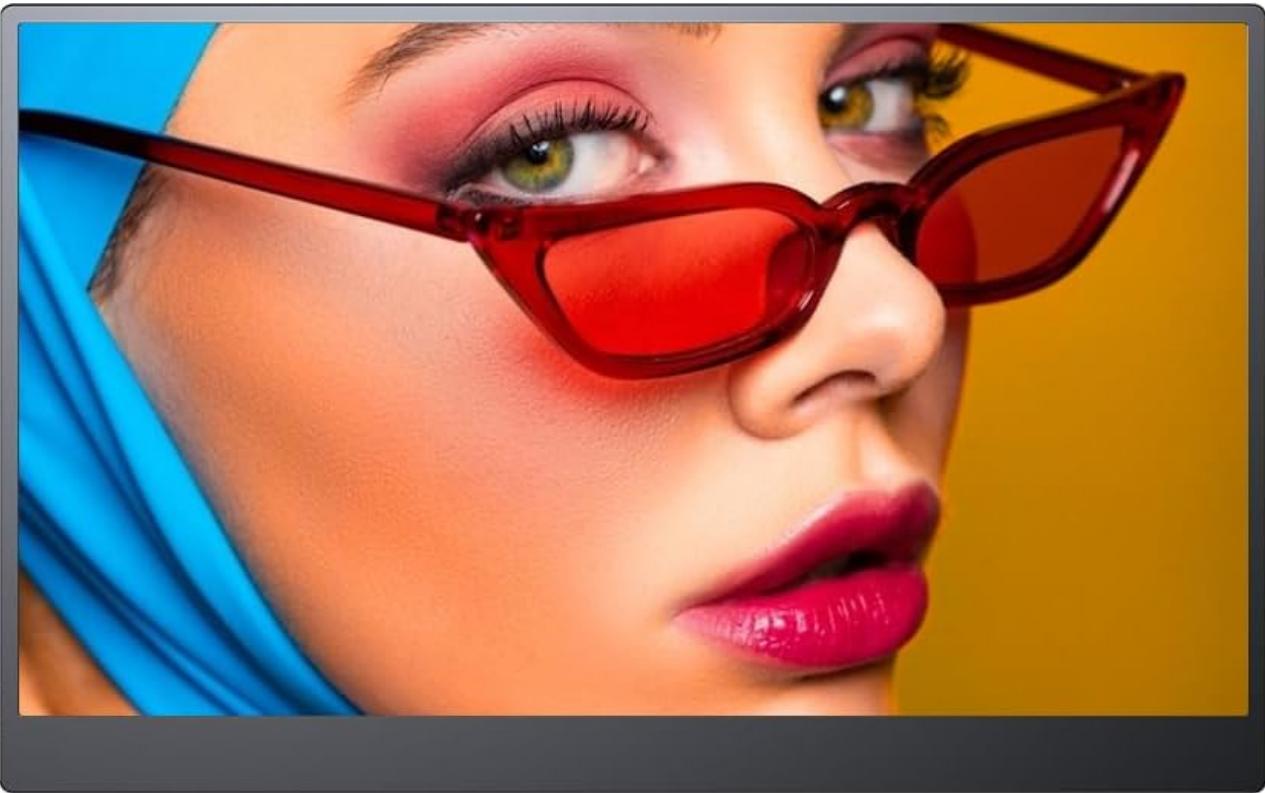

Switch



PS4/PS5



XBOX ONE



Image: The monitor demonstrating its compatibility with various gaming consoles like Nintendo Switch, PlayStation, and Xbox, offering excellent performance for gaming without delay.

## 3. PACKAGE CONTENTS



Please check that all items are present and in good condition:

- UPERFECT 15.6-inch Portable Touch Monitor
- Protective Stand Case
- USB Type-C to Type-C Cable (for video, power, and touch)
- HDMI to Mini HDMI Cable (for video)
- USB Type-A to Type-C Cable (for power)
- Power Adapter
- User Manual (this document)

*Note: All necessary cables are included as standard, so there is no need for additional purchases.*

## 4. PRODUCT OVERVIEW (PORTS AND BUTTONS)

Familiarize yourself with the ports and buttons on your monitor:

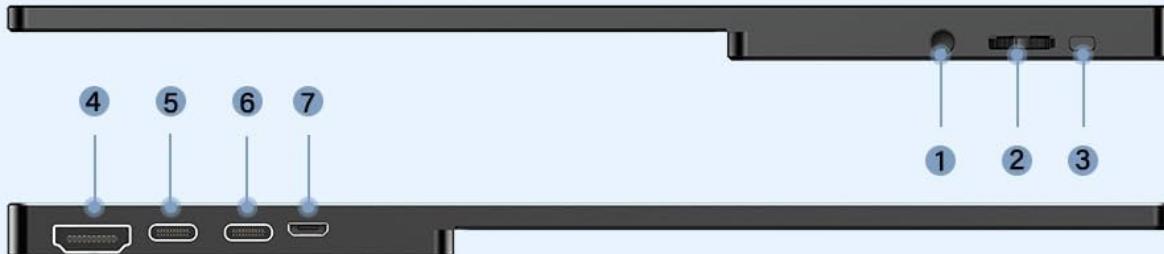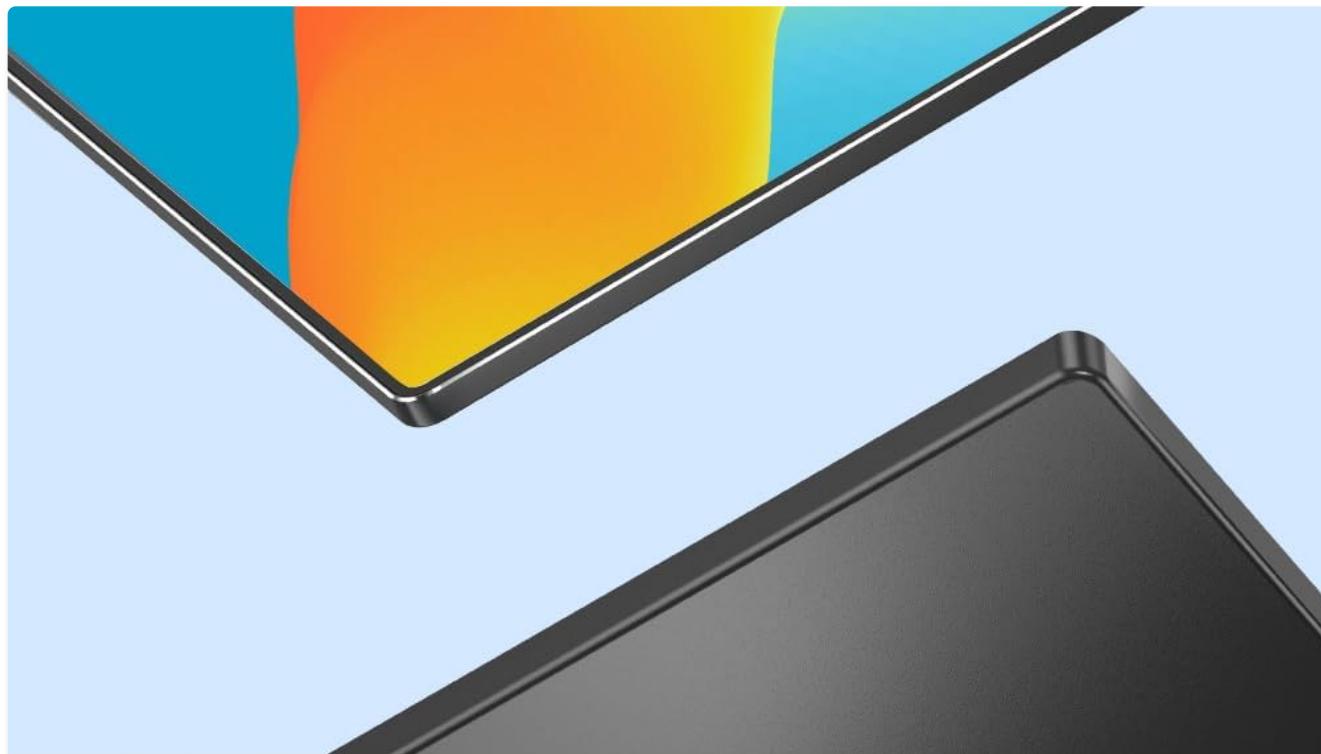

① 3.5mmヘッドホンポート   ③ BACKボタン   ⑤ Type-Cポート（全機能）   ⑦ USBポート(OTG機能)  
② スクロールボタン   ④ HDMIポート   ⑥ Type-Cポート（給電）

Image: Detailed diagram showing the various ports and buttons on the UPERFECT portable monitor.

- 3.5mm Headphone Port:** For connecting external audio devices.
- Scroll Button:** Used for navigating the On-Screen Display (OSD) menu.
- BACK Button:** Used to go back in the OSD menu or exit.
- HDMI Port:** For video input from devices with HDMI output.
- Type-C Port (Full Function):** Supports video input, touch function, and power delivery with a single cable.
- Type-C Port (Power Delivery):** Dedicated port for power input to charge the monitor.
- USB Port (OTG Function):** For connecting USB devices like a mouse or keyboard.

## 5. SETUP INSTRUCTIONS

---

### 5.1 Connecting to a Laptop/PC (USB Type-C)

- Ensure your laptop/PC has a full-function USB Type-C port that supports DisplayPort Alternate Mode and Power Delivery.
- Connect one end of the included USB Type-C to Type-C cable to the monitor's **Type-C Port (Full Function)**.
- Connect the other end of the cable to your laptop/PC's USB Type-C port.
- The monitor will automatically detect the signal and display the screen. Touch functionality will also be enabled.
- If the monitor does not power on or flickers, connect the power adapter to the monitor's **Type-C Port (Power Delivery)**.

### 5.2 Connecting to a Laptop/PC (HDMI)

- Connect one end of the included HDMI to Mini HDMI cable to the monitor's **HDMI Port**.
- Connect the other end of the HDMI cable to your laptop/PC's HDMI port.
- Connect the USB Type-A to Type-C cable from your laptop/PC's USB-A port to the monitor's **Type-C Port (Power Delivery)** for power. For touch functionality, connect the USB Type-A end to your laptop/PC and the Type-C end to the monitor's **Type-C Port (Full Function)**.
- The monitor will automatically detect the signal.

### 5.3 Connecting to a Smartphone (USB Type-C)

- Ensure your smartphone supports DisplayPort Alternate Mode via its USB Type-C port.
- Connect the USB Type-C to Type-C cable between your smartphone and the monitor's **Type-C Port (Full Function)**.
- The monitor will display your phone's screen. Touch functionality will be enabled if supported by your phone.
- *Note: Touch screen is not supported when connected to iPhone.*

### 5.4 Connecting to Game Consoles (HDMI)

- Connect the HDMI to Mini HDMI cable between your game console and the monitor's **HDMI Port**.
- Connect the power adapter to the monitor's **Type-C Port (Power Delivery)** for stable power.
- *For Nintendo Switch: It is necessary to power the monitor with the Switch's original power supply for proper operation.*



## 10点マルチタッチ対応



Image: Demonstrating the convenience of connecting the monitor to a laptop with a single cable, enhancing work efficiency and maintaining a tidy desktop.

## 6. OPERATING INSTRUCTIONS

### 6.1 Power On/Off

- To power on, press and hold the **Scroll Button** for a few seconds until the screen lights up.
- To power off, press and hold the **Scroll Button** for a few seconds until the screen turns off.

### 6.2 On-Screen Display (OSD) Menu

- Press the **Scroll Button** briefly to open the OSD menu.
- Use the **Scroll Button** to navigate through menu options.
- Press the **Scroll Button** to select an option.
- Use the **BACK Button** to go back to the previous menu or exit the OSD.

### 6.3 Touch Functionality

The monitor supports 10-point multi-touch. Use standard touch gestures for navigation, zooming, and interaction with compatible devices.



## 最新モデル登場

タッチパネル搭載&大容量バッテリー内蔵

15.6"

15.6"

FHD

1080P

目

10000mAh



輝度300cd/m<sup>2</sup>



ブルーライト軽減



タッチ対応

Image: A group of people using the UPERFECT monitor for collaborative work, highlighting its 10-point multi-touch capability for intuitive interaction.

### 6.4 Display Orientation

The monitor supports both horizontal and vertical display modes, optimizing for various tasks like presentations, document editing, or web browsing.


大画面ディスプレイで  
テレワークの作業効率をアップ！



Image: The monitor in a vertical orientation, demonstrating its utility for telework and increasing productivity with a large screen display.

## ケーブル一本で接続可能

10000mAhのバッテリーを内蔵しており、余分な電源ケーブルを追加する必要がなく、デスクトップをきれいに保ちながら作業効率を向上させます。

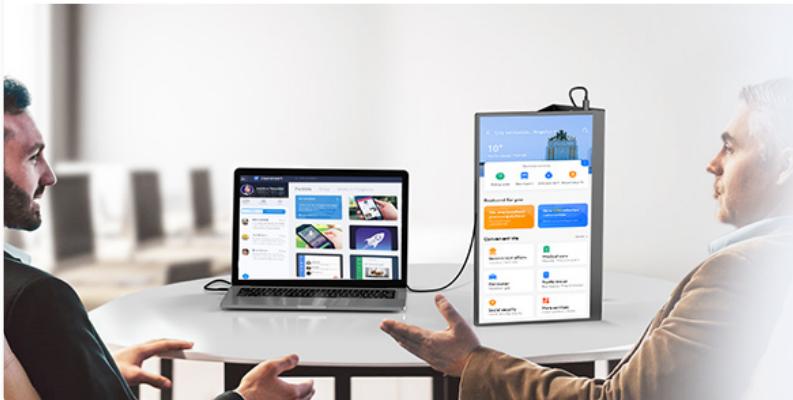

## 縦表示も可能

横置きは、プレゼンテーションやExcelでの作業に最適で、縦置きは書類の表示やWebページの表示に最適です。しかも、ノングレアのため、映り込みがまったくないので、目に優しいです。

Image: Illustration of the monitor's versatility, supporting both horizontal and vertical display modes for optimal viewing in various applications.

## 7. MAINTENANCE

### 7.1 Cleaning the Monitor

- Always power off the monitor and disconnect all cables before cleaning.
- Use a soft, lint-free cloth slightly dampened with water or a non-abrasive screen cleaner.
- Do not spray cleaner directly onto the screen.
- Avoid using harsh chemicals, alcohol, or abrasive materials, as they can damage the screen or casing.

### 7.2 Storage

- When not in use, store the monitor in its protective stand case to prevent scratches and damage.
- Store in a cool, dry place away from direct sunlight and extreme temperatures.

### 7.3 Optimal Viewing Angle

For comfort and safety, position the monitor at eye level or slightly below. Avoid extreme upward viewing angles, as this can put strain on the stand and potentially cause the monitor to tip over.

✓ 推奨

目の高さ、または下向きの視野角度

✗ 禁止

上向きの視野角度

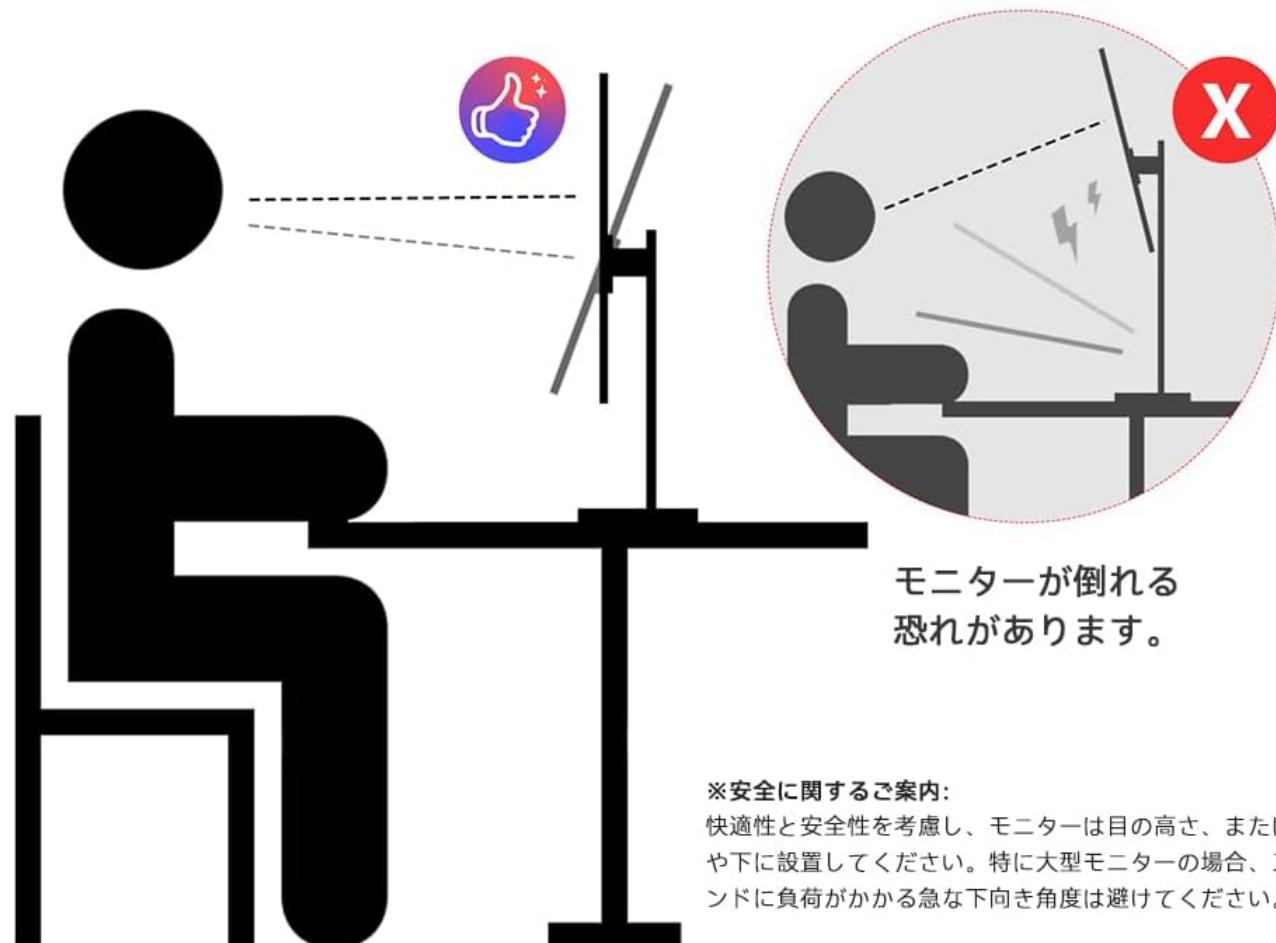


Image: A visual guide illustrating the recommended viewing angle (eye level or slightly below) and a prohibited angle (extreme upward tilt) to ensure stability and user comfort.

## 8. TROUBLESHOOTING

If you encounter issues with your monitor, please refer to the following common problems and solutions:

Problem	Possible Cause / Solution
Monitor does not power on or flickers.	<ul style="list-style-type: none"><li><b>Insufficient Power Supply:</b> Ensure the power adapter used is PD30W or higher. If the output is 5V2A or less, it may not work properly. Connect an external power source to the monitor's dedicated power Type-C port.</li><li><b>Loose Cable Connection:</b> The cable connection part is a consumable item and can be easily damaged. Avoid frequently plugging and unplugging the cable, as this can loosen the connection and cause flickering or other abnormalities.</li></ul>

Problem	Possible Cause / Solution
No image displayed or image flickers.	<ul style="list-style-type: none"> <li><b>Insufficient Power:</b> Ensure sufficient power is supplied to the monitor. Connect an external power source to the monitor's dedicated power Type-C port.</li> <li><b>Input Voltage Fluctuation:</b> Depending on the output of the connected device, there may be insufficient voltage. In this case, power the monitor with the included adapter.</li> <li><b>Incorrect Cable/Port:</b> Ensure you are using the correct cable (USB-C to USB-C for full function, or HDMI + USB-A for power/touch) and connecting to the correct ports on both the monitor and the source device.</li> </ul>
No display when connected to Nintendo Switch.	<ul style="list-style-type: none"> <li><b>Power Requirement:</b> When connecting to a Nintendo Switch, it is necessary to power the monitor using the Switch's original power supply for proper operation.</li> </ul>
Touch screen not working.	<ul style="list-style-type: none"> <li><b>Incorrect Connection:</b> Ensure you are using a full-function USB Type-C cable connected to the monitor's <b>Type-C Port (Full Function)</b> and a compatible device.</li> <li><b>Device Compatibility:</b> Not all devices support touch functionality via USB-C. For example, touch screen is not supported when connected to iPhone.</li> <li><b>Driver Issues:</b> For PC connections, ensure necessary drivers are installed (usually automatic).</li> </ul>

## 9. SPECIFICATIONS

Feature	Specification
Brand	UPERFECT
Model Number	133A14
Screen Size	15.6 inches
Resolution	FHD 1920x1080
Panel Type	IPS LCD Panel
Aspect Ratio	16:9
Screen Surface	Glossy
Battery Capacity	10000mAh
Product Dimensions (W x H x D)	16 x 21 x 3 cm
Product Weight	2.13 Kilograms
Connectivity	USB Type-C (Full Function), HDMI, USB (OTG)

## 10. WARRANTY AND SUPPORT

UPERFECT is committed to providing excellent customer service and product quality.

- **Manufacturer's Warranty:** This product comes with a 1-year manufacturer's warranty. Please retain your proof of purchase for warranty claims.
- **Customer Support:** For any inquiries, technical assistance, or warranty support, please contact UPERFECT customer service. We offer 24-hour support to assist you.



Image: UPERFECT customer service team, ready to provide 1-year manufacturer warranty and 24-hour support.  
For more information, visit the official UPERFECT store: [UPERFECT Store on Amazon](#)