

[Manuals.plus](#) /

› [SoBuy](#) /

› SoBuy FRG59-W Modern Garment Rack Instruction Manual

SoBuy FRG59-W

SoBuy FRG59-W Modern Garment Rack Instruction Manual

1. PRODUCT OVERVIEW

The SoBuy FRG59-W Garment Rack is a modern and functional clothing storage solution designed to enhance any bedroom, hallway, or dressing room. It offers generous storage space with a hanging rail, two shelves, and side hooks, making it ideal for organizing various clothing items and accessories in small spaces.



Figure 1: SoBuy FRG59-W Garment Rack in use, showcasing its elegant design and storage capabilities.

2. SPECIFICATIONS

This section details the key specifications of your SoBuy FRG59-W Garment Rack.

Feature	Detail
Model Number	FRG59-W
Material	Engineered Wood (MDF)
Color	White
Dimensions (W x D x H)	66 x 39 x 180 cm
Item Weight	15 kg
Maximum Load Capacity	15 kg
Number of Shelves	2
Installation Type	Freestanding

Feature	Detail
Special Feature	Space Saver



3. SETUP AND ASSEMBLY

The SoBuy FRG59-W Garment Rack is designed for easy assembly. It is delivered in flat packaging and includes all necessary parts and detailed, illustrated instructions. Please follow the steps below and refer to the included manual for specific diagrams and part identification.

3.1 Before You Begin

- Unpack all components and verify against the parts list in your manual.
- Ensure you have the required tools (usually a screwdriver, which may or may not be included).
- Assemble on a soft, clean surface to prevent scratches.

3.2 Assembly Steps (General)

1. **Assemble the Side Frames:** Attach the horizontal support bars to the main vertical side frames using the provided hardware.
2. **Install Shelves:** Secure the two shelves into their designated positions on the side frames. Ensure they are level and firmly attached.
3. **Attach Hanging Rail:** Connect the metal hanging rail between the top sections of the side frames. Ensure it is securely fastened.
4. **Install Side Hooks:** Attach the small hooks to the designated points on the outer sides of the frame.
5. **Final Check:** Once assembled, gently shake the unit to ensure all connections are tight and the rack is stable.



Figure 3: Detail of the hanging rail attachment point.



Figure 4: Detail of the convenient side hooks.

4. OPERATING INSTRUCTIONS

The SoBuy FRG59-W Garment Rack is designed for straightforward use to organize your clothing and accessories.

4.1 Using the Hanging Rail

- Hang coats, dresses, shirts, and other garments on hangers from the top rail.
- Distribute weight evenly to maintain stability. Do not exceed the maximum load capacity of 15 kg for the entire unit.



Figure 5: Garments displayed on the hanging rail.

4.2 Utilizing the Shelves

- The two lower shelves are suitable for storing folded clothes, shoes, storage boxes, or other accessories.
- Place heavier items on the bottom shelf for better stability.



Figure 6: Shelves used for organizing accessories and footwear.

4.3 Using the Side Hooks

- The side hooks are ideal for hanging hats, scarves, bags, or other small items that require quick access.

5. MAINTENANCE

Proper care will ensure the longevity and appearance of your SoBuy FRG59-W Garment Rack.

5.1 Cleaning

- Wipe the surfaces with a soft, damp cloth.
- Avoid using harsh chemicals, abrasive cleaners, or rough sponges, as these can damage the white painted finish.
- Dry immediately with a clean cloth to prevent water spots.

5.2 General Care

- Periodically check all screws and connections to ensure they remain tight. Retighten if necessary to maintain stability.

- Avoid placing the rack in direct sunlight or near heat sources to prevent material degradation or discoloration.
- Do not overload the rack beyond its stated maximum capacity of 15 kg.

6. TROUBLESHOOTING

If you encounter any issues with your garment rack, refer to these common solutions.

6.1 Instability or Wobbling

- **Check Connections:** Ensure all screws and bolts are fully tightened. Loose connections are a common cause of instability.
- **Even Surface:** Make sure the rack is placed on a flat, level surface. Uneven flooring can cause wobbling.
- **Weight Distribution:** Ensure that items are distributed evenly across the hanging rail and shelves. Overloading one side can affect balance.

6.2 Difficulty During Assembly

- **Review Instructions:** Double-check the assembly manual provided with the product. Ensure each step is followed correctly and all parts are oriented as shown.
- **Part Identification:** Verify that you are using the correct parts for each step, referring to the numbered parts list in the manual.
- **Do Not Force:** If parts do not fit easily, do not force them. Re-examine the instructions and part orientation.

7. WARRANTY AND SUPPORT

SoBuy is committed to providing quality products and customer satisfaction.

7.1 Returns and Issues

If you are not satisfied with your product or if there is a problem, please contact SoBuy customer service. You may be eligible for a free return voucher. Refer to your purchase documentation or the retailer's return policy for specific details regarding the return process and duration.

7.2 Customer Service

For further assistance, questions, or to report any issues, please contact SoBuy customer support through the retailer where you purchased the product. All SoBuy furniture is delivered with numbered parts and illustrated instructions to facilitate assembly and support.