

B0BHR8P69M

Generic Semi-automatic Mini Twin Tub Washing Machine User Manual

Model: B0BHR8P69M

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your Generic Semi-automatic Mini Twin Tub Washing Machine. Please read this manual thoroughly before using the appliance and retain it for future reference.

2. SAFETY INSTRUCTIONS

- Ensure the power supply voltage matches the rating label on the machine.
- Do not operate the machine with a damaged power cord or plug.
- Keep children and pets away from the machine during operation.
- Do not immerse the electrical parts in water.
- Always unplug the machine before cleaning or performing any maintenance.
- Do not wash waterproof materials or items that float easily in the spin tub, as this may cause imbalance and damage.
- Ensure the machine is placed on a stable, level surface to prevent vibration and noise.

3. PRODUCT OVERVIEW

The Generic Semi-automatic Mini Twin Tub Washing Machine features separate wash and spin tubs, allowing for simultaneous or sequential operation. The control panel provides easy access to wash timer, wash selector, and spin timer functions.



Figure 3.1: Overall view of the washing machine with key dimensions. The unit measures approximately 22.83 inches in width, 14.72 inches in depth, and 26.38 inches in height.

3.1. Control Panel



Figure 3.2: The control panel features three rotary knobs: Wash Timer, Wash Selector (Gentle/Normal/Drain), and Spin Timer. The wash timer controls the duration of the wash cycle, the wash selector determines the wash intensity and drain function, and the spin timer sets the spin cycle duration.

- **Wash Timer:** Sets the washing duration (up to 15 minutes).
- **Wash Selector:** Selects wash mode (Gentle, Normal) or Drain function.
- **Spin Timer:** Sets the spinning duration (up to 5 minutes).

4. SETUP

4.1. Unpacking

Carefully remove the washing machine from its packaging. Inspect for any damage during transit. Retain packaging materials for potential future transport or service.

4.2. Placement

- Place the machine on a firm, level surface to minimize vibration and noise during operation.
- Ensure there is adequate space around the machine for ventilation and access.
- Position the machine near a water source and a suitable drain.

4.3. Connecting Water and Drain

- Connect the water inlet hose to a faucet and to the water inlet on the machine.
- Position the drain hose to direct wastewater into a sink, tub, or floor drain. Ensure the drain hose is not kinked or blocked.

5. OPERATING INSTRUCTIONS

5.1. Washing Cycle

1. **Load Laundry:** Open the wash tub lid and place clothes loosely into the wash tub. Do not exceed the maximum wash capacity of 14.3 pounds.
2. **Add Detergent:** Add the appropriate amount of detergent directly into the wash tub with the clothes.
3. **Fill with Water:** Fill the wash tub with water to the desired level. You can use either cold or warm water depending on your laundry needs.
4. **Select Wash Mode:** Turn the Wash Selector knob to either "Gentle" for delicate items or "Normal" for regular loads.
5. **Set Wash Timer:** Turn the Wash Timer knob to the desired washing duration (e.g., 5-15 minutes). The machine will start washing automatically.
6. **Drain Water:** Once the wash cycle is complete, turn the Wash Selector knob to "Drain" to empty the water from the wash tub.



Separation of washing and dewatering, could be work at the same time

Figure 5.1: The twin tub design allows for simultaneous washing in one tub and dewatering (spinning) in the other, optimizing laundry efficiency.

5.2. Rinsing Cycle

After draining the wash water, you can rinse clothes in two ways:

- **Fill and Wash Rinse:** Refill the wash tub with clean water, set the Wash Selector to "Normal" or "Gentle", and set the Wash Timer for a short cycle (e.g., 3-5 minutes). Drain the water afterward. Repeat if necessary.
- **Spin Rinse:** Transfer clothes to the spin tub. While the spin tub is operating, slowly pour clean water over the clothes for a quick rinse. Ensure the spin tub lid is closed during this process.

5.3. Spin Drying Cycle

1. **Load Spin Tub:** Transfer washed and rinsed clothes from the wash tub to the spin tub. Distribute clothes evenly to prevent imbalance. Do not exceed the maximum spin capacity of 6.6 pounds.
2. **Close Lid:** Ensure the safety cover and the spin tub lid are securely closed.
3. **Set Spin Timer:** Turn the Spin Timer knob to the desired spinning duration (e.g., 1-5 minutes). The machine will start spinning.
4. **Unload:** Once the spin cycle is complete and the tub has stopped rotating, open the lid and carefully remove the clothes.

Reduce Winding, 360°Care



Figure 5.2: The spin tub's design promotes 360-degree care, aiming to reduce winding and tangling of clothes during the spin cycle.

6. MAINTENANCE

6.1. Cleaning the Tubs

- After each use, wipe down the inside of both tubs with a clean, damp cloth.
- For deeper cleaning, use a mild, non-abrasive cleaner. Rinse thoroughly with clean water.
- Do not use harsh chemicals or abrasive pads, as these can damage the surfaces.

6.2. Cleaning the Lint Filter

Locate the lint filter (usually inside the wash tub). Remove it, clean any accumulated lint under running water, and reinsert it securely.

6.3. Exterior Cleaning

Wipe the exterior of the machine with a soft, damp cloth. Avoid spraying water directly onto the control panel.

6.4. Storage

If storing the machine for an extended period, ensure both tubs are completely dry. Disconnect water

hoses and drain any remaining water. Store in a dry, well-ventilated area.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged; Power outage; Timer not set.	Ensure power cord is securely plugged in; Check household power; Set the Wash/Spin Timer.
Water does not drain	Drain hose kinked or blocked; Drain selector not set to "Drain".	Straighten drain hose and clear any blockages; Turn Wash Selector to "Drain".
Excessive vibration/noise during spin	Machine not level; Clothes unevenly distributed in spin tub; Too much laundry.	Adjust machine to a level surface; Redistribute clothes evenly; Reduce laundry load.
Poor washing performance	Too much laundry; Insufficient water; Incorrect detergent amount.	Reduce load size; Ensure adequate water level; Use correct detergent amount.

8. SPECIFICATIONS

Feature	Detail
Brand	Generic
Model	B0BHR8P69M
Type	Semi-automatic Twin Tub
Wash Capacity	14.3 Pounds (approx. 6.5 kg)
Spin Capacity	6.6 Pounds (approx. 3 kg)
Max Spin Speed	1300 RPM
Product Dimensions (L x W x H)	14.72 x 22.83 x 26.38 inches
Item Weight	24.2 pounds (approx. 11 kg)
Control Type	Knob
Installation Type	Freestanding
Color	White

9. WARRANTY AND SUPPORT

This product is covered by a standard manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions. For technical support, service, or warranty claims, please contact your retailer or the manufacturer's customer service department.

Note: Proof of purchase may be required for warranty service.

