

Cimetechn SK676

Cimetechn SK676 Bluetooth Wireless Keyboard User Manual

Model: SK676

1. INTRODUCTION

This manual provides comprehensive instructions for the proper use and maintenance of your Cimetechn SK676 Bluetooth Wireless Keyboard. Please read this manual thoroughly before using the product to ensure optimal performance and longevity.

2. PRODUCT OVERVIEW

2.1 Key Features

- **Bluetooth 5.0 Connectivity:** Provides a stable and reliable wireless connection with an operating range of up to 10 meters.
- **Multi-Device Pairing:** Connects to up to three different Bluetooth-enabled devices, allowing for seamless switching between them.
- **Compact Japanese Layout:** Features a 72-key Japanese QWERTY layout, optimized for Japanese input.
- **Ergonomic Design:** Includes a 15-degree tilt for comfortable typing and rubber anti-slip pads for stability.
- **Wide Compatibility:** Supports various operating systems including iOS, Android, Mac, and Windows.
- **Portable Design:** Lightweight and compact, with dimensions of 31.5 cm x 10.5 cm x 2.5 cm and a weight of approximately 423g.

2.2 Package Contents

- Cimetechn SK676 Bluetooth Wireless Keyboard
- User Manual
- AAA Batteries (2, user-supplied)

2.3 Keyboard Layout

The keyboard features a compact Japanese QWERTY layout with dedicated function keys and multi-pairing buttons.

システム互換性

本製品はWindows、Mac、iPad、iPhone、Androidなどのパソコンやモバイル機器にサポートしている。

Bluetooth搭載しているiPad、スマホ、PCにすべて対応します。



本体サイズ : 31.5 * 10.5 * 2.5cm

本体重さ : 約423 g

Image: Overview of the Cimetech SK676 Bluetooth Wireless Keyboard, highlighting its Japanese layout and distinctive round keycaps.

3. SETUP

3.1 Battery Installation

1. Locate the battery compartment on the underside of the keyboard.
2. Open the battery compartment cover.
3. Insert two AAA batteries, ensuring correct polarity (+/-).
4. Close the battery compartment cover.

底部4角滑り止めシリコン付き

シリコンの強化デザインを使用しているため
長いテキストを編集するときでも
キーボードが簡単に位置から外さない



Image: The bottom of the keyboard, illustrating the battery compartment and the four anti-slip silicone pads.

3.2 Power On/Off

- To power on, slide the power switch (located on the top edge of the keyboard) to the "ON" position.
- To power off, slide the power switch to the "OFF" position.

3.3 Bluetooth Pairing

The keyboard supports pairing with up to three devices. Follow these steps for each device:

1. Ensure the keyboard is powered on.
2. Press and hold the **Fn** key simultaneously with either **BT1**, **BT2**, or **BT3** for 5 seconds. The corresponding Bluetooth

indicator LED will begin to blink, indicating pairing mode.

3. On your device (smartphone, tablet, computer), enable Bluetooth and search for available devices.
4. Select "BT Keyboard" from the list of found devices.
5. If prompted, enter the pairing code displayed on your device using the keyboard and press **Enter**.
6. Upon successful connection, the Bluetooth indicator LED on the keyboard will turn off.

最大3台のマルチペアリングに対応

パソコンやタブレット、スマートフォンなど、最大3台までのデバイスをペアリング可能です。切り替えボタンを押すことで登録したデバイスを瞬間に切り替えることができます。



Image: The keyboard demonstrating its multi-pairing capability by connecting to a desktop computer, a laptop, and an iPad simultaneously.

4. OPERATING INSTRUCTIONS

4.1 Switching Between Connected Devices

To switch between devices that are already paired:

- Press **Fn + BT1** to switch to the first paired device.
- Press **Fn + BT2** to switch to the second paired device.
- Press **Fn + BT3** to switch to the third paired device.

4.2 Switching System Modes

The keyboard has specific modes for different operating systems to ensure correct key mapping. To switch modes:

- Press **Fn + Q** for Android devices.
- Press **Fn + W** for Windows devices.
- Press **Fn + E** for macOS and iOS devices.

4.3 Function Key Usage

The F1-F12 keys on the top row have dual functions. To access the standard F1-F12 functions, press and hold the **Fn** key while pressing the desired F key.

- Example: Press **Fn + F5** to refresh a page.
- Without pressing **Fn**, these keys perform multimedia or system control functions (e.g., volume control, media playback).

ファンクション機能の使用

Fnキーを押しながら、F1-F12ファンクションキーを使えます

Fn+F1-F12キー：例えば、Fn+F5=リフレッシュ



ファンクションキー (Fn)

Fnキーを押しながら、枠が対付しているキーを押すと、各類ファンクション機能が動作します。

キーボード動作モードの切り替え

Fnキーを押しながら、システム (IOS/Win/Andなど) が印字されるキーを押すと、キーボードの動作レイアウトを切替できます。

Bluetooth接続ボタン

Fnキー+BT1やBT2やBT3を押しながら、キーボードがペアリングモードに入ります。

接続先の切り替え

複数端末とペアリングしている場合は、Fnキーを押しながら、BT1/BT2/BT3を合わせて接続先を切り替え可能です。

Image: A detailed diagram illustrating the function key row and how to use the Fn key for various commands and system mode switching.

5. MAINTENANCE

5.1 Cleaning

- Turn off the keyboard before cleaning.

- Use a soft, lint-free cloth slightly dampened with water or a mild cleaning solution to wipe the surface.
- Do not use harsh chemicals, abrasive cleaners, or immerse the keyboard in liquid.
- Use compressed air to remove dust and debris from between the keys.

5.2 Storage

- Store the keyboard in a cool, dry place away from direct sunlight and extreme temperatures.
- If storing for an extended period, remove the batteries to prevent leakage.



Image: The compact keyboard fitting easily into a bag, highlighting its portable design for convenient storage and transport.

6. TROUBLESHOOTING

6.1 Connection Issues

- **Keyboard not connecting:** Ensure the keyboard is powered on and within the 10-meter operating range. Re-enter pairing mode (**Fn + BT1/BT2/BT3** for 5 seconds) and try pairing again.
- **Intermittent connection:** Check battery levels. Replace batteries if low. Ensure no strong interference sources (e.g., Wi-Fi routers, other Bluetooth devices) are nearby.

6.2 Key Input Problems

- **Incorrect characters typed:** Ensure the correct system mode is selected (**Fn + Q/W/E**).
- **Keys not responding:** Check battery levels. Power cycle the keyboard (turn off, then on). Re-pair the keyboard with your device.
- **Function keys not working as expected:** Remember to press and hold the **Fn** key to access the F1-F12 functions.

7. SPECIFICATIONS

Feature	Description
Brand	Cimetech
Model	SK676
Connectivity Technology	Bluetooth 5.0
Keyboard Description	Wireless

Number of Keys	72
Keyboard Layout	Japanese QWERTY
Compatible Operating Systems	Windows 7/8/10/XP, macOS, iOS, Android, Chrome OS
Compatible Devices	Laptops, Smartphones, Tablets (e.g., iPad Pro/Air/Mini, iPhone, MacBook Pro, Amazon Fire HD series)
Operating Range	Up to 10 meters
Power Source	2 x AAA Batteries (not included)
Dimensions (L x W x H)	31.5 cm x 10.5 cm x 2.5 cm
Weight	Approx. 423g
Color	Gray

8. WARRANTY AND SUPPORT

Cimotech products are designed for reliability and performance. For warranty information or technical support, please refer to the product packaging or contact Cimotech customer service directly. Contact details can typically be found on the official Cimotech website or through your retailer.

When contacting support, please have your product model (SK676) and purchase information ready.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question