

[Manuals.plus](#) /

› [Liene](#) /

› Liene ZPP110 Mini Instant Photo Printer User Manual

Liene ZPP110

Liene ZPP110 Mini Instant Photo Printer User Manual

Model: ZPP110 | Brand: Liene

IMPORTANT SAFETY INFORMATION

Before operating your Liene ZPP110 Mini Instant Photo Printer, please read all instructions and safety precautions provided in this manual and any accompanying documentation. Ensure you wear appropriate safety equipment and take all necessary precautions during setup and use. Familiarize yourself with the printer's components and functions to prevent injury or damage.

PACKAGE CONTENTS

Your Liene ZPP110 Mini Instant Photo Printer package includes:

- Liene ZPP110 Photo Printer
- 50 Sheets of Zink Photo Paper
- USB Type-C Charging Cable

SETUP

Loading Zink Photo Paper

The Liene ZPP110 printer uses Zink (Zero Ink) photo paper, which contains the ink crystals embedded within the paper itself. Each pack contains 10 sheets of 2x3 inch adhesive-backed photo paper and one blue SmartSheet calibration card. Only load one 10-pack at a time. Ensure the printer is turned off before loading paper.

1. Gently slide the top cover of the printer in the direction of the arrow until it detaches. Set the cover aside.
2. Carefully open one 10-pack of Zink photo paper. You will find 10 photo sheets and 1 blue SmartSheet.
3. Insert the 10 photo sheets into the paper tray with the glossy, printable side facing up. Place the blue SmartSheet at the bottom of the stack, with the barcode facing down.
4. Align the top cover with the printer body and gently slide it back into place until it clicks securely. Be careful to avoid pinching your fingers.



Image: Step 1 of loading paper, showing the top cover being slid off the printer.



Image: Step 2 of loading paper, showing the Zink photo paper being inserted into the open printer tray.



Image: Step 3 of loading paper, showing the top cover being closed on the printer.

App Installation

Download the official Liene app from your smartphone's app store (compatible with iOS and Android). The app is essential for operating the printer and accessing its features.

Bluetooth Connection

Ensure Bluetooth is enabled on your smartphone. Open the Liene app and follow the on-screen instructions to connect to your Liene ZPP110 printer via Bluetooth 5.0. The connection should be quick and stable.



Image: A smartphone displaying the Liene app connected to the printer via Bluetooth.

OPERATING YOUR PRINTER

Printing a Photo

Once connected, select an image from your phone's gallery or social media within the Liene app. After selecting, the printer will process and print a 2x3 inch photo in approximately 45 seconds. Do not touch the photo paper while it is printing.



Image: The Liene app interface on a smartphone, showing various photo editing options and the print button.



Image: A photo being printed from the Liene ZPP110 printer.

Liene App Functions

The Liene app offers various features to enhance your photos before printing:

- **Filters & Effects:** Apply different filters and effects to your photos.
- **Frames:** Add decorative frames to your prints.
- **Borders:** Choose between bordered, borderless, or no-crop options.
- **Monochrome Printing:** Print photos in black and white for a vintage look.

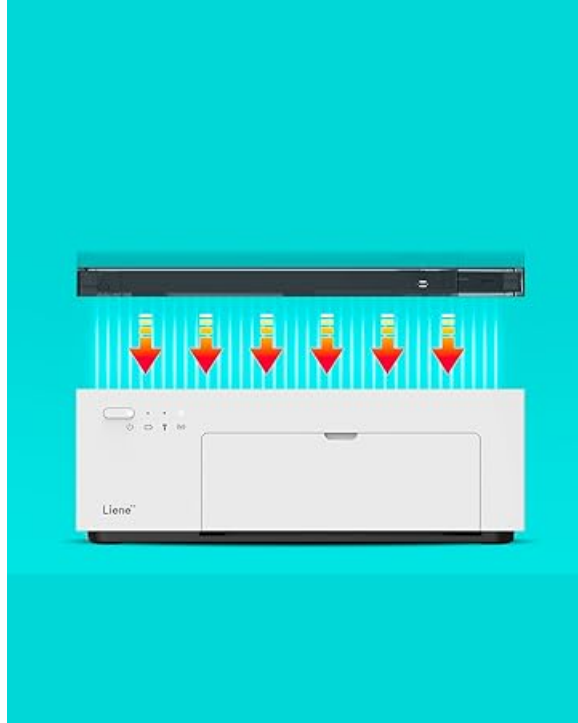


Image: The Liene app displaying various border and cropping options for photos.



Image: Examples of printed Zink photos being used as stickers on a refrigerator and in a scrapbook.

MAINTENANCE

Cleaning the Print Head

If you notice white spots, lines, or other dirt on your printed photos, the print head may need cleaning. The Liene app includes a "Clean Print Head" function. A blue calibration card (SmartSheet) is required for this process. Follow the app's instructions to perform the cleaning.



Image: The Liene app displaying the "Clean Print Head" function and its usage.

SmartSheet Calibration

Each 10-pack of Zink photo paper includes a blue SmartSheet. This sheet is tuned for the specific batch of paper and helps calibrate the printer for optimal print quality. It should be placed at the bottom of the photo paper stack when loading.

TROUBLESHOOTING

Addressing Print Quality Issues

If prints appear streaky, washed out, or have incorrect colors, consider the following:

- Use the "Clean Print Head" function in the Liene app with a blue calibration card.
- Ensure your original photos are of sufficient resolution and not overly bright, as very bright images can appear washed out.
- Verify that the Zink photo paper is loaded correctly with the glossy side up and the blue SmartSheet at the bottom.

Bluetooth Connection Problems

If the printer has difficulty connecting to your phone via Bluetooth:

- Ensure Bluetooth is enabled on your smartphone.
- Restart both your phone and the printer.
- Try reconnecting through the Liene app.

SPECIFICATIONS

Feature	Detail
Model Name	ZPP110
Product Dimensions	4.92"D x 3.35"W x 0.98"H
Item Weight	6.4 ounces (0.4 Pounds)

Connectivity Technology	Bluetooth 5.0
Printing Technology	Zink Technology
Maximum Media Size	2x3 inches
Maximum Color Print Resolution	300 dpi
Compatible Devices	Smartphones (Android, iOS)
Printer Output	Color/Monochrome
Max Input Sheet Capacity	10
Hardware Interface	USB Type C

WARRANTY AND SUPPORT

The Liene ZPP110 Mini Instant Photo Printer comes with a 12-month warranty. For support or warranty claims, please refer to the contact information provided in the product packaging or visit the official Liene website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question