

Segway GT1P

Segway SuperScooter GT1P User Manual

Model: GT1P

1. INTRODUCTION

Welcome to the user manual for your Segway SuperScooter GT1P. This high-performance electric scooter is designed for thrilling rides with a max speed of 37.3 mph and a long range of 43.5 miles. It features an aircraft-grade aluminum build, 11-inch anti-puncture tubeless tires, hydraulic brakes, and a powerful 3000W motor. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your scooter.



Figure 1: The Segway SuperScooter GT1P, a high-performance electric scooter.

2. SETUP

2.1 Unfolding the Scooter

The Segway SuperScooter GT1P features a double safety quick-folding structure for portability. To unfold, ensure the scooter is on a flat surface. Release the folding mechanism and carefully raise the handlebar stem until it locks securely into place. Verify all locking mechanisms are engaged before use.



Figure 2: The scooter's foldable design for easy storage and transport.

2.2 Initial Charging

Before your first ride, fully charge the scooter's integrated 1008Wh high-performance battery. The GT1P supports twin-charging technology, allowing for faster charging times with two chargers (sold separately). Connect the charger to the charging port(s) and a power outlet. The digital display will indicate charging status.



Figure 3: Illustration of the twin-charging ports for efficient battery replenishment.

3. OPERATING INSTRUCTIONS

3.1 Powering On/Off

To power on the scooter, press and hold the power button located on the digital display. To power off, press and hold the power button again until the display turns off.

3.2 Digital Display Overview

The integrated LED digital display provides real-time information about your ride, including speed, battery level, riding mode, and remaining mileage. Familiarize yourself with the display indicators for optimal control.

LED DIGITAL DISPLAY

- POWER PROGRESS BAR
- BOOST PROGRESS BAR
- SPEEDOMETER
- BLUETOOTH
- CRUISE MODE
- REMAINING MILEAGE
- LOCK
- CHARGING INDICATOR
- BATTERY LEVEL



Figure 4: Close-up of the LED digital display showing speed, battery, and mode indicators.

3.3 Speed Modes

The Segway SuperScooter GT1P offers 4 distinct speed modes to suit various riding styles and conditions. These modes can be selected via the controls on the handlebar. Refer to the digital display to confirm the active mode.



Figure 5: The digital display indicating different speed modes available for selection.

3.4 Riding Safely

Always wear a helmet and appropriate safety gear when riding. Observe local traffic laws and regulations. Maintain a safe distance from other vehicles and pedestrians. Avoid riding in adverse weather conditions or on slippery surfaces.

4. MAINTENANCE

4.1 Tire Care

The scooter is equipped with 11-inch anti-puncture tubeless tires. Regularly inspect tires for wear and tear, and ensure they are inflated to the recommended pressure. Proper tire pressure is crucial for ride quality, range, and safety.

4.2 Brake System

The GT1P features front and rear hydraulic disc brakes. Periodically check the brake levers for proper tension and ensure the brake pads are not excessively worn. If braking performance diminishes, have the system inspected by a qualified technician.

4.3 Battery Maintenance

To prolong battery life, avoid fully discharging the battery frequently. Store the scooter in a cool, dry place when not in use, and charge it periodically if stored for extended periods. Use only the official Segway charger or approved accessories.

4.4 General Cleaning

Clean the scooter regularly with a damp cloth. Avoid using high-pressure water jets or harsh chemicals, as these can damage electronic components. Ensure all ports are sealed when cleaning.

5. TROUBLESHOOTING

This section addresses common issues you might encounter with your Segway SuperScooter GT1P. For more detailed troubleshooting steps, please refer to the official User Manual PDF linked in the Warranty & Support section.

5.1 Power Issues

- **Scooter not turning on:** Ensure the battery is charged. Check if the power button is being pressed correctly.
- **Sudden power loss:** This could indicate a low battery. Recharge the scooter. If the issue persists, contact support.

5.2 Performance Issues

- **Reduced speed/range:** Check tire pressure. Ensure you are not consistently riding in high-performance modes, which consume more battery. Riding uphill or with heavy loads can also reduce performance.
- **Braking issues:** Inspect brake pads for wear. Check brake fluid levels if applicable (for hydraulic systems). Do not attempt to repair complex brake issues yourself; seek professional assistance.

6. SPECIFICATIONS

Below are the key technical specifications for the Segway SuperScooter GT1P:

Net Weight: Approx. 103.6 lbs



Figure 6: Dimensions of the Segway SuperScooter GT1P in both unfolded and folded states.



Figure 7: Internal view illustrating the integrated 1008Wh high-performance battery design.

Feature	Detail
Brand	Segway
Model Name	GT1P
Max Speed	37.3 mph
Max Distance Range	43.5 Miles
Motor Power	3000W
Battery Capacity	1008Wh
Tire Type	11 Inches Anti-Puncture Tubeless Tires
Brake Style	Front & Rear Disc Brakes
Suspension Type	Dual Suspension

Feature	Detail
Frame Material	Aluminum
Item Weight	105 Pounds
Weight Limit	150 Kilograms (331 lbs)
Product Dimensions (LxWxH)	58.5"L x 25.8"W x 51.5"H
Special Features	4 Speed Modes, Foldable
Certifications	UL-2272 Certified

7. WARRANTY & SUPPORT





The Segway SuperScooter GT1P comes with a 2-year limited warranty. Please refer to the warranty manual for complete details regarding coverage and terms.

For comprehensive information, detailed troubleshooting, and safety guidelines, please download the official User Manual PDF:

[Download Official User Manual \(PDF\)](#)

For further assistance or technical support, please visit the official Segway website or contact their customer service.

Related Documents - GT1P

	Segway SuperScooter GT Series Product Manual Comprehensive product manual for the Segway SuperScooter GT1 and GT2, detailing diagrams, functions, dashboard indicators, speed modes, specifications, and troubleshooting guidance.
	Segway SuperScooter GT1 & GT2: Product Manual, Specifications, and Features Comprehensive product manual for the Segway SuperScooter GT1 and GT2 electric scooters. Includes detailed specifications, features, controls, dashboard indicators, speed modes, safety information, and troubleshooting.
	Segway GT Series SuperScooter User Manual Comprehensive user manual for the Segway GT1 and GT2 electric scooters, covering diagrams, functions, dashboard indicators, speed modes, specifications, troubleshooting, and certifications.
	Segway GT Electric Scooter User Manual Comprehensive user manual for the Segway GT electric scooter, covering diagrams, functions, specifications, speed modes, maintenance, troubleshooting, and certifications.



[Segway SuperScooter GT3 User Manual](#)

This user manual provides comprehensive instructions and safety guidelines for operating the Segway SuperScooter GT3, covering assembly, activation, riding, features, and app integration.



[Segway SuperScooter GT3 Pro Product Manual](#)

Official product manual for the Segway SuperScooter GT3 Pro, detailing its features, specifications, and operation.