

[Manuals.plus](#) /

> [COSTWAY](#) /

> COSTWAY Mobile 3-in-1 Air Cooler, Humidifier, and Fan (Model ES10122DE-WH-GM) User Manual

COSTWAY ES10122DE-WH-GM

COSTWAY Mobile 3-in-1 Air Cooler, Humidifier, and Fan

MODEL: ES10122DE-WH-GM

1. INTRODUCTION

Thank you for purchasing the COSTWAY Mobile 3-in-1 Air Cooler, Humidifier, and Fan. This appliance is designed to provide a comfortable environment by offering cooling, humidification, and air circulation functions. It features a 10-liter water tank, three operating modes, three fan speeds, a 15-hour timer, and a remote control for convenient operation. Please read this manual thoroughly before use to ensure proper operation, maintenance, and safety.

3 Modi & 3 Windgeschwindigkeiten



Image 1.1: Front view of the COSTWAY Mobile 3-in-1 Air Cooler.

2. SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, always follow these basic safety precautions:

- Read all instructions before using the appliance.
- Ensure the power supply voltage matches the rating label on the appliance.
- Do not immerse the appliance, power cord, or plug in water or other liquids.
- Unplug the appliance from the power outlet when not in use, before cleaning, or before moving.
- Keep the appliance out of reach of children and pets.
- Do not operate the appliance with a damaged cord or plug, or if it malfunctions or has been damaged in any way.
- Place the appliance on a stable, level surface.
- Do not block air inlets or outlets. Maintain at least 20 cm clearance from walls and other objects.
- Do not use the appliance in bathrooms or other humid environments where it could come into contact with water.
- Only use clean tap water in the water tank. Do not add any chemicals or additives other than recommended ice packs.

- Do not attempt to repair or modify the appliance yourself. Contact qualified service personnel.

3. PRODUCT OVERVIEW

3.1 Components

The air cooler consists of the main unit, a water tank, a removable air filter, a honeycomb cooling pad, and a remote control. Two ice packs are also included for enhanced cooling.

3.2 Control Panel and Display

The LED control panel on top of the unit allows you to manage all functions. It includes buttons for Power, Speed, Mode, Timer, Oscillation, and Cooling. The display shows current settings.



Image 3.1: Detailed view of the LED control panel and remote control.

4. SETUP

4.1 Unpacking and Positioning

1. Carefully remove the appliance from its packaging.
2. Place the air cooler on a firm, level surface. Ensure there is at least 20 cm of space around the unit

for proper airflow.

3. The unit is equipped with 360° swivel wheels and integrated handles for easy movement.



Image 4.1: The air cooler features wheels and handles for easy portability.

4.2 Filling the Water Tank

1. Pull out the water tank from the bottom rear of the unit.
2. Fill the tank with clean tap water up to the 'MAX' level indicator. Do not overfill.
3. For enhanced cooling, place the included ice packs in a freezer for a few hours until frozen.
4. Once frozen, place the ice packs into the water tank.
5. Slide the water tank back into the unit until it clicks into place.



10 L Großer Wassertank
Sichtbarer Wasserstand, um das Verbleibende
Wasser in Echtzeit anzuzeigen



So kühlen Sie sich im heißen Sommer schnell ab



**Füllen Sie Wasser in
den Wassertank**



**Legen Sie 2 Eisbeutel für ein paar
Stunden in den Kühlschrank**



**Geben Sie Eisbeutel in den
Wassertank und schalten
Sie den Kühlmodus ein**

Image 4.2: Steps for filling the water tank and adding ice packs.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

- Plug the power cord into a suitable electrical outlet.
- Press the **Power** button on the control panel or remote control to turn the unit on or off.

5.2 Fan Speed Adjustment

- Press the **Speed** button repeatedly to cycle through the three fan speeds: Low, Medium, and High.

5.3 Mode Selection

Press the **Mode** button to select one of the following operating modes:

- **Normal Mode:** Provides a constant airflow at the selected speed.
- **Natural Mode:** Simulates natural breeze by varying fan speed.
- **Sleep Mode:** Operates at a lower, quieter speed, gradually decreasing fan speed for undisturbed sleep.

Genießen Sie Ihren Süßen Traum

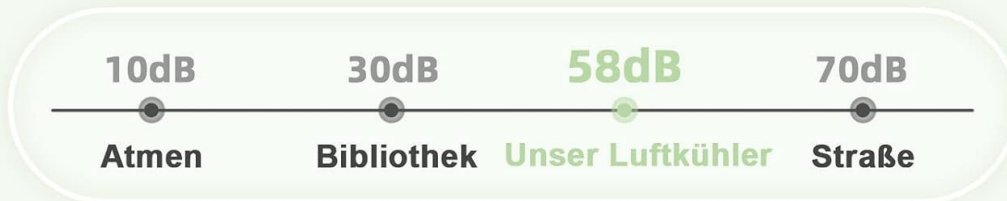


Image 5.1: The air cooler offers Normal, Natural, and Sleep modes with adjustable fan speeds.

5.4 Oscillation Function

- Press the **Oscillation** button to activate the automatic horizontal swing of the external louvers (120° up and down).
- The internal louvers can be manually adjusted 63° left and right to direct airflow.



Image 5.2: The air cooler features wide-angle oscillation for even air distribution.

5.5 Timer Setting

- Press the **Timer** button repeatedly to set the desired operating time (from 1 to 15 hours). The unit will automatically turn off after the set time.

5.6 Cooling/Humidification Function

- Ensure the water tank is filled and ice packs are inserted (if desired).
- Press the **Cool** button to activate the cooling and humidification function. The unit will draw water from the tank to cool and humidify the air.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your air cooler.

6.1 Cleaning the Air Filter and Honeycomb Cooling Pad

1. Unplug the appliance before cleaning.
2. Remove the rear filter screen and the honeycomb cooling pad.
3. Clean the air filter and cooling pad with a soft brush and mild detergent, then rinse thoroughly with

clean water.

4. Allow them to air dry completely before reinserting them into the unit.



Image 6.1: The air cooler's filtration system, including the removable dust filter and honeycomb cooling pad.

6.2 Cleaning the Water Tank

1. Unplug the appliance.
2. Pull out the water tank and empty any remaining water.
3. Clean the tank with a soft cloth and mild detergent. Rinse thoroughly to remove any residue.
4. For thorough cleaning, the drain plug at the bottom of the unit can be used to empty the tank.
5. Allow the tank to dry completely before reinserting.

6.3 Storage

If the appliance will not be used for an extended period, empty and clean the water tank and filter. Store the unit in a cool, dry place, preferably in its original packaging.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No power	Power cord not plugged in; no power at outlet; unit turned off.	Check power cord connection; check circuit breaker; press Power button.
Weak airflow	Air filter or cooling pad clogged; fan speed too low.	Clean air filter and cooling pad; increase fan speed.
No cooling effect	Water tank empty; cooling function not activated; ice packs not used.	Fill water tank; press Cool button; add frozen ice packs.
Water leakage	Water tank overfilled; tank not properly seated; drain plug loose.	Do not overfill; ensure tank is correctly inserted; check drain plug.
Unusual noise	Unit not on a level surface; foreign object in fan.	Place on a level surface; unplug and check for obstructions.

If the problem persists after trying these solutions, please contact customer support.

8. SPECIFICATIONS

Feature	Specification
Brand	COSTWAY
Model Name	ES10122DE-WH-GM
Functions	Air Cooler, Humidifier, Fan
Material	ABS Terpolymer
Color	White
Mounting Type	Freestanding
Control Type	Remote Control, LED Panel
Water Tank Capacity	10 Liters
Product Weight	7.7 Kilograms
Product Dimensions (L x W x H)	39 x 33 x 74 cm
Wattage	78 W
Voltage	220-240 V, 50/60 Hz
Noise Level	Less than 58 Decibels
Number of Speeds	3
Timer	0-15 Hours

Feature	Specification
Air Speed	1.8-5 m/s
Included Components	2 x Ice Packs



Image 8.1: Dimensions and technical specifications of the air cooler.

9. WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty. For detailed warranty information, please refer to the warranty card included with your purchase or contact COSTWAY customer service. If you encounter any issues or have questions regarding the operation or maintenance of your air cooler, please reach out to our support team for assistance.

Contact information for support can typically be found on the product packaging, the official COSTWAY website, or your purchase receipt.