

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [My Arcade](#) /

> [My Arcade GameStation Wireless HD \(DGUNL-4144\) Instruction Manual](#)

My Arcade DGUNL-4144

My Arcade GameStation Wireless HD

MODEL: DGUNL-4144 INSTRUCTION MANUAL

Introduction

Welcome to the My Arcade GameStation Wireless HD instruction manual. This guide provides essential information for setting up, operating, maintaining, and troubleshooting your new retro gaming console. The GameStation Wireless HD offers a collection of over 250 games, including classic titles from Data East and Jaleco, delivered in high-definition via HDMI. Enjoy hours of entertainment with the included wireless controllers.

What's Included



Image: The retail packaging for the My Arcade GameStation Wireless HD, showing the console and two controllers.

- GameStation Console
- 2 Wireless Controllers
- HD Cable (HDMI)
- USB Power Cable
- User Guide (this manual)

Setup Instructions

1. Powering the Console

Connect the included USB power cable to the console's DC 5V port. Plug the other end into a compatible USB power source (e.g., a USB wall adapter, not included, or a USB port on your TV).



Image: Rear view of the GameStation console, highlighting the DC 5V (USB power) and AV OUT ports, and the ON/OFF switch.

2. Connecting to Your TV

Use the provided HD (HDMI) cable to connect the console to an available HDMI input on your television. Select the corresponding HDMI input on your TV using your TV's remote control.



Image: The GameStation console and two wireless controllers positioned in front of a television displaying a game, illustrating the connection.

3. Controller Setup

Each wireless controller requires 3 AAA batteries (not included). Open the battery compartment on the back of each controller and insert the batteries, ensuring correct polarity. The controllers will automatically pair with the console when powered on.



Image: The GameStation console and its two wireless controllers, ready for use.

Operating Instructions

1. Turning On/Off

Locate the ON/OFF switch on the back of the console. Flip it to the "ON" position to power on the system. To turn off, flip the switch back to "OFF".

2. Navigating the Menu

Use the directional pad (D-pad) on your wireless controller to navigate through the game selection menu. The "A" button typically selects a game, and the "B" button usually returns to the previous menu or exits a game.

3. Playing Games

Once a game is selected, it will load automatically. Refer to the on-screen instructions or in-game tutorials for specific controls. The "START" button typically pauses the game or begins gameplay, while "SELECT" may offer in-game options or reset the game.

Your browser does not support the video tag.

Video: An overview of the My Arcade GameStation Wireless HD, demonstrating game selection and gameplay for various

4. Game Library Highlights

The console includes 15 officially licensed Data East and Jaleco titles, alongside over 250 retro-inspired bonus games. Some of the featured titles include:

- **Data East Titles:** Bad Dudes, Caveman Ninja, BurgerTime, Karate Champ, Heavy Barrel, BreakThru, Side Pocket, B-Wings.
- **Jaleco Titles:** GOAL!, BASES LOADED 1, 2, 3 and 4, RACKET ATTACK, HOOPS.

Maintenance

To ensure the longevity of your GameStation Wireless HD, keep the console and controllers clean and dry. Use a soft, dry cloth to wipe down surfaces. Avoid exposing the device to extreme temperatures, direct sunlight, or moisture. Remove batteries from controllers if storing for extended periods to prevent leakage.

Troubleshooting

- **No Power:** Ensure the USB power cable is securely connected to both the console and a working power source. Check that the ON/OFF switch on the console is in the "ON" position.
- **No Picture/Sound on TV:** Verify the HDMI cable is firmly connected to both the console and your TV. Confirm your TV is set to the correct HDMI input channel.
- **Controllers Not Responding:** Check that fresh AAA batteries are correctly installed in both controllers. Ensure the console is powered on. If issues persist, try re-pairing by turning the console off and on, then pressing any button on the controllers.
- **Game Freezes/Glitches:** Turn the console off, wait a few seconds, then turn it back on. This often resolves minor software issues.
- **Poor Game Performance:** Ensure your TV's display settings are optimized for gaming. While the console outputs HD, game performance is dependent on the original game's design.

Specifications

Model Number	DGUNL-4144
Brand	My Arcade
Platform	TV Plug & Play
Number of Games	Over 250 (including 15 licensed Data East & Jaleco titles)
Controller Type	2.4 GHz Wireless Controllers (Button Control)
Controller Power Source	3 AAA batteries per controller (not included)
Console Power Source	USB (DC 5V)
Hardware Interface	HDMI, USB
Color	Black
Material Type	Plastic

Item Dimensions (L x W x H)	1.5" x 6" x 5" (Console)
Item Weight	0.64 Kilograms
Age Range Description	Adult (Not suitable for children under 3 years old)

Warranty Information

The My Arcade GameStation Wireless HD comes with a manufacturer's warranty of 120 days from the date of purchase. Please retain your proof of purchase for any warranty claims. For detailed warranty terms and conditions, refer to the official My Arcade website or contact customer support.

Customer Support

For further assistance, technical support, or inquiries regarding your My Arcade GameStation Wireless HD, please visit the official My Arcade website or contact their customer service department. Contact information can typically be found on the product packaging or the manufacturer's website.