

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Bitty Boomers](#) /

› [Bitty Boomers Star Wars: Darth Vader \(Holiday\) Mini Bluetooth Speaker Instruction Manual](#)

Bitty Boomers BITTYHOLVADERCC

Bitty Boomers Star Wars: Darth Vader (Holiday) Mini Bluetooth Speaker Instruction Manual

Model: BITTYHOLVADERCC | Brand: Bitty Boomers

PRODUCT OVERVIEW

The Bitty Boomers Star Wars: Darth Vader (Holiday) Mini Bluetooth Speaker is a compact, ultra-portable audio device designed for wireless connectivity. It allows users to stream audio from any Bluetooth-enabled device, offering a blend of portability and sound output.

Key Features

- Ultra-Portable 2" Tall Speaker
- Bluetooth 5.0 Technology for Wireless Connectivity
- 30Ft. Wireless Range
- Over 4 Hours of Music Playtime on a Single Charge
- Rechargeable via Micro USB (Cable Included)
- Includes a Strap for Attachment to Backpacks or Bags

PRODUCT IMAGES



Front view of the Bitty Boomers Darth Vader speaker, holding a red and white candy cane.



Back view of the Bitty Boomers Darth Vader speaker, showing the micro USB charging port.



Bitty Boomers Darth Vader speaker hanging as an ornament on a Christmas tree.



Bitty Boomers Darth Vader speaker with dimensions: 2 inches deep, 3 inches wide, 5 inches high.

SETUP GUIDE

1. Charging the Speaker

Before first use, fully charge your Bitty Boomers speaker. Connect the included Micro USB cable to the charging port on the back of the speaker and the other end to a USB power source (e.g., computer, wall adapter). The LED indicator will show charging status and turn off when fully charged. A full charge takes approximately 4 hours.

2. Powering On/Off

To power on the speaker, press and hold the power button located on the bottom of the unit until you hear an audible cue and the LED indicator lights up. To power off, press and hold the power button again until the LED indicator turns off.

3. Bluetooth Pairing

1. Ensure the speaker is charged and powered on.
2. On your Bluetooth-enabled device (smartphone, tablet, laptop), go to the Bluetooth settings.
3. Search for available devices. The speaker will appear as "Bitty Boomers".

4. Select "Bitty Boomers" to initiate pairing. Once connected, you will hear a confirmation tone.
5. The speaker is now ready to play audio from your device.

OPERATION

Playing Audio

Once paired, simply start playing music or any audio from your connected device. The audio will stream wirelessly to your Bitty Boomers speaker. Volume control is managed directly from your connected device.

Selfie Remote Function

The speaker can also function as a remote shutter for your phone's camera. After pairing, open your phone's camera app. Press the power button on the Bitty Boomers speaker to remotely trigger the camera shutter.

MAINTENANCE

Cleaning

To clean your speaker, gently wipe the exterior with a soft, dry cloth. Do not use harsh chemicals, cleaning solvents, or abrasive cleaners, as these may damage the finish or internal components. Avoid getting moisture into any openings.

Battery Care

To prolong battery life, avoid fully discharging the speaker frequently. Recharge the battery when the low battery indicator appears. If storing the speaker for an extended period, charge it to about 50% every few months to prevent deep discharge.

Storage

Store the speaker in a cool, dry place away from direct sunlight, extreme temperatures, and humidity. Keep it away from dust and dirt to maintain optimal performance.

TROUBLESHOOTING

Problem	Solution
Speaker does not power on.	Ensure the speaker is fully charged. Connect it to a power source using the Micro USB cable and allow it to charge for at least 30 minutes before attempting to power on again.
Cannot pair with Bluetooth device.	Ensure the speaker is in pairing mode (LED indicator flashing). Turn off and on your device's Bluetooth. Move the speaker closer to your device. Ensure no other devices are currently connected to the speaker.
No sound or low volume.	Check the volume level on both the speaker and your connected device. Ensure the speaker is properly paired. Try playing audio from a different application or device.
Poor audio quality.	Move the speaker closer to your connected device to reduce interference. Ensure there are no obstructions between the speaker and the device. Check for other active wireless devices that might cause interference.

TECHNICAL SPECIFICATIONS

Feature	Detail
Model Name	Bitty Boomers
Item Model Number	BITTYHOLVADERCC
Connectivity Technology	Bluetooth, USB
Wireless Communication Technology	Bluetooth 5.0
Bluetooth Range	30 Feet (10 Meters)
Speaker Type	Tweeter
Speaker Size	2 Inches
Speaker Maximum Output Power	3 Watts
Audio Output Mode	Stereo
Power Source	Battery Powered
Battery Life	Over 4 Hours of Music Time
Charging Time	4 Hours
Product Dimensions	2"D x 3"W x 5"H
Item Weight	3 Ounces
Material	Plastic
Is Waterproof	FALSE (Not Water Resistant)
Control Method	App

PACKAGE CONTENTS

- 1 x Bitty Boomers Star Wars: Darth Vader (Holiday) Mini Bluetooth Speaker
- 1 x Micro USB Cable
- 1 x Lanyard

WARRANTY INFORMATION

This Bitty Boomers speaker comes with a limited warranty. For specific details regarding coverage, duration, and claims process, please refer to the warranty card included in your product packaging or visit the official Bitty Boomers website.

CUSTOMER SUPPORT

For further assistance, technical support, or inquiries regarding your Bitty Boomers Star Wars: Darth Vader (Holiday) Mini Bluetooth Speaker, please visit the official Bitty Boomers website or contact their customer service department. Contact information can typically be found on the product packaging or the brand's official online presence.

