

RHM K888

RHM K888 Karaoke Machine User Manual

Model: K888

1. INTRODUCTION

Thank you for choosing the RHM K888 Karaoke Machine. This manual provides essential information for the safe and efficient operation of your device. Please read it thoroughly before use and retain it for future reference.

2. PACKAGE CONTENTS

Ensure all items listed below are present in your package:

- RHM K888 Karaoke Machine
- 2 Wireless Microphones
- Remote Control
- Power Adapter
- 3.5mm Audio Cable
- User Manual

3. PRODUCT FEATURES

- **Powerful and Clear Sound:** Equipped with 2 x 15W tweeters and a 40W subwoofer for a total of 70W output.
- **Wireless Microphones:** Two high-quality wireless microphones with 360° sound pickup and noise filtering.
- **Adjustable Sound Controls:** Remote control allows adjustment of Echo (16 levels), Treble (5 levels), Bass (5 levels), Mic Volume (16 levels), and Speaker Volume (25 levels).
- **Multiple Sound Modes:** Includes Pop, KTV, Accompaniment, and Original modes.
- **Long Playtime:** Built-in 2 x 4000mAh rechargeable batteries provide up to 8 hours of playback.
- **Versatile Connectivity:** Supports Bluetooth 5.0, AUX-IN, and USB playback.
- **Portable Design:** Compact size and sturdy handle for easy transport.

4. SETUP

4.1 Initial Charging

Before first use, fully charge the karaoke machine. Connect the power adapter to the machine's charging port and plug it into a power outlet. A full charge takes approximately 4 hours.

UP TO 8 HOURS PLAYTIME
Built-in 2*4400mAh rechargeable battery

4 hours
Charging Time

Image: The RHM K888 Karaoke Machine highlighting its 8-hour playtime and 4-hour charging duration, suitable for outdoor use.

4.2 Microphone Battery Installation

The wireless microphones require 2 AA batteries each (not specified if included, assume user provides or they are pre-installed rechargeable). Open the battery compartment at the bottom of each microphone and insert the batteries, ensuring correct polarity.

DOUBLE SINGING, DOUBLE HAPPINESS

Singing whenever you want,
no longer have to wait in pain for charging.



Image: Two RHM K888 wireless microphones, illustrating the 2AA battery power source and up to 20 hours of working time.

4.3 Powering On/Off

Press and hold the power button on the karaoke machine to turn it on or off. The microphones will automatically pair with the speaker when powered on.

5. OPERATING INSTRUCTIONS

5.1 Connecting via Bluetooth

1. Turn on the RHM K888 Karaoke Machine. It will automatically enter Bluetooth pairing mode.
2. On your device (smartphone, tablet, laptop), enable Bluetooth and search for available devices.
3. Select "RHM K888" from the list to pair. A confirmation sound will indicate a successful connection.
4. You can now play audio from your device through the karaoke machine.

5.2 Connecting via AUX-IN

1. Connect one end of the 3.5mm audio cable to the AUX-IN port on the karaoke machine.
2. Connect the other end of the audio cable to the audio output port of your external device (e.g., TV, MP3 player).
3. The machine will automatically switch to AUX mode, or you may need to select it using the remote control.

5.3 USB Playback

1. Insert a USB flash drive containing audio files into the USB port on the karaoke machine.
2. The machine will automatically detect the USB drive and begin playing audio files.
3. Use the remote control to navigate tracks and adjust playback.

5.4 Microphone Usage

Once the microphones are powered on and paired, they are ready for use. Hold the microphone approximately 0.9 meters (3 feet) from your mouth for optimal sound quality. The internal filter helps reduce breathing noise.

5.5 Sound Adjustments (Remote Control)

Use the provided remote control to fine-tune your audio experience:

SUPPORT ECHO, TREBLE, BASS & VOLUME ADJUSTMENT



Bass
Adjustment
5 Levels



Treble
Adjustment
5 Levels



Mics Volume
Adjustment
16 Levels



Echo
Adjustment
16 Levels



Speaker Volume
Adjustment
25 Levels



Image: The RHM K888 remote control, illustrating buttons for Bass, Treble, Mic Volume, Echo, and Speaker Volume adjustments, along with sound modes.

- **Echo:** Adjust the echo effect on your voice (16 levels).
- **Treble:** Adjust the high-frequency sound (5 levels).
- **Bass:** Adjust the low-frequency sound (5 levels).
- **Mic Volume:** Control the volume of the microphones (16 levels).
- **Speaker Volume:** Control the overall speaker volume (25 levels).

5.6 Sound Effects/Modes

The remote control also allows you to select different sound modes:



Image: People enjoying karaoke with the RHM K888, demonstrating the four available sound effects: reduce original song sound, enhance original song sound, original song sound, and make original song quieter.

- **Pop Mode:** Optimized for pop music.
- **KTV Mode:** Standard karaoke room experience.
- **Accompaniment Mode:** Reduces lead vocals in a song, ideal for singing along.
- **Original Mode:** Plays the song with original vocals.

6. MAINTENANCE

6.1 Cleaning

Wipe the surface of the karaoke machine and microphones with a soft, dry cloth. Do not use abrasive cleaners or solvents. Avoid exposing the device to water or excessive moisture.

6.2 Storage

When not in use for extended periods, store the machine in a cool, dry place away from direct sunlight and extreme temperatures. Ensure the device is fully charged before storing to prolong battery life.

7. TROUBLESHOOTING

If you encounter issues with your RHM K888 Karaoke Machine, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No power	Battery drained; Power adapter not connected	Charge the machine fully; Ensure power adapter is securely connected.
No sound from speaker	Volume too low; Incorrect input mode; Device not connected	Increase speaker volume; Select correct input mode (Bluetooth, AUX, USB); Reconnect your device.
Microphone not working	Microphone off; Batteries low/incorrectly inserted; Out of range	Turn on microphone; Replace/reinsert batteries correctly; Move closer to the speaker (within 3 meters, ideally 0.9 meters).
Bluetooth connection unstable	Interference; Device too far; Other Bluetooth devices nearby	Move device closer to the machine; Turn off other Bluetooth devices; Re-pair the device.

8. SPECIFICATIONS

70W POWERFUL & CLEAR SOUND



2.25"
Treble X 2



5"
Subwoofer X 1



Image: An exploded view of the RHM K888 Karaoke Machine, detailing its internal components including two 2.25-inch tweeters and one 5-inch subwoofer, contributing to its 70W powerful and clear sound.

- **Model Name:** K888
- **Brand:** RHM
- **Dimensions (L x W x H):** 37.8 x 15 x 22.6 cm (14.9 x 5.9 x 8.9 inches)
- **Weight:** 5.9 kg (13.1 lbs)
- **Speaker Output:** 2 x 15W Tweeters, 1 x 40W Subwoofer (Total 70W)
- **Battery:** 2 x 4000mAh Lithium-ion (Karaoke Machine), 2 x AA (Microphones)
- **Playtime:** Up to 8 hours
- **Charging Time:** Approximately 4 hours
- **Connectivity:** Bluetooth 5.0, AUX (3.5mm Jack), USB
- **Special Feature:** Rechargeable

PORTABLE & EASY TO CARRY

Enjoy music anywhere you go



13.1 LB



Image: The RHM K888 Karaoke Machine displayed with its dimensions (14.9in x 5.9in x 8.9in) and weight (13.1 LB), emphasizing its portable and easy-to-carry design for enjoying music anywhere.

9. WARRANTY AND SUPPORT

RHM products are designed for reliability and performance. For warranty information or technical support, please refer to the documentation included with your purchase or contact RHM customer service directly. Keep your proof of purchase for warranty claims.

© 2023 RHM. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question