

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [FamBrow](#) /

› [FamBrow 8-Inch FHD Digital Photo Frame P800 Instruction Manual](#)

FamBrow P800

FamBrow 8-Inch FHD Digital Photo Frame P800 Instruction Manual

Model: P800

1. INTRODUCTION

Welcome to your new FamBrow Digital Photo Frame. This manual provides detailed instructions for setting up, operating, and maintaining your device. Please read it thoroughly before use to ensure proper functionality and longevity of your product.

2. SAFETY INFORMATION

- Keep the device away from water, moisture, and high humidity environments.
- Use only the provided power adapter. Using an unauthorized adapter may damage the device and void the warranty.
- Do not attempt to disassemble or repair the device yourself. Refer all servicing to qualified personnel.
- Avoid exposing the device to direct sunlight or extreme temperatures.
- Place the device on a stable, flat surface to prevent accidental falls.

3. PACKAGE CONTENTS

Please verify that all the following items are included in your package:

- FamBrow Digital Photo Frame (x1)
- 32 GB microSD card (x1)
- Remote control (x1)
- Instruction manual (x1)
- Dedicated stand (x1)
- Power adapter (x1)

4. PRODUCT OVERVIEW

Familiarize yourself with the physical components and interfaces of your digital photo frame.



Figure 4.1: Front view of the FamBrow Digital Photo Frame with its remote control, displaying a family photo.

4.1 Front Panel

- **8-Inch FHD IPS Screen:** High-resolution display for photos and videos.
- **Remote Control Sensor:** Receives signals from the remote control.

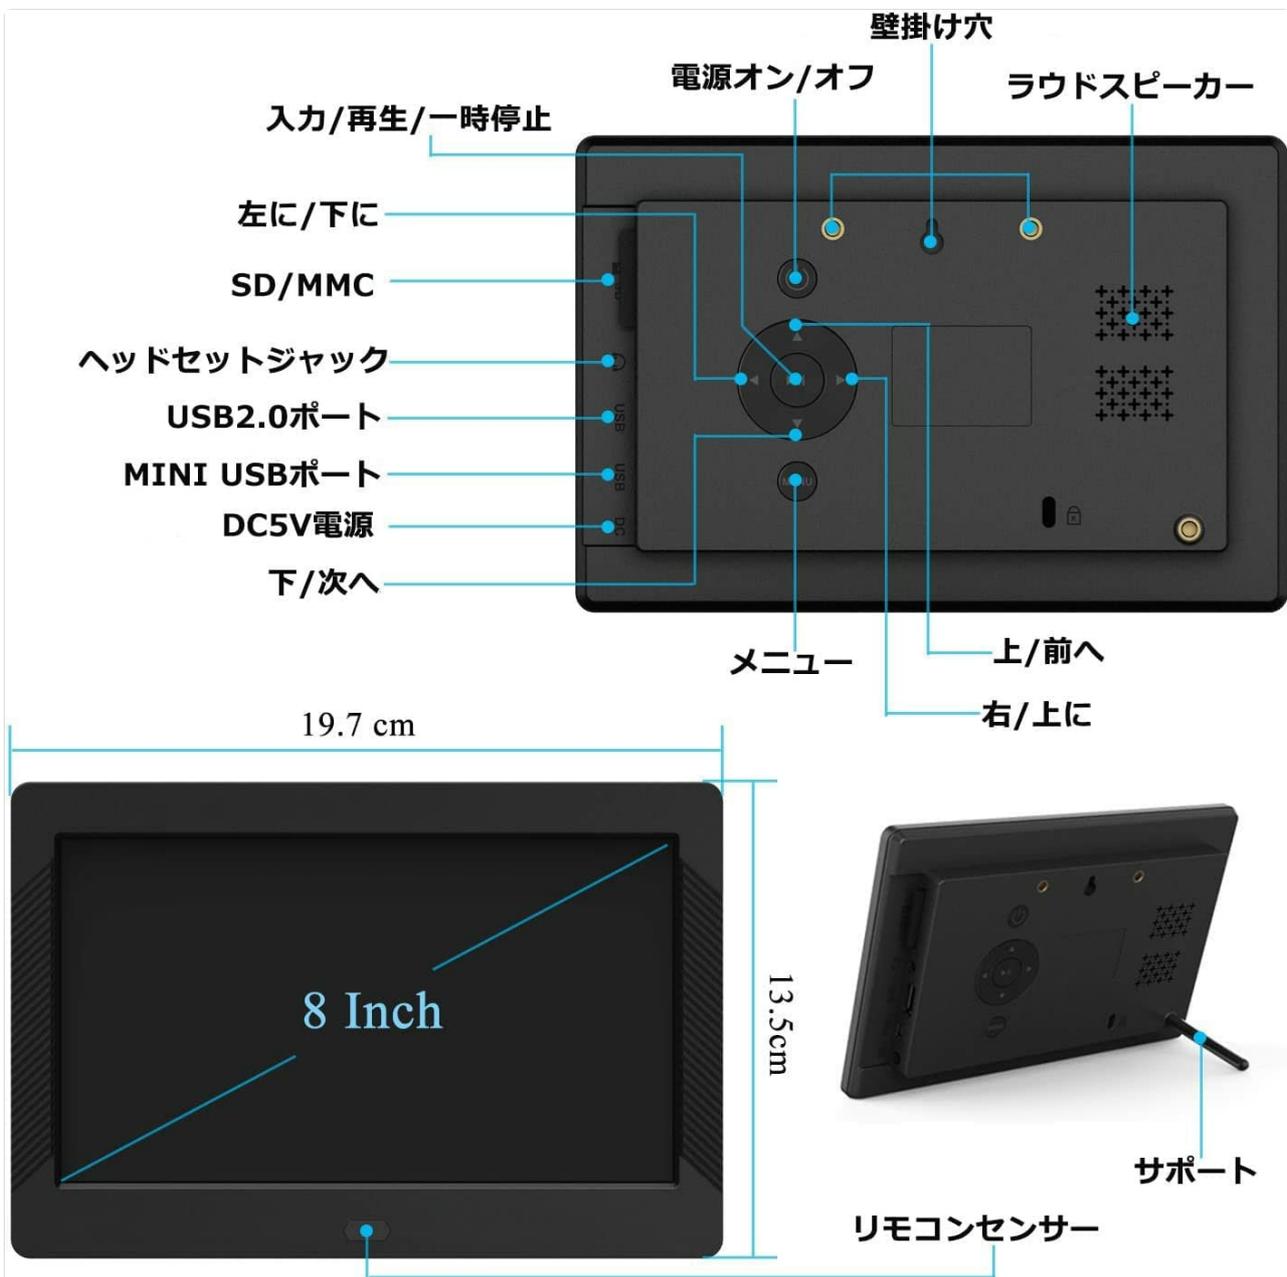


Figure 4.2: Rear view of the FamBrow Digital Photo Frame, highlighting ports and buttons such as power, USB, SD card slot, and speaker.

4.2 Rear Panel and Ports

- **Power Button:** Turns the device on or off.
- **DC 5V Power Input:** Connect the power adapter here.
- **USB 2.0 Port:** For connecting USB flash drives.
- **Mini USB Port:** For connecting to a computer (if applicable for data transfer).
- **SD/MMC Card Slot:** Insert SD or MMC memory cards.
- **Headset Jack:** For connecting headphones or external speakers.
- **Wall Mount Hole:** For mounting the frame on a wall.
- **Loudspeaker:** Built-in speaker for audio playback.

リモコン付き、遠隔操作可能



Figure 4.3: A user operating the digital photo frame remotely using the included remote control.

4.3 Remote Control

The included remote control allows for convenient operation of all frame functions from a distance. Buttons include Power, Menu, Navigation (Up, Down, Left, Right), OK, Play/Pause, Volume, and other function-specific keys.

5. SETUP

1. **Attach the Stand:** Insert the dedicated stand into the slot on the back of the frame. Ensure it is securely attached for stable placement.
2. **Power Connection:** Connect the power adapter to the DC 5V input port on the frame. Then, plug the power adapter into a standard electrical outlet.
3. **Insert SD Card:** Insert the provided 32GB microSD card (or your own compatible SD/MMC card) into the SD card slot on the side/rear panel. Ensure it is inserted correctly until it clicks into place.
4. **Power On:** Press the Power button located on the back of the frame or on the remote control to turn on the device. The frame will boot up and display the main menu or start a slideshow automatically.

6. OPERATING INSTRUCTIONS

6.1 Basic Navigation

Use the navigation buttons (Up, Down, Left, Right) on the remote control or the rear panel to move through menus and select options. Press the 'OK' button to confirm a selection. Press the 'Menu' button to access the main settings.



Figure 6.1: Illustrates the 178-degree IPS wide-angle viewing capability and different playback modes including photo, video, music, and photo with music.

6.2 Photo Playback

Once an SD card or USB drive with photos is inserted, the frame will typically start a slideshow automatically. You can customize the slideshow settings:

- **Slideshow Settings:** Access the settings menu to adjust slideshow speed, transition effects, and repeat mode.
- **Image Rotation:** The built-in gravity sensor automatically rotates photos for correct orientation (horizontal or vertical) when the frame's position is changed.

6.3 Video Playback

Select the video playback option from the main menu to view videos stored on the inserted SD card or USB memory.

- **Supported Formats:** Refer to the Specifications section for a list of supported video formats.
- **Volume Control:** Use the volume buttons on the remote control to adjust the audio level.

6.4 Music Playback

Select the music playback option from the main menu to listen to audio files stored on your media.

- **Supported Formats:** Refer to the Specifications section for a list of supported audio formats.



Figure 6.2: Displays the digital photo frame showing clock, calendar, and alarm functions.

6.5 Clock, Calendar, and Alarm Functions

The frame includes integrated clock, calendar, and alarm features for added utility.

- **Setting Time/Date:** Access the system settings menu to set the current time and date.
- **Alarm Setup:** Configure alarms through the alarm settings menu. You can set multiple alarms with custom

sounds.

6.6 USB Memory Expansion

Connect a USB flash drive to the USB 2.0 port on the rear panel to access additional media files. The frame will recognize the USB drive and allow you to browse its contents.



Figure 6.3: An overview of the digital photo frame's features, including remote operation, clock/calendar, 32GB SD card support, auto ON/OFF, alarm, repeat mode, slideshow effects, 4 playback modes, 9 slideshow speeds, and 15-level brightness adjustment.

6.7 Brightness Adjustment

The screen brightness can be adjusted in 15 levels to suit your viewing environment. Access this setting through the main menu or dedicated brightness buttons on the remote control.

7. MAINTENANCE

- **Cleaning the Screen:** Use a soft, dry, lint-free cloth to gently wipe the screen. Do not use liquid cleaners, aerosols, or abrasive materials, as they may damage the screen surface.
- **Cleaning the Frame:** Wipe the frame's exterior with a soft, slightly damp cloth. Ensure no moisture enters

the ports or openings.

- **Storage:** When not in use for extended periods, disconnect the power adapter and store the frame in a cool, dry place, away from direct sunlight and dust.

8. TROUBLESHOOTING

8.1 No Power

- Ensure the power adapter is securely connected to both the frame's DC 5V input and a functional power outlet.
- Try plugging another device into the same outlet to confirm it is working.
- Press the power button firmly on the frame or remote control.

8.2 No Image Display

- Check if the SD card or USB drive is inserted correctly and fully.
- Ensure that the media files (photos, videos) on the card/drive are in supported formats (refer to Specifications).
- Verify that the brightness setting is not set to its lowest level.

8.3 Remote Control Not Responding

- Check the battery in the remote control and replace it if necessary.
- Ensure there are no obstructions between the remote control and the frame's remote sensor.
- Point the remote directly at the frame's sensor.

8.4 Screen Freezes or Malfunctions

- Disconnect the power adapter from the frame, wait for approximately 10 seconds, then reconnect it to perform a soft reset.
- If the issue persists, try removing the SD card/USB drive and restarting the frame.

9. SPECIFICATIONS

Feature	Detail
Brand	FamBrow
Model	P800
Screen Size	8 Inches
Display Type	LCD
Resolution	1920 x 1080 (FHD)
Image Aspect Ratio	16:9
Viewing Angle	178° (IPS Wide Angle)

Feature	Detail
Internal Memory	None (uses external SD card/USB)
Included SD Card	32 GB microSD card
Compatible Devices	Smartphone (for media transfer to card/USB)
Connectivity	USB, SD Card
Power Source	AC
Product Dimensions	19.2 x 10.8 x 2.51 cm
Item Weight	690 g
Special Features	Remote control, Automatic screen rotation, 15-level brightness adjustment, Photo/Video/Music playback, Clock, Calendar, Alarm functions.

10. WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the contact details provided with your purchase documentation or visit the official FamBrow website. Keep your proof of purchase for warranty claims.