

[Manuals.plus](#) /

› [Cosmopolitan](#) /

› Cosmopolitan Scalp Massager Instruction Manual

Cosmopolitan 526016

Cosmopolitan Scalp Massager Instruction Manual

Model: 526016

INTRODUCTION

Thank you for choosing the Cosmopolitan Scalp Massager. This versatile tool is designed to refresh and detangle your hair while providing a soothing scalp massage. Suitable for all hair types, whether thick or fine, curly, wavy, or straight, this massager can be used wet or dry. Its ergonomic design ensures comfortable handling, making it an ideal addition to your hair care routine.



Image: The Cosmopolitan Scalp Massager in its elegant gold finish, showcasing its compact and ergonomic design.

SETUP

The Cosmopolitan Scalp Massager requires no assembly or batteries. It is ready for use directly out of the packaging.

1. **Unpack:** Carefully remove the scalp massager from its packaging.
2. **Inspect:** Before first use, visually inspect the massager for any signs of damage. If damaged, do not use and contact customer support.
3. **Rinse:** For hygiene, it is recommended to rinse the massager under warm water before its initial use.

OPERATING INSTRUCTIONS

The Cosmopolitan Scalp Massager is designed for both wet and dry use, offering a versatile experience for scalp care and hair cleansing.

Wet Use (During Shampooing or Conditioning)



Wet & Dry Use

For a cleaner and
healthier scalp

Image: A hand holding the gold scalp massager, gently massaging a scalp covered in shampoo lather, illustrating its wet use capability.

1. **Apply Product:** Apply your preferred shampoo, conditioner, or hair mask to your wet hair and scalp.
2. **Hold:** Grip the massager by its ergonomic handle, ensuring a comfortable and secure hold.
3. **Massage Technique:** Gently press the silicone bristles onto your scalp. Move the massager in small, circular motions or short zig-zag patterns across your scalp. Avoid aggressive scrubbing or large circular motions, especially if you have long hair, to prevent tangling.
4. **Coverage:** Work your way across the entire scalp, from the hairline to the nape of your neck, ensuring all areas are massaged.
5. **Rinse:** After massaging, rinse your hair and the massager thoroughly.

Dry Use (Scalp Stimulation)

Ergonomic Design

Fits right in the palm
of your hand



Image: A close-up of a hand holding the gold scalp massager, demonstrating its ergonomic fit in the palm while resting on dry hair.

- Hold the massager comfortably in your hand.
- Gently press the bristles onto your dry scalp and move in small, controlled motions to stimulate the scalp and relieve tension.
- This can be done at any time for relaxation or to invigorate the scalp.

For All Hair Types

Lightweight & gentle



Image: A diverse group of four individuals with varying hair textures and skin tones, illustrating that the scalp massager is suitable for all hair types.

MAINTENANCE

To ensure the longevity and hygiene of your Cosmopolitan Scalp Massager, follow these simple maintenance steps:

- **Cleaning:** After each wet use, rinse the massager thoroughly under running water to remove any shampoo, conditioner, or hair residue.
- **Drying:** Shake off excess water and allow the massager to air dry completely in a well-ventilated area.
- **Storage:** Store the massager in a clean, dry place when not in use.
- **Deep Cleaning:** Periodically, you may clean the massager with a mild soap solution and rinse thoroughly.

TROUBLESHOOTING

The Cosmopolitan Scalp Massager is a simple, non-electronic device, so troubleshooting is minimal.

- **Hair Tangles:** If hair tangles during use, ensure you are using small, controlled motions rather than

large circular scrubbing. This is especially important for longer or curly hair.

- **Discomfort:** If you experience discomfort, reduce the pressure applied. The bristles are designed to be gentle yet effective.
- **Product Residue:** If product residue builds up on the bristles, perform a deep clean as described in the Maintenance section.

Safety Warnings

Please read and adhere to the following safety warnings to prevent injury or damage to the product:

- Avoid using on broken skin or open wounds.
- Do not use in a manner that could cause the massager to slip or fall, potentially causing injury.
- Do not immerse in water for extended periods. While waterproof for shower use, prolonged submersion is not recommended.

Specifications

Brand	Cosmopolitan
Model Number	526016
Dimensions (L x W x H)	7.5 x 7.5 x 7 cm (2.95 x 2.95 x 2.76 inches)
Weight	60 grams (2.12 ounces)
Material	Plastic, Silicone
Color	Gold
Special Feature	Waterproof
Power Source	None (Manual)
Product Benefits	Scalp Stimulation, Skin Care, Stress Relief

Warranty and Support

No specific warranty information is provided with this product. For any questions, concerns, or support needs, please refer to the retailer where the product was purchased or visit the official Cosmopolitan brand website for general inquiries.