

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Forno](#) /

› [FORNO 24-Inch Microwave Drawer Oven \(Model FMWDR3000-24\) Instruction Manual](#)

## Forno FMWDR3000-24

# FORNO 24-Inch Microwave Drawer Oven

MODEL: FMWDR3000-24

Brand: Forno

## Introduction

This manual provides essential instructions for the safe and efficient operation, installation, and maintenance of your Forno 24-inch Microwave Drawer Oven, Model FMWDR3000-24. Please read all instructions thoroughly before using the appliance and retain this manual for future reference.

## Important Safety Instructions

To reduce the risk of fire, electric shock, injury to persons, or exposure to excessive microwave energy when using your appliance, follow basic precautions, including the following:

- Read all instructions before using the appliance.
- Do not operate the oven if the door is damaged, or if the oven is malfunctioning.
- Do not attempt to service or repair the oven yourself. Contact qualified service personnel.
- Do not heat liquids or other foods in sealed containers as they are liable to explode.
- Always use microwave-safe cookware.
- Supervise children closely when the appliance is in use.
- Ensure proper ventilation around the microwave.

## Product Features

The Forno Microwave Drawer Oven is designed for convenience and performance, offering a sleek, built-in solution for your kitchen.

- **Space-Saving Design:** Seamlessly installs built-in under a counter or in a wall.
- **Cooking Power:** 1,000 watts of cooking power for efficient heating.
- **Capacity:** 1.2 cubic feet interior capacity.
- **Control Panel:** Easy-to-use glass touch controls and LED display.
- **Door Operation:** Touch open door for convenience.
- **Material:** Heavy-duty food-grade 430 stainless steel construction.
- **Pre-programmed Modes:** Includes Defrost, Popcorn, Beverage heating, Melt, and Soften functions.


- **Power Levels:** 11 adjustable power levels.
- **Child Safety Lock:** For enhanced safety.



Figure 1: Front view of the Forno 24-inch Microwave Drawer Oven.



 Figure 2: Angled view of the Forno 24-inch Microwave Drawer Oven in a closed position.



Made with  
stainless steel



Glass  
touch control



High  
efficiency



Child  
safety lock



Microwave  
multiple mode

Figure 3: Visual representation of key features including stainless steel construction, glass touch controls, high efficiency, child safety lock, and multiple cooking modes.

## Installation

Proper installation is crucial for the safe and optimal performance of your microwave drawer oven. This appliance is designed for built-in installation under a counter or in a wall cabinet. Ensure the installation area meets the specified dimensions and electrical requirements.

## Cutout Dimensions

The required cutout dimensions for installation are:

- **Width:** 22.5 inches
- **Height:** 15 inches
- **Depth:** 23 inches

A minimum clearance of 3 inches between the microwave and the outer wall is required for proper ventilation.

## Electrical Requirements

The unit is powered by 120 volts and requires a 15 amp circuit with a three-pronged outlet.

## Installation Steps

1. Prepare the cabinet cutout according to the specified dimensions.
2. Ensure the power cord is accessible and can reach the outlet. The power cord is located on the left side of the unit and extends to 53 inches.
3. Plug the unit into a grounded 120V, 15A outlet.
4. Gently slide the microwave drawer oven into the prepared cutout frame.
5. Secure the microwave to the cabinet using the provided mounting brackets and screws.

Your browser does not support the video tag.

Video 1: This video provides detailed installation measurements and steps for the Forno FMWDR3000-24 Microwave Drawer Oven, including external dimensions, internal cutout requirements, and power cord specifications.



Figure 4: Overall product dimensions of the microwave drawer oven.

## Operation

Your Forno Microwave Drawer Oven offers intuitive controls for various cooking needs.

### Opening and Closing the Drawer

To open the microwave drawer, press the **OPEN** button on the control panel. To close, press the **CLOSE** button. The drawer also features a touch-open mechanism for convenience.



Figure 5: Front view of the microwave drawer oven with the drawer in the open position.



Figure 6: Angled view of the microwave drawer oven with the drawer open, showing the interior.



Figure 7: Top-down view into the open microwave drawer, highlighting the spacious interior.

## Cooking Functions

- **Quick Start:** Press the **START +30SEC.** button to begin cooking for 30 seconds at full power. Each subsequent press adds 30 seconds.
- **Power Levels:** Select from 11 power levels (1-10, 0 for lowest) to adjust cooking intensity.
- **Time Cook:** Enter desired cooking time using the number pad, then select a power level if different from full power, and press **START**.
- **Pre-programmed Settings:** Utilize dedicated buttons for common tasks: **Melt** (butter, chocolate, ice cream, cheese, marshmallows), **Popcorn**, **Defrost (Weight/Time)**, and **Beverage**. Follow on-screen prompts for specific selections.
- **Clock/Kitchen Timer:** Set the current time or use the kitchen timer for general timing needs.

Your browser does not support the video tag.

Video 2: This video demonstrates the various operational features of the Forno 24-inch Microwave Drawer Oven, including opening/closing the drawer, setting cooking times, and using pre-programmed functions like melt, popcorn, and defrost.

## Maintenance

Regular cleaning and maintenance will ensure the longevity and optimal performance of your microwave drawer.

oven.

- **Interior Cleaning:** Wipe the interior with a damp cloth and mild detergent after each use. For stubborn stains, place a bowl of water with lemon slices inside and microwave for a few minutes to loosen food particles.
- **Exterior Cleaning:** Clean the stainless steel exterior with a soft cloth and a non-abrasive stainless steel cleaner. Avoid harsh chemicals or abrasive pads.
- **Control Panel:** Wipe the glass touch control panel with a soft, damp cloth. Do not spray cleaners directly onto the panel.
- **Drawer Rails:** Keep the drawer rails free of food debris to ensure smooth operation.

## Troubleshooting

Before contacting customer service, please refer to the following common issues and solutions:

Problem	Possible Cause	Solution
Oven does not start	Power cord not plugged in; circuit breaker tripped; door not closed properly.	Ensure plug is secure; reset circuit breaker; close door firmly.
Food not heating evenly	Improper stirring; food density; incorrect power level.	Stir food during cooking; use appropriate power level for food type.
Drawer not opening/closing	Obstruction in drawer path; control panel issue.	Check for obstructions; try pressing the OPEN/CLOSE buttons again.

## Specifications

Feature	Detail
Product Dimensions (D x W x H)	23.4" x 23.62" x 14.96"
Item Weight	79.1 pounds
Manufacturer	Forno
Model Number	FMWDR3000-24
Color	Stainless Steel
Capacity	1.2 Cubic Feet
Special Features	Defrost, Timer, Turntable
Installation Type	Built-In
Wattage	1500 watts
Material	Stainless Steel
Included Components	Range (Microwave Drawer Oven), Power Cord, Mounting Bracket

## Warranty and Support

Forno stands behind its appliances with a comprehensive warranty and dedicated customer support.

- **Warranty:** The Forno 24-Inch Microwave Drawer Oven offers an industry-leading 2-year factory part and labor warranty. Please retain your proof of purchase for warranty claims.
- **Customer Support:** For assistance with installation, operation, troubleshooting, or warranty claims, please contact Forno customer support. Refer to the official Forno website or your purchase documentation for contact details.