

Fashionit 840104314630

U Speakers Mini Glow in The Dark Portable Wireless Bluetooth Speaker User Manual

Model: 840104314630

Brand: Fashionit

INTRODUCTION

Thank you for choosing the Fashionit U Speakers Mini. This bundle includes two compact, portable wireless Bluetooth speakers designed for an active lifestyle, suitable for travel, home, or office use. These speakers offer exceptional sound quality in a miniature form factor, along with convenient features like a magnetic base, built-in microphone, and remote selfie control. This manual provides detailed instructions to help you get the most out of your U Speakers Mini.



Image: The U Speakers Mini in Neon Orange and Neon Coral, showcasing their compact, spherical design.

WHAT'S IN THE BOX

Your U Speakers Mini bundle includes the following items:

- 2 x U Speakers Mini Glow in the Dark Portable Wireless Bluetooth Speakers (Neon Orange & Neon Coral)
- 2 x Remote Shutters (integrated into speakers)
- 1 x Micro USB to USB Charging Cord

PRODUCT OVERVIEW

The U Speakers Mini are designed for portability and ease of use. Each speaker features a durable aluminum shell and a magnetic base for versatile placement.



Image: A single U Speakers Mini in neon orange, highlighting its compact size.



Image: A single U Speakers Mini in neon coral, showing its sleek design.

Key Features:

- **Compact Size:** One of the smallest wireless speakers, weighing 2.46 oz with a 1.4-inch diameter.
- **Bluetooth 5.0:** For stable and efficient wireless connectivity.
- **Magnetic Base:** Allows for easy attachment to metallic surfaces.
- **Built-in Microphone:** Enables hands-free calling.
- **Remote Selfie Button:** Control your phone's camera remotely.
- **Glow in the Dark:** Unique aesthetic feature.



Image: The U Speakers Mini demonstrating its magnetic base, attached to a metal surface.

SETUP

1. Charging the Speakers

Before first use, fully charge your U Speakers Mini. Use the provided Micro USB to USB charging cord. Connect the Micro USB end to the speaker's charging port and the USB end to a standard USB power adapter (not included) or a computer's USB port.

- **Charging Time:** Approximately 2 hours for a full charge.
- **Battery Indicator:** The speaker will typically have an LED indicator that changes color or turns off when fully charged. Refer to the speaker's specific LED behavior for details.

2. Initial Bluetooth Pairing (Single Speaker)

1. **Power On:** Press and hold the power button on the speaker until you hear a power-on tone and the LED indicator starts flashing (usually blue), indicating it's in pairing mode.
2. **Enable Bluetooth:** On your smartphone, tablet, or laptop, go to your Bluetooth settings and ensure Bluetooth is enabled.

3. **Select Speaker:** Look for "U Speakers Mini" (or a similar name) in the list of available devices and select it to pair.
4. **Confirmation:** Once paired, you will hear a confirmation tone, and the LED indicator will typically turn solid blue.

Your U Speakers Mini is now ready to play audio.

OPERATING INSTRUCTIONS

1. Stereo Pairing (Connecting Two Speakers)

To enjoy true stereo sound, you can pair both U Speakers Mini together:

1. **Power On Both Speakers:** Turn on both U Speakers Mini. Ensure they are not currently connected to any other Bluetooth device.
2. **Initiate Pairing:** On one of the speakers (this will become the master speaker), double-press the power button. The speakers will attempt to connect to each other.
3. **Confirmation:** You will hear a confirmation tone when they are successfully paired together. One speaker's LED will flash (waiting for device connection), and the other will be solid (slave speaker).
4. **Connect to Device:** Now, on your device, search for "U Speakers Mini" (or similar) in your Bluetooth settings and connect to it. Only one "U Speakers Mini" entry should appear.

Once connected, audio will play through both speakers, providing a stereo experience.



Image: Two U Speakers Mini held together, illustrating their compact and pairable nature.

2. Using the Remote Selfie Button

The U Speakers Mini can also function as a remote shutter for your smartphone camera. Once connected via Bluetooth:

- Open your smartphone's camera application.
- Press the power button on the U Speakers Mini once to trigger the camera shutter.

This feature is ideal for group photos or selfies from a distance.

3. Hands-Free Calling

With the built-in microphone, you can answer calls directly through the speaker when connected to your phone:

- **Answer Call:** Press the power button once to answer an incoming call.
- **End Call:** Press the power button once during a call to end it.

- **Reject Call:** Press and hold the power button to reject an incoming call.

MAINTENANCE

To ensure the longevity and optimal performance of your U Speakers Mini, follow these maintenance guidelines:

- **Cleaning:** Wipe the speakers with a soft, dry, lint-free cloth. Do not use abrasive cleaners, alcohol, or chemical solvents, as these may damage the surface.
- **Storage:** Store the speakers in a cool, dry place away from direct sunlight and extreme temperatures.
- **Water Resistance:** The U Speakers Mini are **NOT** waterproof. Avoid exposure to water, rain, or excessive moisture.
- **Battery Care:** For best battery life, avoid fully discharging the speakers frequently. Charge them regularly, even if not in use for extended periods.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Low battery.	Charge the speaker fully using the provided USB cable.
Cannot pair with Bluetooth device.	Speaker not in pairing mode; Bluetooth off on device; device too far.	Ensure speaker is flashing (pairing mode). Turn Bluetooth off/on on your device. Move device closer to speaker (within 33 ft/10m).
No sound or distorted sound.	Volume too low; speaker not connected; audio source issue.	Increase volume on both speaker and device. Reconnect Bluetooth. Check audio source on your device.
Stereo pairing fails.	Speakers already connected to another device; incorrect pairing steps.	Ensure both speakers are disconnected from other devices. Follow stereo pairing steps precisely.
Remote selfie button not working.	Speaker not connected to phone; camera app not open.	Ensure speaker is connected via Bluetooth. Open your phone's camera app before pressing the button.

SPECIFICATIONS

Feature	Detail
Model Number	840104314630
Dimensions	45.45mm x 33mm (1.75" x 1.3")
Weight	2.46 oz (per speaker)
Connectivity	Bluetooth 5.0
Battery Capacity	400 mAh
Playback Time	Up to 4 hours
Charging Time	Approx. 2 hours
Material	Aluminum shell

Feature	Detail
Microphone	Built-in
Special Features	Magnetic Base, Remote Selfie Control, Glow in the Dark

WARRANTY AND SUPPORT

Fashionit products are designed with quality and performance in mind. For information regarding warranty coverage, technical support, or customer service, please refer to the official Fashionit website or contact their customer support directly. Keep your purchase receipt as proof of purchase for any warranty claims.

For the most up-to-date support information, please visit: www.fashionit.com/support (Note: This is a placeholder URL, please refer to actual product documentation for correct support contact information).

© 2023 Fashionit. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question