

[Manuals.plus](#) /

› [PEIOUS](#) /

› PEIOUS Wireless Mouse Jiggler Instruction Manual

PEIOUS B0BHY73DXK

PEIOUS Wireless Mouse Jiggler Instruction Manual

Model: B0BHY73DXK

INTRODUCTION

This manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your PEIOUS Wireless Mouse Jiggler. Please read this manual thoroughly before using the product to ensure proper function and longevity.



Image: The PEIOUS Wireless Mouse Jiggler, showcasing its purple color, USB-C charging port, and the included USB receiver. This mouse combines standard wireless mouse functionality with an integrated mouse jiggle feature.

PRODUCT FEATURES

- **2-in-1 Functionality:** Operates as a standard wireless mouse and includes a built-in mouse jiggle to prevent computer sleep mode.
- **Rechargeable Battery:** Equipped with a durable, built-in rechargeable battery, easily charged via USB-C.
- **Adjustable DPI:** Four adjustable DPI levels (800-1200-1600-2000) for precise cursor control.
- **Silent Click:** Designed to reduce click noise by 90%, suitable for quiet environments.
- **Undetectable Movement:** The jiggle mode produces random, subtle movements to keep the computer active.
- **Plug & Play:** Simple setup with a USB receiver, requiring no additional software installation.
- **Universal Compatibility:** Compatible with Windows XP, 7, 8, 10, and Mac OS.

PACKAGE CONTENTS

- PEIOUS Wireless Mouse Jiggler (Purple)
- USB Receiver
- USB-C Charging Cable
- User Manual (this document)

PRODUCT OVERVIEW



MOUSE & JIGGLER 2 IN 1

100% Undetectable

Image: An annotated diagram of the PEIOUS Wireless Mouse Jiggler, highlighting its components: Right Button, Left Button, DPI/Mouse Jiggler Mode Switch, Forward Button, Backward Button, Charging Port, Light Mode Switch, Power Switch, and USB Receiver storage.

Familiarize yourself with the various parts of your wireless mouse:

Right Button: Standard right-click functionality.

Left Button: Standard left-click functionality.

DPI/Mouse Jiggler Mode Switch: Press to cycle DPI settings; press and hold for 3-5 seconds to activate/deactivate jiggler mode.

Scroll Wheel: For scrolling and middle-click functionality.

Forward Button: Navigates forward in web browsers or file explorers.

Backward Button: Navigates backward in web browsers or file explorers.

Charging Port (USB-C): Located at the front of the mouse for recharging the internal battery.

Light Mode Switch: Located on the underside, controls the LED lighting effects.

Power Switch: Located on the underside, turns the mouse ON/OFF.

USB Receiver: Stored in a compartment on the underside of the mouse for wireless connectivity.

SETUP

1. **Charge the Mouse:** Before first use, connect the included USB-C cable to the mouse's charging port and the other end to a USB power source (e.g., computer USB port, USB wall adapter). The LED lights may indicate charging status.

QUIET CLICK & ADJUSTABLE DPI



Image: The PEIOUS Wireless Mouse Jiggler connected to a USB-C charging cable, illustrating the charging process.

2. **Retrieve USB Receiver:** Locate the USB receiver stored in the compartment on the underside of the mouse.
3. **Connect USB Receiver:** Plug the USB receiver into an available USB-A port on your computer. Your computer should automatically recognize the device.

HOW TO USE THE "JIGGLER"

1

Plug the USB receiver to your computer, it will be reconized as a normal mouse;



2

Press the DPI button for 3-5 seconds, green lights on, it enters into juggler mode;



3

Press the DPI button for 3-5 seconds again if you want to turn the "jiggler" "off"

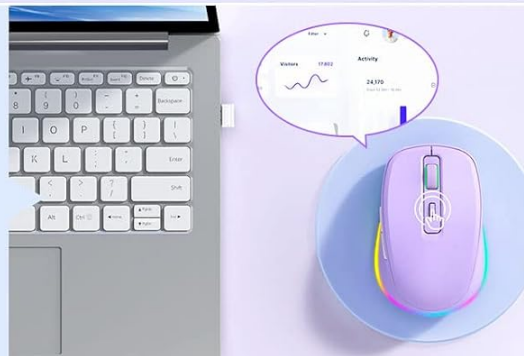


Image: A visual guide demonstrating how to plug the USB receiver into a laptop and how to activate the juggler mode by pressing the DPI button.

4. **Power On:** Flip the power switch on the underside of the mouse to the "ON" position. The mouse is now ready for use.

OPERATING INSTRUCTIONS

Standard Mouse Operation

Once connected, the PEIOUS Wireless Mouse functions like a standard 3-button mouse with a scroll wheel and side buttons. Move the mouse to control the cursor on your screen. Use the left and right buttons for clicking, and the scroll wheel for vertical navigation.

Adjusting DPI (Sensitivity)

The mouse features 4 adjustable DPI levels to change cursor sensitivity. To adjust, simply press the **DPI/Mouse Jiggler Mode Switch** button located behind the scroll wheel. Each press will cycle through the DPI settings (800, 1200, 1600, 2000 DPI).



Image: The PEIOUS Wireless Mouse Jiggler, illustrating its quiet click feature and the four adjustable DPI settings (800, 1200, 1600, 2000 DPI).

Activating Mouse Jiggler Mode

To activate the built-in mouse jiggler feature:

1. Ensure the mouse is connected and powered on.
2. Press and hold the **DPI/Mouse Jiggler Mode Switch** button for approximately 3-5 seconds.
3. A green light will illuminate, indicating that the jiggler mode is active. The mouse cursor will now perform random, subtle movements to prevent your computer from entering sleep mode or locking.

RECHARGEABLE WIRELESS MOUSE



Image: The PEIOUS Wireless Mouse Jiggler in use on a desk, demonstrating its ability to keep a computer active with undetectable movements, preventing screen lock.

Deactivating Mouse Jiggler Mode

To deactivate the mouse jiggler feature and return to normal mouse operation:

1. Press and hold the **DPI/Mouse Jiggler Mode Switch** button for approximately 3-5 seconds again.
2. The green light will turn off, indicating that the jiggler mode is deactivated. The mouse will now function solely as a standard wireless mouse.

Note: While in jiggler mode, you can still use the mouse normally. The jiggler function will resume after 3-5 seconds of inactivity.

Light Mode Switch

The mouse features LED lighting. Use the **Light Mode Switch** on the underside of the mouse to cycle through different lighting effects or to turn the lights off to conserve battery.

Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the mouse. For stubborn dirt, a slightly damp cloth can be used, but ensure no moisture enters the internal components.
- **Charging:** Recharge the mouse when the battery indicator (if present) shows low power or when performance degrades. Avoid fully depleting the battery frequently to prolong its lifespan.
- **Storage:** When not in use for extended periods, turn off the mouse using the power switch to conserve battery. Store in a cool, dry place.
- **USB Receiver:** Keep the USB receiver in its designated storage compartment on the mouse when not in use to prevent loss.

Troubleshooting

Problem	Possible Cause	Solution
Mouse not responding.	Mouse is off; low battery; USB receiver not connected or faulty; driver issue.	Ensure power switch is ON. Charge the mouse. Re-insert USB receiver into a different USB port. Restart computer.
Jiggler mode not activating.	DPI button not held long enough.	Press and hold the DPI button for a full 3-5 seconds until the green light appears.
Cursor movement is erratic or jumpy.	Dirty optical sensor; unsuitable surface; low battery.	Clean the optical sensor. Use the mouse on a clean, non-reflective surface. Charge the mouse.
Side buttons (Forward/Backward) not working.	Application does not support these buttons; software conflict.	Ensure the application supports these functions. Try in a different application (e.g., web browser). No specific drivers are needed, but ensure your OS is up to date.

Specifications

- **Model:** B0BHY73DXK
- **Brand:** PEIOUS
- **Connectivity:** 2.4GHz Wireless (USB Receiver)
- **DPI Levels:** 800 / 1200 / 1600 / 2000 DPI
- **Battery:** Rechargeable Lithium Ion (included)
- **Dimensions:** 3.96 x 2.56 x 0.04 inches (approx.)
- **Weight:** 2.82 ounces (approx.)
- **Compatibility:** Windows XP/7/8/10, Mac OS
- **Special Features:** LED lighting, Silent Click, Built-in Mouse Jiggler

Warranty and Support

This PEIOUS Wireless Mouse Jiggler is backed by a **12-month warranty** from the date of purchase. This warranty covers manufacturing defects and issues arising from normal use.

For warranty claims, technical support, or any questions regarding your product, please contact PEIOUS customer service through the retailer where you purchased the product or visit the official PEIOUS store on Amazon: [PEIOUS Amazon Store](#).

Please retain your proof of purchase for warranty validation.

© 2025 PEIOUS. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

Is there an indicator on the PEIOUS B0BHY73DXK Wireless Mouse Jiggler when it is fully charged?

The instruction manual for the PEIOUS B0BHY73DXK Wireless Mouse Jiggler states, "The LED lights may indicate charging status." However, it does not explicitly mention a specific indicator for when the mouse is fully charged....

[Read full answer](#)