

## Hicozy SJ-2030

# HiCOZY Vacuum Sealer Machine User Manual

Model: SJ-2030 | Brand: Hicozy

## 1. INTRODUCTION

This manual provides comprehensive instructions for the safe and efficient operation, maintenance, and troubleshooting of your HiCOZY Vacuum Sealer Machine (Model: SJ-2030). Please read this manual thoroughly before first use and retain it for future reference.

### Important Safety Information


- Always ensure the appliance is connected to a power source matching the voltage specified on the product label (220 Volts).
- Do not immerse the appliance, power cord, or plug in water or other liquids.
- Keep out of reach of children and pets.
- Unplug the appliance from the power outlet when not in use, before cleaning, or during maintenance.
- Do not operate the appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.

## 2. WHAT'S IN THE BOX

Upon opening the packaging, verify that all the following components are present and in good condition:

- 1 x HiCOZY Vacuum Sealer Machine (Model: SJ-2030)
- 1 x BPA-free Vacuum Sealer Roll (8" x 16')
- 10 x BPA-free Vacuum Sealer Bags (8" x 12")
- 1 x Vacuum Hose
- 1 x Power Cord

## Detachable Drip Tray

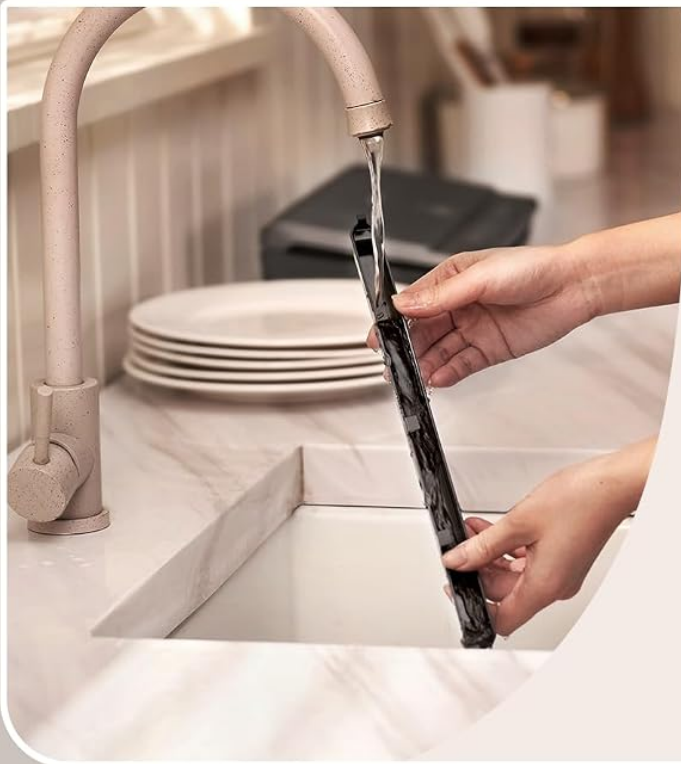

## Easy Cleaning

Image: All components included in the HiCOZY Vacuum Sealer Machine package.

### 3. PRODUCT OVERVIEW

The HiCOZY Vacuum Sealer Machine is designed for efficient food preservation, featuring a sleek gray finish and intuitive controls.



Image: The HiCOZY Vacuum Sealer Machine with its accessories, demonstrating its primary function.

## Key Features:

- **Integrated Bag Cutter & Storage:** Conveniently store vacuum bags and cut them to custom sizes.
- **Multiple Modes:** Dry, Moist, Seal, Canister, Manual, and dual-suction for various food types.
- **Digital Display:** Communicates sealing process information and time.
- **Detachable Drip Tray:** Simplifies cleaning and maintenance.
- **Magnetic Auto-Sealing:** Enhances convenience during operation.

# Upgraded Design Enhanced Convenience



1. Easy bag positioning



2. Magnetic locking



3. Mode selection & auto sealing

\*Tip: For initial use, please gently press the lid in case the seal ring is loose.

Image: Visual guide to the upgraded design features, including bag positioning, magnetic locking, and mode selection.

## Built-In Storage

Conveniently stores vacuum bags from any brand in it



## Integrated Bag Cutter

Create custom bag sizes to suit your needs

Image: Close-up of the built-in bag storage and integrated bag cutter features.

1. **Unpacking:** Carefully remove all components from the packaging. Remove any protective films or packing materials.
2. **Placement:** Place the vacuum sealer on a flat, stable, and dry surface. Ensure there is adequate space around the unit for operation.
3. **Power Connection:** Connect the power cord to the appliance and then plug it into a suitable electrical outlet.
4. **Initial Lid Check:** For the first use, gently press the lid down firmly to ensure the seal rings are completely installed and properly seated. This ensures optimal sealing performance.
5. **Bag Roll Installation (Optional):** If using the included bag roll, place it in the integrated bag storage compartment. Pull out the desired length of bag material and use the built-in cutter to create a custom bag. Seal one end of the custom bag before filling.

## 5. OPERATING INSTRUCTIONS

The HiCOZY Vacuum Sealer offers multiple modes for diverse food preservation needs. The digital display will show the sealing time during operation.

### General Sealing Steps:

1. **Prepare the Bag:** Place the food item inside a vacuum sealer bag. Ensure the open end of the bag is clean, dry, and free from food particles or moisture. Leave at least 2-3 inches of space between the food and the top edge of the bag.
2. **Position the Bag:** Open the lid of the vacuum sealer. Place the open end of the bag into the vacuum chamber, ensuring it lies flat across the sealing strip.
3. **Close the Lid:** Close the lid firmly until it clicks into place. The magnetic auto-sealing feature will assist in securing the lid.
4. **Select Mode:** Choose the appropriate mode based on your food type:
  - **Dry Mode:** For solid food items without moisture.
  - **Moist Mode:** For food items with some moisture.
  - **Seal Mode:** To seal bags without vacuuming (e.g., for chip bags).
  - **Canister Mode:** For use with external vacuum canisters (vacuum hose required).
  - **Manual Mode:** Allows for controlled vacuuming to prevent crushing delicate items. Press and hold for vacuum, release and press "Seal" for sealing.
5. **Start Sealing:** Press the selected mode button. The machine will automatically vacuum and seal the bag. The digital display will show the progress.
6. **Completion:** The machine will beep twice and the screen will turn off when the sealing process is complete. Open the lid and remove the sealed bag.

### Suction Levels:

- **Strong Suction:** Provides 80 kPa suction for robust vacuuming.
- **Soft Suction:** Ideal for delicate or fragile food items to prevent crushing.

# Keep Food Fresh

# 5X Longer



Image: The vacuum sealer in a kitchen setting, illustrating its use for preserving various food items.



The Ultimate Vacuum  
Sealing Convenience

7-in-1

Functions Based on Food Types

Image: An array of vacuum-sealed foods demonstrating the versatility of the 7-in-1 functions.

## 6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your HiCOZY Vacuum Sealer.

1. **Unplug Before Cleaning:** Always unplug the appliance from the power outlet before cleaning.
2. **Clean the Drip Tray:** The detachable drip tray can be easily removed for cleaning. Wash it with warm, soapy water, rinse thoroughly, and dry completely before reinserting.
3. **Wipe Down the Unit:** Use a soft, damp cloth to wipe the exterior of the appliance. Do not use abrasive cleaners or solvents.
4. **Clean Sealing Strip:** Gently wipe the sealing strip and vacuum chamber with a damp cloth to remove any food residue. Ensure these areas are dry before closing the lid or operating the machine.
5. **Storage:** Store the vacuum sealer in a cool, dry place with the lid unlatched to prevent compression of the sealing gaskets.



Image: Demonstration of the detachable drip tray and its ease of cleaning.

## 7. TROUBLESHOOTING

| Problem                                       | Possible Cause                                                                                                                     | Solution                                                                                                                                                                        |
|-----------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Machine does not power on.                    | Power cord not properly connected; power outlet issue.                                                                             | Ensure power cord is securely plugged into both the machine and a working outlet. Check the outlet with another appliance.                                                      |
| Bag does not vacuum properly.                 | Lid not closed firmly; bag not positioned correctly; bag opening is wet or has food particles; sealing gasket is dirty or damaged. | Press down firmly on the lid until it clicks. Reposition the bag, ensuring it is flat and centered. Clean and dry the bag opening. Clean the sealing gasket and vacuum chamber. |
| Bag does not seal.                            | Sealing strip is dirty or damaged; bag material is unsuitable; machine overheated.                                                 | Clean the sealing strip. Ensure you are using appropriate vacuum sealer bags. Allow the machine to cool down for 20-30 seconds between seals if performing multiple operations. |
| Vacuum is weak or inconsistent.               | Vacuum chamber or hose connection is loose; food item is too large or blocking the vacuum channel.                                 | Check all connections for the vacuum hose. Ensure the bag is not overfilled and the food is not obstructing the vacuum channel.                                                 |
| Machine continues to vacuum without stopping. | Internal sensor issue or prolonged operation.                                                                                      | Unplug the unit immediately. Allow it to cool down for several minutes before attempting to use it again. If the problem persists, contact customer support.                    |

## 8. SPECIFICATIONS

| Attribute                      | Detail                          |
|--------------------------------|---------------------------------|
| Brand                          | Hicozy                          |
| Model Number                   | SJ-2030                         |
| Material                       | Acrylonitrile Butadiene Styrene |
| Color                          | Gray                            |
| Product Dimensions (L x W x H) | 14.76" x 6.1" x 2.56"           |
| Item Weight                    | 4.4 Pounds                      |
| Power Source                   | AC Adapter                      |
| Operation Mode                 | Automatic                       |
| Wattage                        | 150 Watts                       |
| Voltage                        | 220 Volts                       |

| Attribute    | Detail |
|--------------|--------|
| Manufacturer | HiCOZY |

## 9. WARRANTY AND SUPPORT

Your HiCOZY Vacuum Sealer Machine is covered by a manufacturer's warranty. For detailed warranty information, product support, or to inquire about replacement parts, please refer to the warranty card included in your product packaging or visit the official Hicozy website.

For any issues not covered in the troubleshooting section, please contact HiCOZY customer service for assistance.

© 2023 Hicozy. All rights reserved.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

#### Name

Anonymous

#### Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

#### Question

Example: How do I reset this device or fix this error?

#### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question