

Manuals.plus /

> [Sejoy](#) /
> Water Flosser Dental Oral Irrigator Teeth Cleaner Portable Travel Rechargeable Cordless,IPX7 Electric Plaque Remover 3 Modes 3 Jet Tips 140ml (White)

Sejoy CYQ-MINT3

Sejoy Portable Water Flosser Instruction Manual

Model: CYQ-MINT3 | Brand: Sejoy

1. PRODUCT OVERVIEW

The Sejoy Portable Water Flosser is an advanced dental oral irrigator designed to provide a deep and effective clean for your teeth and gums. Its compact and cordless design makes it ideal for both home use and travel. Featuring multiple cleaning modes and a powerful water pulse, it helps remove food residues and plaque that traditional brushing and flossing might miss, promoting healthier gums and a brighter smile.



Image: Sejoy Portable Water Flosser with included jet tips and USB-C charging cable.

2. SAFETY INFORMATION

Please read all instructions carefully before using this product. Keep this manual for future reference.

- Do not use with damaged or broken teeth, bridges, or dental implants without consulting a dental professional.
- Keep out of reach of children.
- Do not submerge the main device in water for extended periods. The device is IPX7 waterproof, meaning it can withstand immersion up to 1 meter for 30 minutes, but prolonged submersion is not recommended.
- Allow the device to cool down after prolonged use.
- Do not use while sleeping or unconscious.
- If you experience any discomfort or pain, stop use immediately and consult a dental professional.
- This device is not intended to replace regular brushing and flossing.

3. PACKAGE CONTENTS

Verify that all items are present in your package:

- 1 x Sejoy Portable Water Flosser Unit
- 3 x Standard Jet Tips
- 1 x USB Type-C Charging Cable
- 1 x Instruction Manual



Image: The complete set of the Sejoy Portable Water Flosser, including the main unit, three jet tips, and charging cable.

4. SETUP

4.1. Install Jet Tip

1. Select a desired jet tip.
2. Insert the jet tip into the hole at the top of the flosser unit. Push firmly until it clicks into place. Ensure it is securely fastened to prevent leakage.



Image: Step-by-step guide showing how to firmly insert the jet tip into the flosser unit until it clicks.

4.2. Fill Water Tank

1. Twist the water tank counter-clockwise to detach it from the main unit.
2. Fill the tank with lukewarm water. Do not use hot water.
3. Align the tank with the main unit and twist clockwise until it is securely reattached.



Image: Illustration of detaching and filling the transparent water tank for the flosser.

4.3. Charging the Device

Before first use, fully charge the water flosser. A full charge provides approximately 20 days of continuous use (based on two 2-minute uses per day).

1. Locate the Type-C charging port on the back of the device, covered by a silicone plug.
2. Gently open the silicone plug.
3. Insert the USB Type-C charging cable into the port and connect the other end to a suitable USB power adapter (not included).
4. The power indicator light will flash white during charging and remain solid white when fully charged.
5. Ensure the silicone plug is securely closed after charging to maintain waterproofing.



Image: The water flosser connected to a power outlet via its USB-C charging cable, illustrating the charging process.

5. OPERATING INSTRUCTIONS

5.1. Power On and Select Mode

The Sejoy Water Flosser offers three distinct cleaning modes to suit various oral care needs:

- **Soft Mode:** Gentle pressure for sensitive gums and first-time users.
- **Standard Mode:** Regular pressure for daily cleaning and effective plaque removal.
- **Strong Mode:** Powerful pressure for intensive deep cleaning and stubborn tartar.

1. Press the power button to turn on the device. It will start in the last used mode.
2. Within 3 seconds of powering on, press the power button repeatedly to cycle through the modes (Soft > Standard > Strong).
3. Once the desired mode is selected, the device will begin operating.

Sejoy Water Flosser



1900 Pulses per minute



Easily wash away food residue between teeth

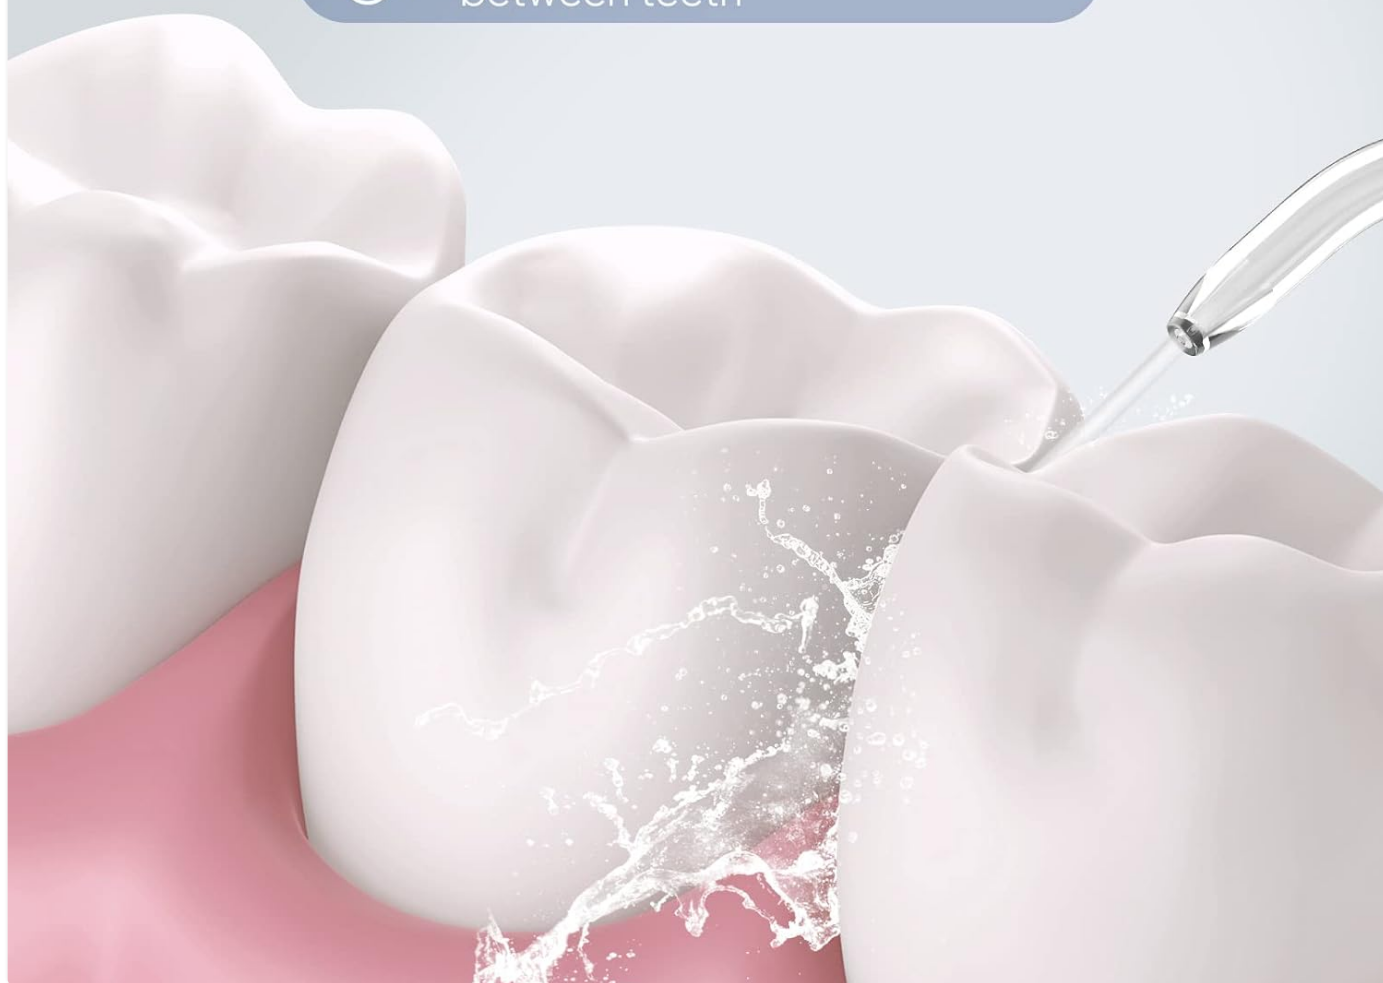


Image: Visual representation of the three cleaning modes (Soft, Standard, Strong) and their recommended uses.

5.2. Flossing Technique

For optimal results, follow these steps:

1. Lean over a sink and place the jet tip into your mouth, aiming it at a 90-degree angle to your teeth and gumline.
2. Start with the molars (back teeth) and work your way towards the front.
3. Move the jet tip along the gumline, pausing briefly between teeth to allow water to clean thoroughly.
4. Allow the water to flow out of your mouth into the sink.
5. The device has a 3-minute smart timer and will automatically power off after 3 minutes to prevent battery waste.



1 Insert the nozzle firmly until it clicks into place, otherwise it will leak;



2 Turn the water tank counterclockwise to remove it and fill it with water.



3 Put into your mouth, aim to 90 degrees to your teeth.



4 Short press the button to start and choose the suitable mode.



Spray nozzles can be stored in the water tank.

Image: A user demonstrating the correct angle and position for using the water flosser to clean between teeth.

Your browser does not support the video tag.

Video: An official product video demonstrating the setup, operation, and various features of the Sejoy Portable Water Flosser. This video provides a visual guide to using the device effectively.

6. CLEANING AND MAINTENANCE

6.1. Cleaning the Water Tank

The detachable water tank allows for thorough cleaning to prevent bacterial buildup.

1. After each use, twist the water tank counter-clockwise to remove it.
2. Rinse the tank thoroughly with clean water.
3. Allow the tank to air dry completely before reattaching or storing.



Image: The removable water tank being detached from the main unit for easy cleaning under running water.

6.2. Cleaning Jet Tips

To remove a jet tip for cleaning or replacement:

1. Press the jet tip release button located on the front of the flosser unit, just below the tip.
 2. Gently pull the jet tip upwards to remove it.
 3. Rinse the jet tip under running water.
 4. Store clean tips in a dry, sanitary place.
-

Type-C USB Quick Charge

Once charge for 30 days use

≤3

Hours
Charging Time

≈20

Days
Standby Time

Use twice a day for 1
min in standard mode
for 20 days



Image: A hand pressing the release button to easily eject a jet tip from the water flosser for cleaning.

7. TROUBLESHOOTING

If you encounter any issues with your Sejoy Portable Water Flosser, please refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
No water flow	Water tank empty; Jet tip not installed correctly; Water inlet blocked.	Refill water tank; Re-insert jet tip until it clicks; Clean water inlet.
Weak water pressure	Low battery; Jet tip clogged; Incorrect mode selected.	Recharge device; Clean jet tip; Select a stronger mode.
Device does not turn on	Battery is dead; Device malfunction.	Charge the device; If problem persists, contact customer support.

Problem	Possible Cause	Solution
Water leakage	Water tank not sealed properly; Jet tip not installed correctly.	Ensure water tank is twisted on tightly; Re-insert jet tip until it clicks.

8. SPECIFICATIONS

Feature	Detail
Model Number	CYQ-MINT3
Product Dimensions	2.6 x 4.02 x 8.74 inches
Item Weight	14.07 ounces
Water Tank Capacity	140ml
Water Pulse Frequency	1900 pulses/minute
Modes	Soft, Standard, Strong
Waterproof Rating	IPX7
Battery Type	Lithium Ion (1 included)
Charging Port	USB Type-C
Auto Shut-Off	3 minutes

9. WARRANTY AND SUPPORT

Sejoy products are manufactured to the highest quality standards. This product is covered by a limited warranty against defects in materials and workmanship from the date of purchase. Please retain your proof of purchase for warranty claims.

For warranty service, technical support, or any questions regarding your product, please contact Sejoy Customer Service through the retailer's platform or visit the official Sejoy website for contact information.

Online Support: Visit the Sejoy Store on Amazon:[Sejoy Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BHZ2QG99>

More documents and user manuals: <https://manuals.plus/>