

[Manuals.plus](#) /

> [jioeuinly](#) /

> jioeuinly Slim Case for Teclast P20s 10 Inch Tablet User Manual

## jioeuinly Teclast P20s 10 Inch Tablet Case

# jioeuinly Slim Case for Teclast P20s 10 Inch Tablet User Manual

Model: Teclast P20s 10 Inch Tablet Case

## 1. INTRODUCTION

---

This manual provides instructions for the proper installation, operation, and maintenance of your jioeuinly Slim Case for the Teclast P20s 10 Inch Tablet. This case is designed to protect your tablet while offering convenient features such as a stand function.



**Figure 1:** The jioeuinly Slim Case for Teclast P20s 10 Inch Tablet in its closed position, featuring a blue patterned design.

## 2. PRODUCT FEATURES

---

- **Full Hardware Access:** Designed to allow normal use of all tablet hardware, including webcam, flash, fingerprint reader, and speakers, without obstruction.
- **Enhanced Protection:** Features a flip cover combined with a thickened protective corner silicone ring for lightweight yet excellent overall protection against impacts and scratches.
- **Durable Design:** Equipped with an exquisite inkjet pattern that maintains its brightness for an extended period without fading.
- **Integrated Stand Function:** The case can be folded to position the tablet in a standing orientation for comfortable viewing.
- **Keyboard Compatibility:** Please note that this case does not include a dedicated keyboard position.

## 3. SETUP: INSTALLING YOUR TABLET

---

Follow these steps to correctly install your Teclast P20s 10 Inch Tablet into the jioeuinly Slim Case:

1. **Open the Case:** Gently open the flip cover of the case.

2. **Align the Tablet:** Carefully align your Teclast P20s tablet with the case, ensuring that the camera, ports, and buttons on the tablet correspond to the cutouts in the case.
3. **Insert the Tablet:** Slide the tablet into the protective frame of the case. Apply gentle pressure to ensure all corners and edges are securely seated within the silicone ring and hard shell.
4. **Verify Fit:** Once inserted, check that all tablet hardware (camera, speakers, charging port, power/volume buttons) is accessible and unobstructed.



**Figure 2:** Visual guide for tablet insertion, showing the case's design and port access. The image also illustrates the stand functionality.

## 4. OPERATING INSTRUCTIONS

### 4.1 Using the Stand Function

The joeuinly Slim Case features a built-in stand for hands-free viewing. To activate the stand:

1. **Open the Cover:** Open the front flip cover of the case.
2. **Fold the Cover:** Fold the cover backward, aligning it with the grooves or design elements on the back of the case. This will create a triangular support structure.
3. **Position the Tablet:** Place the tablet's edge into the created groove to prop it up at a comfortable viewing angle. Refer to Figure 2 for a visual example of the stand in use.

### 4.2 Accessing Ports and Buttons

The case is precisely cut to ensure full access to all essential ports, buttons, and features of your Teclast P20s tablet. This includes:

- Charging port
- Headphone jack (if applicable)
- Volume buttons

- Power button
- Camera and flash
- Speakers

Ensure no debris is obstructing these openings for optimal functionality.

## 5. MAINTENANCE

---

To keep your jioeuinly Slim Case in optimal condition:

- **Cleaning:** Wipe the exterior of the case with a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners, as these may damage the synthetic leather or printed pattern.
- **Storage:** When not in use, store the case in a cool, dry place away from direct sunlight to prevent material degradation or fading of the pattern.
- **Avoid Extreme Conditions:** Do not expose the case to extreme temperatures or excessive moisture.

## 6. TROUBLESHOOTING

---

- **Tablet Does Not Fit:** Ensure you have the correct model of tablet (Teclast P20s 10 Inch Tablet). This case is specifically designed for this model. Do not force the tablet into the case.
- **Stand Not Stable:** Ensure the case is folded correctly to form a stable triangular base. The surface on which the tablet is placed should be flat and firm.
- **Ports/Buttons Blocked:** Double-check that the tablet is fully and correctly seated within the case, aligning all cutouts with the tablet's features.

## 7. SPECIFICATIONS

---

Feature	Detail
Product Dimensions	11.81 x 7.87 x 0.39 inches
Compatible Devices	Teclast P20s 10 Inch Tablets
Form Factor	Flip Case
Shell Type	Hard
Special Features	Stand Function
Material	Synthetic Leather
Color	Colorful (Patterned)
Brand	jioeuinly

## 8. WARRANTY AND SUPPORT

---

For information regarding warranty coverage or technical support, please refer to the product packaging or contact the retailer from whom the product was purchased. Keep your proof of purchase for any warranty

claims.

© 2023 jioeuinly. All rights reserved.