

[Manuals.plus](#) /

› [jioeuinly](#) /

› jioeuinly Slim Case for Headwolf Hpad 2 11 Inch Tablet Instruction Manual

jioeuinly P445-HD-176

jioeuinly Slim Case for Headwolf Hpad 2 11 Inch Tablet Instruction Manual

Model: P445-HD-176

INTRODUCTION

This manual provides instructions for the proper setup, operation, and maintenance of your jioeuinly Slim Case designed specifically for the Headwolf Hpad 2 11 Inch Tablet. Please read this guide thoroughly to ensure optimal use and protection for your device.



Figure 1: Overview of the jioeuinly Slim Case for Headwolf Hpad 2 11 Inch Tablet.

SETUP

Follow these steps to correctly install your Headwolf Hpad 2 11 Inch Tablet into the jioeuinly Slim Case:

1. **Prepare the Case:** Open the flip cover of the case.
2. **Insert the Tablet:** Gently slide your Headwolf Hpad 2 11 Inch Tablet into the case, ensuring it aligns with the thickened protective corner silicone ring. The tablet should fit snugly.
3. **Secure the Tablet:** Press lightly around the edges of the tablet to ensure it is fully seated within the case's frame. Verify that all hardware components, including the webcam, flash, fingerprint reader, and speakers, are accessible and can be used normally through the case's precise cutouts.



Figure 2: Illustrates the process of inserting the tablet into the case and highlights accessible ports and features.

OPERATING THE STAND FEATURE

The jioeuinly Slim Case includes a convenient stand feature for hands-free viewing. To utilize this function:

1. **Open the Cover:** Fully open the flip cover of the case.
2. **Fold into Stand:** Fold the cover back and position it to create a triangular support structure. The tablet can then be placed into the grooves or against the folded cover to achieve a stable viewing angle.
3. **Adjust Angle:** Adjust the fold as needed to find your preferred viewing or typing angle.

Note: This case is designed for tablet protection and stand functionality; it does not include a dedicated keyboard position.



Figure 3: Demonstrates various standing positions achievable with the case's foldable cover.

MAINTENANCE

To keep your jioeuinly Slim Case in optimal condition and preserve its exquisite inkjet pattern:

- **Cleaning:** Wipe the exterior of the case with a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners, as these may damage the synthetic leather material and the printed pattern.
- **Stain Removal:** For stubborn stains, use a mild soap solution on a cloth and gently rub the affected area. Wipe clean with a separate damp cloth and allow to air dry completely.
- **Storage:** Store the case away from direct sunlight and extreme temperatures to prevent material degradation and fading of the pattern.

The exquisite inkjet pattern is designed to remain bright for a long time without fading with proper care.

TROUBLESHOOTING

If you encounter any issues with your jioeuinly Slim Case, please refer to the following common solutions:

- **Tablet Does Not Fit:** Ensure you have the correct model, Headwolf Hpad 2 11 Inch Tablet. The case is specifically designed for this model.
- **Ports or Buttons Blocked:** Double-check that the tablet is fully seated and aligned within the case. The case features precise cutouts for all standard ports and buttons.
- **Stand Instability:** Ensure the cover is folded correctly to form a stable triangular base. Adjust the tablet's position within the stand for better balance.

SPECIFICATIONS

Feature	Detail
Brand	jioeuinly
Model Number	P445-HD-176
Compatible Devices	Headwolf Hpad 2 11 Inch Tablet
Material	Polyurethane (Synthetic Leather)
Form Factor	Flip Case
Additional Features	Stand Function, Thickened Protective Corner Silicone Ring
Item Dimensions	11.81 x 7.87 x 0.39 inches
Water Resistance Level	Not Water Resistant
Pattern	Personality fashion (Inkjet Pattern)

WARRANTY AND SUPPORT

This product is designed for durability and protection. For any questions or support regarding your jioeuinly Slim Case, please contact the seller directly through the platform where it was purchased. Standard return policies typically allow for returns or replacements within 30 days of purchase, subject to the seller's terms and conditions.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question