

[Manuals.plus](#) /

› [Andis](#) /

› Andis 04780 Professional T-Outliner Beard & Hair Trimmer Instruction Manual

Andis 04780

Andis 04780 Professional T-Outliner Beard & Hair Trimmer Instruction Manual

Model: 04780

INTRODUCTION

This manual provides comprehensive instructions for the safe and effective use of your Andis 04780 Professional T-Outliner Beard & Hair Trimmer. Designed for crisp, clean lines, dry-shaving, and sharp edges, this corded electric trimmer features durable carbon-steel T-blades and a high-torque rotary motor for consistent performance. Please read all instructions carefully before use.



Image: The Andis 04780 Professional T-Outliner Beard & Hair Trimmer, showcasing its ergonomic design and T-blade.

SAFETY INFORMATION

Always use the trimmer with care. Ensure the device is unplugged before cleaning or maintenance. Keep out of reach of children. Do not immerse the trimmer in water. Avoid using the trimmer with damaged blades or cord.

SETUP

1. **Unpack:** Carefully remove the trimmer and all accessories from the packaging.
2. **Inspect:** Check the trimmer for any signs of damage. Ensure the carbon steel T-blade is securely attached and free from defects.
3. **Power Connection:** The Andis 04780 is a corded electric trimmer. Plug the 8-foot power cord into a suitable electrical outlet.
4. **Initial Oiling:** Before first use, apply a few drops of clipper oil (if included) to the blades. This ensures smooth

operation and prolongs blade life.



Image: The Andis T-Outliner Trimmer with its attached power cord, ready for connection to an electrical outlet.

OPERATING INSTRUCTIONS

1. **Preparation:** Ensure hair is clean and dry before trimming. For beard and mustache trimming, comb hair in the direction of growth.
2. **Power On:** Locate the on/off switch (often a red lever) on the trimmer body and slide it to the "On" position.
3. **Trimming Technique:**
 - For crisp lines and edging, hold the trimmer with the blade flat against the skin and move it slowly and steadily in the desired direction.
 - For dry-shaving, use short, gentle strokes against the direction of hair growth. The bump-free technology helps prevent irritation.
 - The T-blade design allows for precise detailing around ears, necklines, and facial hair.

4. **Adjusting Blades (Zero-Gap):** The T-Outliner blades can be adjusted for a "zero-gap" cut for an even closer shave. Refer to online tutorials or a qualified professional for precise adjustment to avoid skin irritation.
5. **Power Off:** After use, slide the on/off switch to the "Off" position and unplug the trimmer from the electrical outlet.



Image: A man using the Andis T-Outliner to precisely trim his beard, demonstrating the trimmer's capability for sharp lines.

MAINTENANCE

- **Cleaning Blades:** After each use, brush away any loose hair from the blades using the cleaning brush provided. For a more thorough clean, you can use a clipper cleaning spray.
- **Oiling Blades:** Regularly oil the blades to maintain their sharpness and ensure smooth operation. Apply 1-2 drops of clipper oil to the front and sides of the blades while the trimmer is running. Wipe off any excess oil.
- **Storage:** Store the trimmer in a cool, dry place. Use the hanger loop on the cord for convenient storage.
- **Blade Replacement:** Over time, blades may dull. The carbon steel T-blades are designed for longevity, but replacement blades are available. To replace, unscrew the two bolts holding the blade assembly, remove the old blade, and install the new one, securing it with the bolts.



TROUBLESHOOTING

Problem	Possible Cause	Solution
Trimmer not turning on	Not plugged in; power outlet issue; switch off	Ensure cord is securely plugged in. Test outlet with another device. Check on/off switch position.
Blades pulling or snagging hair	Dull blades; insufficient oil; hair buildup	Clean and oil blades. If problem persists, consider replacing blades.
Excessive noise or vibration	Loose blade screws; internal motor issue	Tighten blade screws. If noise continues, contact customer support.
Trimmer getting hot	Prolonged use; lack of lubrication	Allow trimmer to cool down. Ensure blades are properly oiled.

SPECIFICATIONS

- **Model Number:** 04780
- **Brand:** Andis
- **Power Source:** Corded Electric
- **Blade Type:** Carbon Steel T-Blade
- **Product Dimensions:** 8.07 x 5.28 x 2.8 inches
- **Item Weight:** 11.2 ounces
- **Cord Length:** 8 feet
- **Recommended Uses:** Beard, Hair, Sideburns, Mustache Trimming

WARRANTY AND SUPPORT

For warranty information, product registration, or technical support, please visit the official Andis website or contact their customer service department. Keep your purchase receipt as proof of purchase for any warranty claims.

You can visit the official Andis Store for more products and information:[Andis Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question