

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Gillette Venus](#) /
- › [Gillette Venus Mini Facial Hair Remover User Manual](#)

## Gillette Venus 80715264

# Gillette Venus Mini Facial Hair Remover User Manual

Model: 80715264

## INTRODUCTION

---

The Gillette Venus Mini Facial Hair Remover is a compact and effective electric shaver designed for gentle and discreet hair removal on the face. Its unique rotary cutting system and thin protective foil provide a smooth shave without tugging or cutting the skin. Equipped with a smart light, it helps to spot and target even the finest hairs, making it ideal for areas like the upper lips, chin, cheeks, forehead, and jawline. This device is battery-powered, portable, and easy to maintain, making it suitable for both at-home use and on-the-go touch-ups. It is dermatologically tested and developed by design experts at Braun.



Figure 1: Gillette Venus Mini Facial Hair Remover and its packaging, showing the shaver, AA battery, and cleaning brush.

## PRODUCT OVERVIEW

The Gillette Venus Mini Facial Hair Remover features a thoughtful design for optimal performance and user convenience.

- **Rotary Cutting System:** Ensures a smooth shave without tugging or cutting.
- **Thin Protective Foil:** Provides a close shave while protecting the skin.
- **Smart Light:** Illuminates fine hairs for precise removal.
- **Compact and Ergonomic Design:** Easy to hold and use, perfect for portability.
- **Battery Powered:** Operates on one AA battery (included).

**rotary system  
removes hair gently**

**precision  
smart  
light**

**compact &  
ergonomic  
for on-the-go**

Figure 2: The device in hand, illustrating its rotary system for gentle hair removal, precision smart light, and compact, ergonomic design for on-the-go use.

## SETUP

### Battery Installation

The device comes with one AA battery. To install or replace the battery:

1. Ensure the device is turned off.
2. Twist the bottom cap of the device counter-clockwise to open the battery compartment.
3. Insert one AA battery, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
4. Twist the bottom cap clockwise to securely close the battery compartment.

# Rotary system gently removes hair



Figure 3: A close-up view of the rotary cutting system, which gently removes hair.

## OPERATING INSTRUCTIONS

---

To use the Gillette Venus Mini Facial Hair Remover for effective and gentle hair removal:

1. **Prepare Your Skin:** Ensure your skin is clean and dry before use.
2. **Turn On:** Remove the protective cap. Turn the switch cap (the silver ring) to position "I" to switch on the appliance. The smart light will illuminate.
3. **Hair Removal:** Guide the shaver head gently across your skin. You can use it in linear or circular motions, depending on your preference and the area being treated. The smart light helps to spot and target fine hairs, especially in tricky areas like the upper lip, chin, cheeks, forehead, and jawline.
4. **Post-Use:** After use, turn the switch cap back to position "O" to turn off the device. Replace the protective cap.

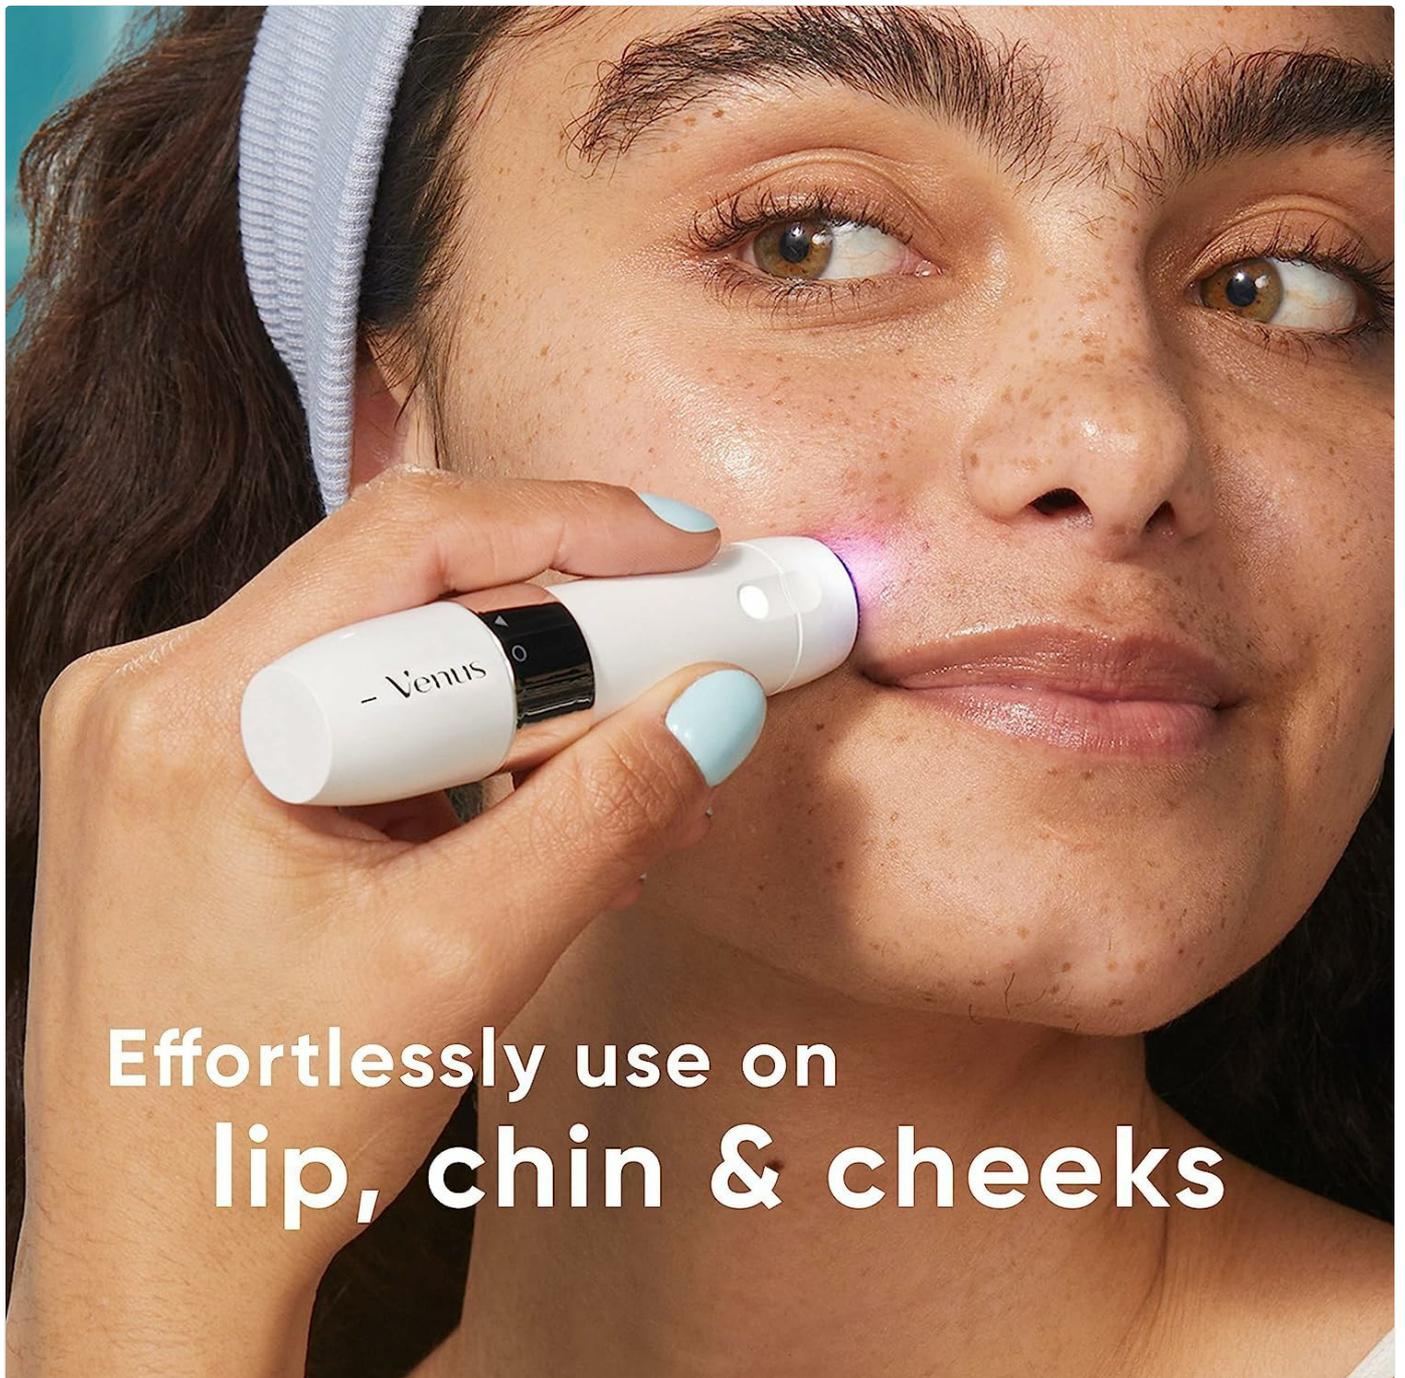


Figure 4: Effortlessly use the device on areas like the upper lip, chin, and cheeks for smooth results.

# Built-in smart light to spot hairs

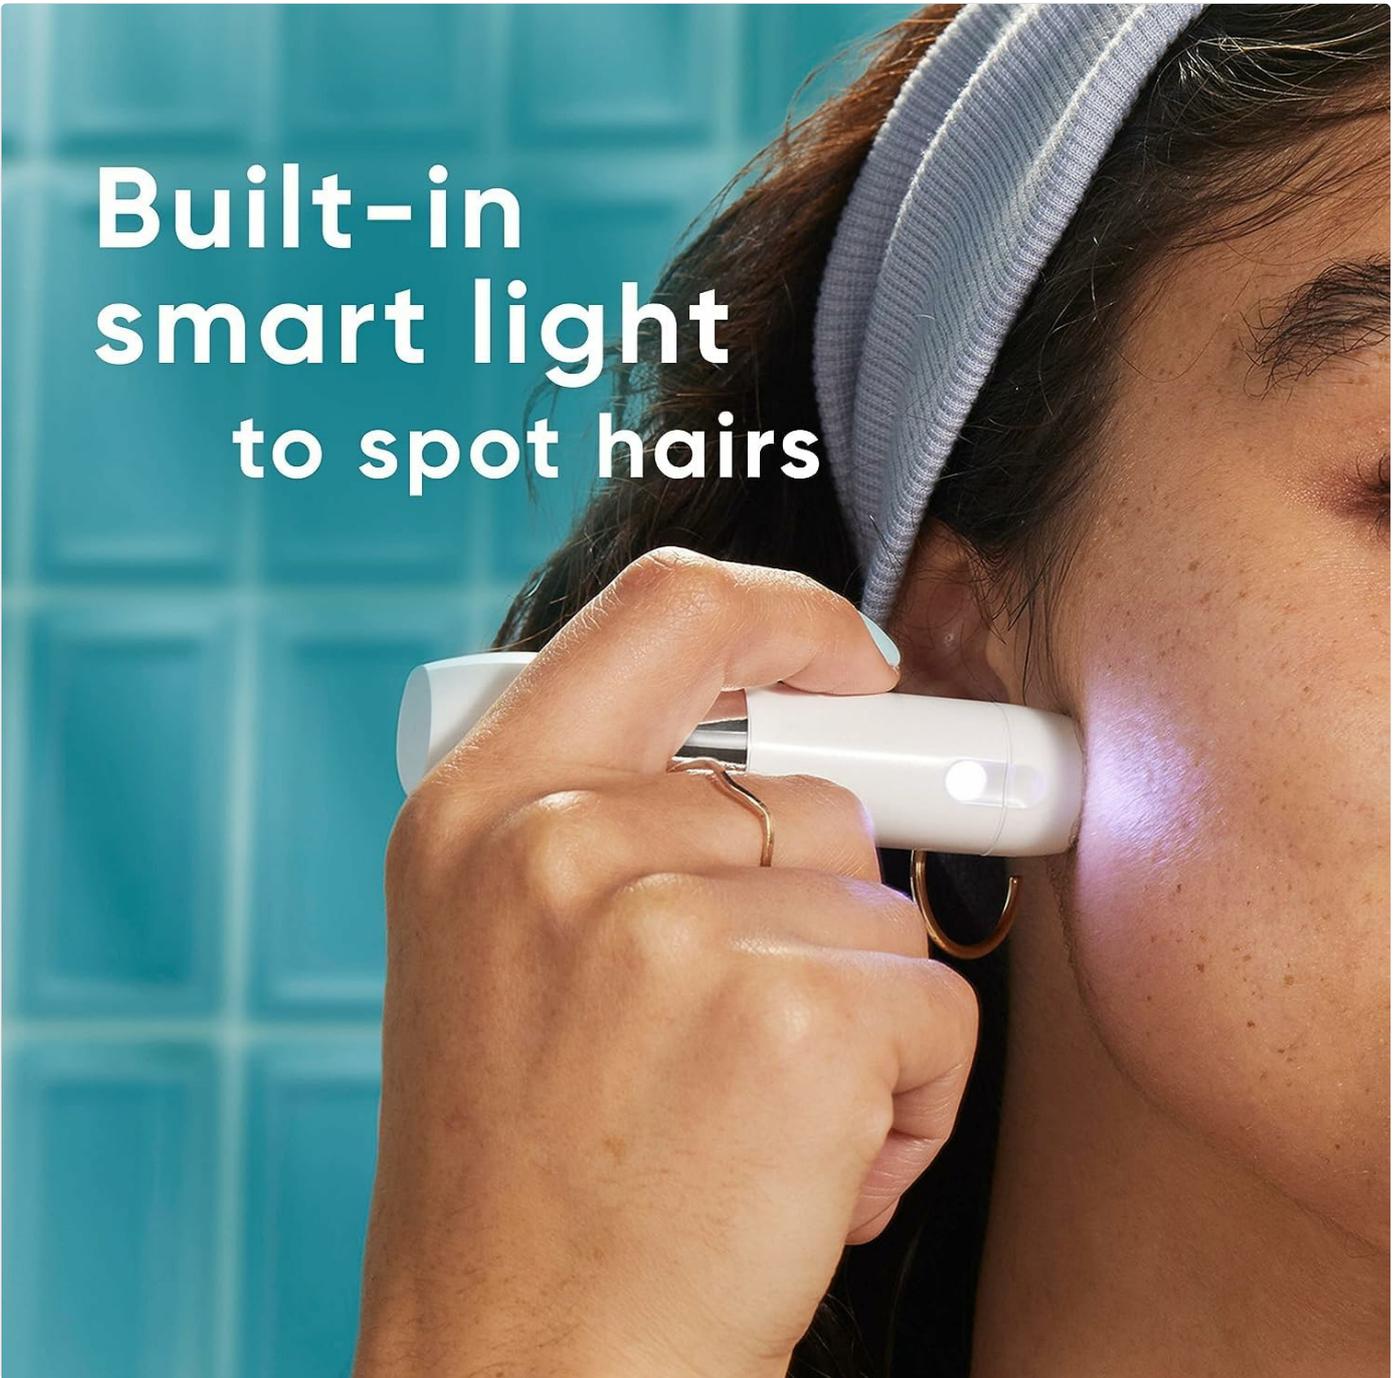


Figure 5: The built-in smart light helps to spot and target even the finest hairs for thorough removal.

## MAINTENANCE

---

### Cleaning the Shaver Head

Regular cleaning ensures optimal performance and hygiene:

1. Ensure the device is turned off.
2. Turn the shaver head (the top part) counter-clockwise and pull it off.
3. Gently tap it on a flat surface to dislodge any loose hairs.
4. Use the included cleaning brush to remove any remaining hairs from the shaver head and the device body. Do not wash the blade with water.
5. To reattach the shaver head, align it with the device body and turn clockwise until it clicks into place.

### Storage

Store the device in a dry place, away from direct sunlight and moisture. Always replace the protective cap after use to protect the shaver head.



Figure 6: The compact design allows for easy touch-ups on-the-go, fitting discreetly into a makeup bag.

## TROUBLESHOOTING

| Problem                            | Possible Cause                                | Solution  |
|------------------------------------|---|---|
| Device does not turn on.           | Battery is dead or incorrectly inserted.      | Check battery polarity. Replace with a new AA battery if necessary.   |
| Device is not shaving effectively. | Shaver head is clogged with hair or worn out. | Clean the shaver head thoroughly using the cleaning brush. If performance does not improve, consider replacing the shaver head. |

| Problem                    | Possible Cause                        | Solution   |
|----------------------------|---------------------------------------|--|
| Skin irritation after use. | Improper technique or sensitive skin. | Ensure you are using gentle, light pressure. Avoid going over the same area multiple times. If irritation persists, consult a dermatologist. |

## SPECIFICATIONS

| Feature           | Detail   |
|-------------------|--|
| Model Number      | 80715264   |
| Power Source      | 1 x AA Battery (1.5V)  |
| Special Feature   | Cordless, Smart Light  |
| Recommended Use   | Facial Hair Removal (Upper Lip, Chin, Cheeks, Forehead, Jawline) |
| Dimensions        | 8.46 x 4.02 x 1.54 inches (Package)                              |
| Weight            | 1.19 Pounds (Package)  |
| Manufacturer      | Procter & Gamble   |
| Country of Origin | Canada   |

## SAFETY INFORMATION

Please read and understand all safety instructions before using the appliance. Keep these instructions for future reference.

- Replace battery with caution to avoid electric shock.
- Avoid contact with eyes.
- Keep the appliance dry.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning safe use of the appliance and understand the hazards involved.
- Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Do not recharge non-rechargeable batteries. Remove rechargeable batteries from the appliance before charging.
- Batteries may leak if empty or not used for a long time. Remove exhausted batteries in a timely manner and avoid skin contact whilst handling leaking batteries.
- Dispose of batteries safely.
- Do not short-circuit battery terminals.
- Do not use the appliance on irritated skin.
- Do not use with a damaged shaver head.
- For hygienic reasons, the appliance should only be used by one person.

## WARRANTY AND SUPPORT

This product contains a battery and recyclable electronic waste. To protect the environment, do not dispose of it in household waste, but take it to appropriate collection points for recycling.

This guarantee does not cover: damage due to improper use, normal wear and tear, as well as defects that have a

negligible effect on the value or operation of the appliance. The guarantee becomes void if repairs are undertaken by unauthorized persons and if original Braun parts are not used.

To obtain service within the guarantee period, hand-in or send the complete appliance with your sales receipt to an authorized Braun Customer Service Centre. For more information, please visit [www.braun.com](http://www.braun.com).