

NEWTRY B0BJ1M15F1

NEWTRY Electric Cigarette Rolling Machine User Manual

Model: B0BJ1M15F1

INTRODUCTION

This manual provides detailed instructions for the safe and efficient operation of your NEWTRY Electric Cigarette Rolling Machine. Please read this manual thoroughly before using the device to ensure proper function and longevity.

IMPORTANT SAFETY INFORMATION

- Keep the device away from water and moisture. Do not operate with wet hands.
- Do not insert fingers or foreign objects into the tobacco chamber or tube during operation.
- Use only dry, finely cut tobacco. Damp or excessively long tobacco may cause clogging and damage to the machine.
- Unplug the device from the power outlet when not in use, before cleaning, or if any malfunction occurs.
- Keep out of reach of children and pets.
- Do not attempt to disassemble or repair the machine yourself. Contact qualified service personnel for assistance.

PACKAGE CONTENTS

Verify that all items are present in your package:

- NEWTRY Electric Cigarette Rolling Machine
- Power Adapter
- Stirring Rod
- Cleaning Brush
- Removable Tobacco Tray



Image showing the NEWTRY Electric Cigarette Rolling Machine along with its power adapter, stirring rod, cleaning brush, and removable tobacco tray.

SETUP

Before first use, follow these simple setup steps:

1. **Placement:** Place the machine on a stable, flat, and dry surface.
2. **Attach Tray:** Ensure the removable tobacco tray is correctly attached to the front of the machine.
3. **Power Connection:** Connect the power adapter to the machine's power input port, then plug the adapter into a standard electrical outlet.

OPERATING INSTRUCTIONS

Follow these steps to efficiently create your cigarettes:

1. **Prepare Tobacco:** Ensure your tobacco is dry and cut to an appropriate size. Avoid overfilling the hopper, as this can lead to clogging.

2. **Insert Cigarette Tube:** Place an empty cigarette tube (suitable for 0.31-inch diameter) onto the metal nozzle on the left side of the machine. Ensure it is fully seated. The machine is designed to fit king size 100's cigarettes.
3. **Adjust Tightness:** Use the knob on the machine to adjust the tobacco packing tightness. There are four adjustable levels. Turning the knob to the right generally increases tightness, while turning it to the left decreases it. Experiment with different settings to find your preferred cigarette density.
4. **Fill Hopper:** Gently place the prepared tobacco into the hopper. Use the provided stirring rod to evenly distribute the tobacco and ensure it feeds smoothly into the machine's mechanism.
5. **Start Rolling:** Press and hold the power button. The machine will automatically inject the tobacco into the cigarette tube. For a potentially tighter pack, you may gently push the butt of the cigarette tube while the machine is operating.
6. **Remove Cigarette:** Once the process is complete and the tube is filled, release the power button and carefully remove the newly filled cigarette.



Visual guide demonstrating the four steps of operating the cigarette rolling machine: adjusting the knob, inserting the tube, pressing the power button, and the resulting cigarette.

Your browser does not support the video tag.

An official video from NEWTRY demonstrating the operation of the electric cigarette rolling machine, including tobacco loading, tube insertion, and the rolling process.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your machine:

1. **Unplug:** Always unplug the machine from the power outlet before performing any cleaning or maintenance.
2. **Empty Tray:** Remove the detachable tobacco tray and discard any remaining tobacco. The tray can be rinsed with water and dried thoroughly before reattaching.
3. **Clean Hopper:** Use the provided cleaning brush to remove any tobacco residue from the hopper and around the injection mechanism.
4. **Clear Nozzle:** Use the stirring rod or a thin, non-abrasive tool to clear any blockages in the metal nozzle.
5. **Wipe Exterior:** Wipe the exterior surfaces of the machine with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners.

Removable Tray

Increase the use of the tobacco



Image illustrating the removable tobacco tray being detached from the machine, allowing for easy cleaning and tobacco recovery.



Stirring Rod & Brush Offered

Users are easy to roll perfect cigarettes and clean the machine



Image showing the included stirring rod and cleaning brush, essential tools for maintaining the machine and ensuring smooth operation.

TROUBLESHOOTING

Common Issues and Solutions

- Cigarettes are too loose or too tight:**
Solution: Adjust the tightness knob on the machine. Turn right for tighter packing, left for looser. Experiment with different settings and tobacco types to achieve your desired density.
- Tobacco clogging:**
Solution: Ensure tobacco is dry and properly cut. Use the stirring rod to break up any clumps in the hopper. Do not overfill the hopper. If a blockage occurs in the nozzle, unplug the machine and carefully clear it with the stirring rod.
- Cigarette tube not filling completely:**
Solution: Check for tobacco blockages in the nozzle or feeding mechanism. Ensure the tube is fully seated on the nozzle. Verify tobacco consistency is not too damp or too coarse, which can hinder proper injection.
- Tobacco falling out (cherry fall):** This issue often occurs if the tobacco is too dry or packed too loosely.

- Solution 1:** Lightly spray tobacco with a small amount of water or alcohol and place it in an airtight container overnight to rehydrate it slightly. This can improve its packing consistency.
- Solution 2:** Ensure you are using an appropriate tightness setting for your tobacco type. A slightly tighter setting may be required.
- Solution 3:** Stir the tobacco in the hopper while rolling to ensure even distribution and consistent packing into the tube.



Visual instructions on how to prevent tobacco from falling out of the cigarette, suggesting rehydrating dry tobacco and stirring it during the rolling process.

SPECIFICATIONS

Feature	Detail
Model	B0BJ1M15F1
Brand	NEWTRY
Tube Diameter	0.31 inches (8mm)
Tube Length	3.15 inches
Adjustable Tightness	4 Gear Levels
Power Source	Electric (via included adapter)
Package Dimensions	10.04 x 5.12 x 4.92 inches
Weight	1.52 Pounds

Thickened Tube

Tighter cigarettes and smoother rolling



Close-up view of the machine's thickened tube, highlighting its 0.31-inch diameter and 3.15-inch length, designed to prevent tobacco clogging.

4 Gears Adjustable

From right to left, slack to tight



Image showing the adjustment knob for the 4 gear tightness settings, allowing users to customize cigarette density.

HOW TO OPERATE?



STEP 1

Turn button to the far right



STEP 2

Insert the tube and turn the button to the left to adjust the tightness



STEP 3

Press the power button and push the butt of the cigarette with one hand



STEP 4

A perfect cigarette is made!

Detailed view of various machine components including the thickened tube, upgraded spring mechanism, removable tray, and the power button with LED indicator.

WARRANTY AND SUPPORT

For detailed warranty information, product registration, or customer support, please refer to the documentation included with your product packaging. You may also visit the official NEWTRY website for additional resources and contact options.

This manual is for informational purposes only.
© 2025 NEWTRY. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question