

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Walker Edison](#) /
- › [Walker Edison Reema Fluted 4-Door Kitchen Sideboard Buffet Console User Manual](#)

Walker Edison REED5DCOBL

Walker Edison Reema Fluted 4-Door Kitchen Sideboard Buffet Console User Manual

Model: REED5DCOBL | Brand: Walker Edison

INTRODUCTION

Thank you for choosing the Walker Edison Reema Fluted 4-Door Kitchen Sideboard Buffet Console. This versatile piece is designed to enhance your living space with both style and functionality. Its minimal build and versatile storage make it suitable for various uses, from a kitchen sideboard to a media stand. This manual provides essential information for safe assembly, proper use, and effective maintenance of your new furniture.

SAFETY INFORMATION

Please read and understand all safety warnings before assembly and use. Failure to follow these instructions may result in injury or damage to the product.

- Always place the sideboard on a flat, stable, and level surface.
- Do not exceed the maximum weight limit of **150 pounds** for the entire unit. Distribute weight evenly across shelves.
- For added stability and safety, especially in homes with children or pets, consider anchoring the unit to a wall using appropriate hardware (not always included, but recommended).
- Keep all small parts and packaging materials away from children during assembly to prevent choking hazards.
- Exercise caution when moving the assembled unit to prevent tipping or damage.

PACKAGE CONTENTS

Before beginning assembly, ensure all parts are present and undamaged. Refer to the included Assembly Guide for a detailed list of components and hardware.

- 4-Door Sideboard Components
- Assembly Guide
- Hardware Pack (screws, dowels, hinges, handles, etc.)

If any parts are missing or damaged, please contact Walker Edison customer support immediately.

SETUP AND ASSEMBLY

Assembly is required for this product. Please follow the step-by-step instructions provided in the separate **Assembly Guide** included in your package. It is recommended to assemble the unit in the room where it will be used.



Image: The assembled Walker Edison Reema Fluted 4-Door Kitchen Sideboard Buffet Console in Coastal Oak/Black.

Key Assembly Tips:

- Lay out all components on a soft, clean surface to prevent scratches.
- Identify all hardware pieces before starting.
- **Door Alignment:** The doors may require fine-tuning after initial assembly to ensure they are perfectly even and close smoothly. The assembly guide provides instructions on how to adjust the screws on the door hinges. These adjustments typically allow for vertical, horizontal, and depth alignment. Patience during this step will result in a polished appearance.

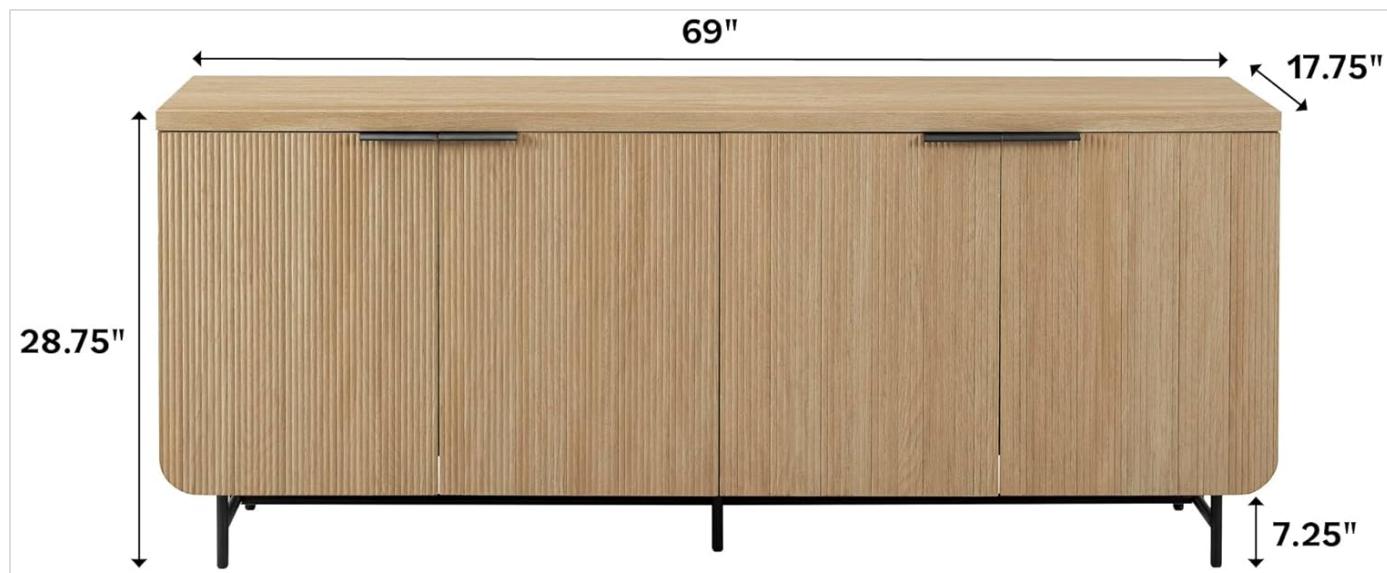


Image: Detailed dimensions of the sideboard: 69 inches wide, 17.75 inches deep, and 28.75 inches high.

OPERATING INSTRUCTIONS

Your Walker Edison Reema Sideboard is designed for versatile use and storage.

Storage and Organization:

- The unit features four doors that open to reveal spacious compartments.
- Adjustable shelves within the compartments allow you to customize the storage space to fit various items, such as dishware, books, linens, or board games.
- The fluted doors provide a sleek and discreet way to keep your belongings organized and out of sight.



Image: The interior of the sideboard showing two adjustable shelves, providing ample storage space for various items.

Media Console Use:

- The wide top surface can accommodate televisions up to 75 inches, making it an ideal media console.
- Utilize the internal compartments to store media devices, cables, and accessories, maintaining a tidy entertainment area.



Image: The sideboard functioning as a TV stand in a modern living room setting, showcasing its suitability for media equipment.

MAINTENANCE

Proper care will help maintain the appearance and longevity of your sideboard.

- **Cleaning:** Wipe surfaces with a dry, soft cloth to remove dust and fingerprints.
- **Avoid Harsh Cleaners:** Do not use abrasive cleaners, strong chemicals, or polishes that contain silicone, as these can damage the laminate finish.
- **Spills:** Immediately wipe up any spills with a dry cloth to prevent moisture damage or staining.
- **Sunlight:** Avoid prolonged exposure to direct sunlight, which can cause fading or discoloration over time.

TROUBLESHOOTING

Here are solutions to common issues you might encounter:

- **Uneven or Misaligned Doors:** This is a common issue that can be resolved by adjusting the hinges. Each hinge typically has three adjustment screws: one for vertical alignment, one for horizontal alignment, and one for depth. Refer to your Assembly Guide for specific instructions on hinge adjustment. Small, incremental turns of these screws can significantly improve door alignment.
- **Wobbly Unit:** Ensure the unit is placed on a level surface. Check that all assembly screws are tightened securely. The middle leg provides extra stability; ensure it is properly installed and making contact with the floor.
- **Missing or Damaged Parts:** If you discover any missing or damaged components upon unboxing, do not proceed with assembly. Contact Walker Edison customer support immediately for replacement parts.

SPECIFICATIONS

Brand	Walker Edison
Model Name	Reema
Product Dimensions	17.75"D x 69"W x 28.75"H
Item Weight	115.8 Pounds
Weight Limit	150 Pounds
Material	Engineered Wood
Finish Type	Laminate
Number of Shelves	2 (Adjustable)
Number of Doors	4
Mounting Type	Floor Mount
Assembly Required	Yes

WARRANTY INFORMATION

This Walker Edison product is covered by a **90-day manufacturer's warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims.

CUSTOMER SUPPORT

For any questions, assistance with assembly, or to request replacement parts, please contact Walker Edison customer support:

Phone: [1-801-433-3008](tel:18014333008)

Email: service@walkeredison.com

Replacement parts are available. Please contact Walker Edison within 30 days of delivery for any issues.

QUESTIONS? We can help you.



1-801-433-3008

or email **service@walkeredison.com**

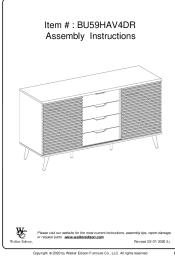
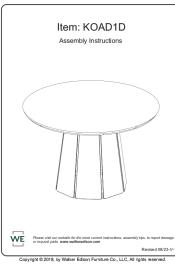
Replacement parts now available.

Please contact Walker Edison within 30 days of delivery.

Image: Contact information for Walker Edison customer support, including phone number and email address.

© 2025 Walker Edison. All rights reserved.

Related Documents - REED5DCOBL

 <p>Item # : BU59HAV4DR Assembly Instructions</p> <p>WE Please visit our website for the most current instructions, assembly tips, repair damage Repair Service Assembly Instructions Copyright © 2014 by Walker Edison Furniture Co., LLC. All rights reserved. Version 02-07-2014-1 1</p>	<p>Walker Edison BU59HAV4DR Assembly Instructions for Sideboard</p> <p>Comprehensive assembly guide for the Walker Edison BU59HAV4DR sideboard, detailing parts, hardware, and step-by-step instructions for a safe and correct build.</p>
 <p>Item: KOAD1D Assembly Instructions</p> <p>WE Please visit our website for the most current instructions, assembly tips, repair damage Repair Service Assembly Instructions Copyright © 2014 by Walker Edison Furniture Co., LLC. All rights reserved. Version 02-07-2014-1 1</p>	<p>Walker Edison KOAD1D Round Dining Table Assembly Instructions</p> <p>Step-by-step assembly instructions for the Walker Edison KOAD1D round dining table. Includes parts list, hardware list, and assembly guidelines.</p>
 <p>HEAO Rollator Walker with Seat Instruction Manual</p> <p>HEAO Walkers & Rollators</p> <p>Note: This manual is for the HEAO Rollator Walker with Seat.</p>	<p>HEAO Rollator Walker with Seat Instruction Manual</p> <p>Comprehensive instruction manual for the HEAO Rollator Walker with Seat, detailing part lists, assembly, folding, braking, and height adjustment.</p>
 <p>WE Bronx 6-Drawer Dresser Assembly Guide</p>	<p>Walker Edison Bronx 6-Drawer Dresser Assembly Guide</p> <p>Comprehensive assembly guide for the Walker Edison Bronx 6-Drawer Dresser, featuring estimated assembly time, required tools, safety warnings, detailed step-by-step instructions, and parts lists for a successful setup.</p>
 <p>Item # : W70SBD Assembly Instructions</p> <p>WE Please visit our website for the most current instructions, assembly tips, repair damage Repair Service Assembly Instructions Copyright © 2014 by Walker Edison Furniture Co., LLC. All rights reserved. Version 02-07-2014-1 1</p>	<p>Walker Edison W70SBD TV Stand Assembly Instructions</p> <p>Detailed assembly instructions for the Walker Edison W70SBD TV Stand, including parts list, hardware list, and step-by-step guidance for building your furniture.</p>



Walker Edison NOAM3F2 Assembly Instructions

Detailed assembly guide for the Walker Edison NOAM3F2 TV stand or media console, including parts list and step-by-step instructions for home assembly.