

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [VOSTERIO](#) /

› Bluetooth Record Player with Built-in Speakers, Modern 3-Speed Turntable, USB Playback and Vinyl to MP3 Recording, Vinyl Player in Piano Design- Black User Manual

VOSTERIO B-629-7

VOSTERIO Bluetooth Record Player

Model: B-629-7

User Manual

1. INTRODUCTION

Thank you for purchasing the VOSTERIO Bluetooth Record Player. This manual provides essential information for the safe and efficient operation of your new device. Please read this manual thoroughly before use and retain it for future reference.

2. PRODUCT OVERVIEW

2.1 Components

Familiarize yourself with the various parts of your record player:



Image: Top-down view of the record player with labels pointing to key components such as the tone arm, stylus, speed selector, and control panel.

- **45 Single Adaptor:** Used for playing 7-inch records with large center holes.
- **Tone Arm Lifter:** Raises and lowers the tone arm gently.
- **Tone Arm:** Holds the cartridge and stylus.
- **Auto Stop On/Off Switch:** Controls whether the turntable stops automatically at the end of a record.
- **Speed Selector:** Allows selection of 33 1/3, 45, or 78 RPM playback speeds.
- **Tone Arm Rest and Security Latch:** Secures the tone arm when not in use.
- **Cartridge / Stylus:** Reads the grooves of the record.
- **Turntable Platter:** Where the record is placed.
- **Power In (DC 5V):** Connection for the power adapter.
- **Line Out (R&L):** RCA outputs for connecting to external amplifiers or powered speakers.
- **USB Port:** For USB playback and recording vinyl to MP3.
- **AUX IN:** 3.5mm input for connecting external audio devices.
- **Power Switch & Volume Control:** Turns the unit on/off and adjusts volume.

- **Power Indicator / Bluetooth Indicator:** LED light indicating power status (red) and Bluetooth connection (blue).

2.2 Key Features

- **Multi-Speed Playback:** Supports 33 1/3, 45, and 78 RPM for 7", 10", and 12" vinyl records.
- **Integrated Audio:** Features dual stereo built-in speakers for clear sound.
- **Versatile Connectivity:** Includes Aux input, RCA output, Bluetooth input, and Bluetooth output.
- **Unique Design:** Classic piano design with a functional 36-key keyboard, including 3 percussion instrument keys.
- **Digital Functions:** USB playback and direct vinyl-to-MP3 recording to a USB stick.
- **User-Friendly Interface:** Equipped with an operation panel and LED display for easy mode selection.

3. SAFETY INFORMATION

Please observe the following safety precautions to prevent electric shock, fire, or damage to the unit:

- Do not install near any heat sources such as radiators, heaters, or other devices that generate heat.
- Unplug the unit from the A/C mains socket during lightning storms or when unused for long periods of time.
- To reduce the risk of fire or electric shock, do not expose the unit to rain, moisture, dripping or splashing, and no objects filled with liquids, such as vases, must be placed on the unit.
- DO NOT overload wall outlets or extension cords beyond their rated capacity as this can cause an electric shock or fire.
- No naked flame sources, such as lit candles, should be placed on the unit.
- The ventilation openings should not be blocked by covering them with items such as newspapers, tablecloths, curtains, etc.

4. SETUP

Follow these steps to set up your record player:

1. **Unpack:** Carefully remove all components from the packaging.
2. **Attach Feet:** Screw the provided feet into the designated holes on the bottom of the unit until secure.
3. **Placement:** Place the record player on a stable, level surface away from direct sunlight, heat sources, and excessive dust or vibrations. Ensure adequate ventilation around the unit.
4. **Power Connection:** Connect the DC 5V power adapter to the "Power In" port on the back of the unit, then plug the adapter into a wall outlet.
5. **Dust Cover:** Ensure the dust cover is properly positioned or removed before operation.



Image: The VOSTERIO record player in its piano design, ready for use with a vinyl record on the platter.

5. OPERATING INSTRUCTIONS

5.1 Playing Vinyl Records

1. **Power On:** Turn the Power Switch & Volume Control knob clockwise to turn on the unit. The power indicator will light up red.
2. **Select Speed:** Set the Speed Selector to the appropriate speed (33 1/3, 45, or 78 RPM) for your record. Use the 45 single adaptor for 7-inch records if needed.
3. **Place Record:** Carefully place a vinyl record on the turntable platter.
4. **Release Tone Arm:** Gently release the Tone Arm from its rest.
5. **Position Stylus:** Use the Tone Arm Lifter to raise the tone arm, then manually position the stylus over the desired starting groove of the record.

6. **Lower Tone Arm:** Slowly lower the Tone Arm Lifter to allow the stylus to descend onto the record. Playback will begin.
7. **Adjust Volume:** Rotate the Volume Control knob to adjust the sound level.
8. **Auto Stop:** If the Auto Stop switch is ON, the turntable will stop spinning automatically when the record finishes. If OFF, it will continue to spin.
9. **End Playback:** At the end of playback, use the Tone Arm Lifter to raise the tone arm, return it to the Tone Arm Rest, and secure it with the latch. Turn the Power Switch & Volume Control knob counter-clockwise to turn off the unit.

5.2 Bluetooth Connectivity

Your record player supports both Bluetooth input (receiving audio) and Bluetooth output (transmitting audio).

5.2.1 Bluetooth Input (Using as a Bluetooth Speaker)

1. **Power On:** Turn on the record player.
2. **Select Bluetooth Mode:** Press the "MODE" button until the Bluetooth indicator light turns blue and flashes, indicating pairing mode.
3. **Pair Device:** On your smartphone, tablet, or laptop, enable Bluetooth and search for "VOSTERIO B-629-7" (or similar device name). Select it to pair.
4. **Play Audio:** Once paired, the blue indicator light will stop flashing. You can now play audio from your device through the record player's built-in speakers.

Playable Piano Keyboards



Image: The record player wirelessly connected to a smartphone via Bluetooth, demonstrating its use as a Bluetooth speaker.

5.2.2 Bluetooth Output (Connecting to External Bluetooth Devices)

1. **Power On:** Turn on the record player and ensure it is in Vinyl or USB playback mode.
2. **Activate Pairing on External Device:** Put your external Bluetooth speaker, soundbar, or headphones into pairing mode.
3. **Initiate Bluetooth Output:** Press and hold the "MODE" button until the Bluetooth indicator light turns blue and flashes rapidly, indicating it is searching for an external Bluetooth device.
4. **Connect:** The record player will automatically connect to the nearest available Bluetooth device in pairing mode. Once connected, the blue indicator light will stop flashing. Audio from the record player will now be transmitted to the external Bluetooth device.



Image: Visual representation of the record player's Bluetooth output capability, connecting to various external audio receivers like earphones, soundbars, and speakers.

5.3 USB Playback

1. **Insert USB:** Insert a USB flash drive containing MP3 audio files into the USB port.
2. **Select USB Mode:** Press the "MODE" button until the unit enters USB playback mode. The LED display will show track information.
3. **Control Playback:** Use the "PLAY/PAUSE", "PREV", and "NEXT" buttons to control audio playback.

5.4 Vinyl to MP3 Recording

You can convert your vinyl records directly to MP3 files on a USB stick.

1. **Prepare USB:** Ensure a USB flash drive is inserted into the USB port.
2. **Start Vinyl Playback:** Begin playing the vinyl record you wish to record (refer to section 5.1).
3. **Start Recording:** While the vinyl is playing, press and hold the "MODE" button until the LED display indicates

recording has started.

4. **Stop Recording:** Press the "PLAY/PAUSE" button to stop the recording. The recorded MP3 file will be saved to the USB drive.

5.5 Piano Keyboard Function

The integrated piano keyboard is fully functional and can be played independently or along with music.



Image: The record player highlighting its playable piano keyboard feature, with musical notes visually representing sound.

- **Playing Keys:** Simply press the black and white keys to produce piano sounds.
- **Percussion Instruments:** The three black keys on the far right of the keyboard function as percussion instruments. Press them to activate drum sounds.
- **Volume Control:** The volume of the keyboard is controlled by the main Volume Control knob.

PRODUCT SAFETY WARNING

(UK)

1. Do not install near any heat sources such as radiators, heaters, or other devices that generate heat.
2. Unplug the unit from the A/C mains socket during lightning storms or when unused for long periods of time.
3. To reduce the risk of fire or electric shock, do not expose the unit to rain, moisture, dripping or splashing, and no objects filled with liquids, such as vases, must be placed on the unit.
4. DO NOT overload wall outlets or extension cords beyond their rated capacity as this can cause any electric shock or fire.
5. No naked flame sources, such as lit candles, should be placed on the unit.
6. The ventilation openings should not be blocked by covering them with items such as newspapers, tablecloths, curtains, etc.

(DE)

1. Stellen Sie das Gerät nicht in der Nähe von Wärmequellen wie Heizkörpern, Heizungen oder anderen Geräten auf, die Wärme erzeugen.
2. Trennen Sie das Gerät bei Gewitter oder bei längerer Nichtbenutzung von der Netzsteckdose.
3. Um die Gefahr eines Brandes oder elektrischen Schlages zu verringern, setzen Sie das Gerät nicht Regen, Feuchtigkeit, Tropfen oder Spritzern aus, und stellen Sie keine mit Flüssigkeiten gefüllten Gegenstände, wie z. B. Vasen, auf das Gerät.
4. Überlasten Sie Steckdosen oder Verlängerungskabel NICHT über ihre Nennkapazität hinaus, da dies zu einem elektrischen Schlag oder Brand führen kann.
5. keine offenen Flammen, wie z.B. brennende Kerzen, auf das Gerät gestellt werden dürfen.
6. die Lüftungsöffnungen dürfen nicht durch Gegenstände wie Zeitungen, Tischdecken, Vorhänge usw. verdeckt werden.

(FR)

1. ne pas installer l'appareil à proximité de sources de chaleur telles que des radiateurs, des appareils de chauffage ou d'autres dispositifs générant de la chaleur.
2. débrancher l'appareil de la prise secteur pendant les orages ou lorsqu'il n'est pas utilisé pendant de longues périodes.
3. pour réduire les risques d'incendie ou d'électrocution, ne pas exposer l'appareil à la pluie, à l'humidité, aux gouttes ou aux éclaboussures, et ne pas placer d'objets remplis de liquides, tels que des vases, sur l'appareil.
4. ne pas surcharger les prises murales ou les rallonges au-delà de leur capacité nominale, sous peine de provoquer un choc électrique ou un incendie.
5. aucune source de flamme nue, telle qu'une bougie allumée, ne doit être placée sur l'appareil.
6. les ouvertures de ventilation ne doivent pas être obstruées par des objets tels que des journaux, des nappes, des rideaux.

(IT)

1. Non installare l'apparecchio vicino a fonti di calore come termosifoni, stufe o altri dispositivi che generano calore.
2. Scollegare l'unità dalla presa di corrente durante i temporali o quando non viene utilizzata per lunghi periodi di tempo.
3. Per ridurre il rischio di incendi o scosse elettriche, non esporre l'unità alla pioggia, all'umidità, a gocce o spruzzi e non appoggiare oggetti pieni di liquidi, come vasi, sull'unità.
4. Non sovraccaricare le prese a muro o le prolunghe oltre la loro capacità nominale, poiché ciò può causare scosse elettriche o incendi.
5. Sull'unità non devono essere collocate fonti di fiamme libere, come candele accese.
6. Le aperture di ventilazione non devono essere bloccate coprendole con oggetti quali giornali, tovaglie, tende, ecc.

(ES)

1. No lo instale cerca de fuentes de calor como radiadores, calefactores u otros aparatos que generen calor.
2. Desenchufe la unidad de la toma de corriente de CA durante tormentas eléctricas o cuando no vaya a utilizarla durante largos periodos de tiempo.
3. Para reducir el riesgo de incendio o descarga eléctrica, no exponga la unidad a la lluvia, humedad, goteo o salpicaduras, y no coloque objetos que contengan líquidos, como jarrones, sobre la unidad.
4. No sobrecargue las tomas de corriente ni los cables alargadores por encima de su capacidad nominal, ya que esto puede provocar una descarga eléctrica o un incendio.
5. No deben colocarse sobre la unidad fuentes de llamas desnudas, como velas encendidas.
6. Las aberturas de ventilación no deben bloquearse cubriéndolas con objetos como periódicos, manteles, cortinas, etc.

Image: Detailed view of the 36-key piano keyboard, showing note labels (C, D, E, F, G, A, B) and highlighting the three percussion instrument keys (Big drum, Small drum, Cymbals).

6. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your record player.

- **Cleaning the Unit:** Use a soft, dry cloth to wipe the exterior of the unit. For stubborn marks, a slightly damp cloth can be used, followed by a dry cloth. Avoid abrasive cleaners or solvents.
- **Stylus Care:** The stylus is delicate. Clean it gently with a soft brush designed for stylus cleaning, brushing from back to front. Avoid touching the stylus with your fingers. Replace the stylus periodically (e.g., every 200-300 hours of playback) to prevent damage to your records and maintain sound quality.
- **Dust Cover:** Keep the dust cover closed when the unit is not in use to protect the turntable and stylus from dust and debris.
- **Record Care:** Keep your records clean and free of dust. Store them vertically in their sleeves to prevent warping.

7. TROUBLESHOOTING

If you encounter issues with your record player, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No Power	Power adapter not connected; outlet not working; unit off.	Ensure power adapter is securely plugged into the unit and a working outlet. Turn the Power Switch & Volume Control knob clockwise to turn on.
No Sound	Volume too low; stylus not properly seated; mode incorrect; external speakers not connected/paired.	Increase volume. Check if stylus is correctly installed and making contact with the record. Ensure correct mode (Vinyl, USB, Bluetooth). If using external speakers, verify connections or Bluetooth pairing.
Skipping or Distorted Sound (Vinyl)	Record is dirty or damaged; stylus is worn or dirty; unit is not level; excessive vibration.	Clean the record. Clean or replace the stylus. Place the unit on a stable, level surface. Avoid placing near vibrating objects.
Bluetooth Connection Issues	Device not in pairing mode; too far from unit; interference.	Ensure both devices are in pairing mode. Keep devices within 30 feet (10 meters). Reduce interference from other wireless devices. Try restarting both devices.
Piano Keyboard Glitches/Distortion	Internal software issue; multiple keys pressed simultaneously causing overload.	Try turning the unit off and on again. If the issue persists, contact customer support.
Turntable Stops Working	Internal mechanical or electrical fault.	If basic troubleshooting (power cycle) does not resolve the issue, contact customer support for assistance.

8. SPECIFICATIONS

Brand	VOSTERIO
Model Name	B-629-7
Product Dimensions	7.87 x 7.85 x 7.87 inches (20 x 19.9 x 20 cm)

Item Weight	12.1 pounds (5.5 Kilograms)
Connectivity Technology	Bluetooth, Auxiliary, USB
Playback Speeds	33 1/3, 45, 78 RPM
Included Components	Turntable
Special Features	Built-in Speakers, Digital Recorder, Dust Cover, Playable Piano Keyboard
Material	Plastic
Color	Black
Manufacturer	VOSTERIO
Date First Available	October 14, 2022

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or contact the retailer/manufacturer directly. VOSTERIO is committed to providing quality products and assistance.

You can visit the official VOSTERIO store for more information: [VOSTERIO Store on Amazon](#)