

[Manuals.plus](#) /

› [ASHATA](#) /

› ASHATA Unlocked Cell Phone Android User Manual

## ASHATA

# ASHATA Unlocked Android Smartphone User Manual

Model: ASHATA 6.1 inch HD Screen 3G Net Smartphone (Blue)

## 1. INTRODUCTION

This manual provides essential information for setting up, operating, and maintaining your new ASHATA Unlocked Android Smartphone. Designed for ease of use, this device features a vibrant 6.1-inch HD screen, a powerful 4000mAh battery, and runs on the Android 6 operating system. It supports dual SIM cards and offers convenient face unlocking technology.

## 2. WHAT'S IN THE BOX

Please verify that all items listed below are included in your product package:

- ASHATA Unlocked Android Smartphone
- Power Adapter
- USB Charging Cable
- SIM Tray Ejector Tool
- Screen Protector (pre-applied or separate)
- Protective Phone Case



Image: The ASHATA Unlocked Android Smartphone shown with its included accessories: power adapter, USB cable, SIM ejector tool, screen protector, and protective case.

### 3. PRODUCT OVERVIEW

Familiarize yourself with the physical components of your smartphone.

#### 3.1 Front View





Image: Front view of the ASHATA smartphone, highlighting the 6.1-inch HD display and front camera notch.

### 3.2 Side View





Image: Side view of the ASHATA smartphone, showing the power button and volume rocker.

### 3.3 Rear View



Image: Rear view of the ASHATA smartphone, displaying the triple camera module and flash.

## 4. SETUP

### 4.1 SIM Card and Memory Card Installation

Your ASHATA smartphone supports dual Nano SIM cards and one MicroSD (TF) card for expandable storage up to 128GB. Follow these steps to install your cards:

1. Locate the SIM card tray on the side of the phone.
2. Insert the SIM tray ejector tool into the small hole next to the tray and press gently until the tray pops out.

3. Carefully pull out the tray.
4. Place your Nano SIM cards into the designated SIM1 and SIM2 slots. Ensure the gold contacts are facing down.
5. If installing a memory card, place it into the MicroSD card slot.
6. Gently push the tray back into the phone until it is flush with the device body.



Image: A diagram illustrating the placement of two Nano SIM cards and one MicroSD (TF) card in the phone's tray.

## 4.2 Initial Power On

To power on your device for the first time:

1. Press and hold the Power button (located on the right side) until the ASHATA logo appears on the screen.
2. Follow the on-screen prompts to complete the initial setup, including language selection, Wi-Fi connection, and Google account setup.

## 5. OPERATING INSTRUCTIONS

### 5.1 Basic Navigation

Your smartphone uses a touchscreen interface. Tap to select, swipe to scroll, and pinch to zoom. The home screen provides access to your apps and widgets.

### 5.2 Making Calls and Sending Messages

Use the Phone app to dial numbers or select contacts. The Messages app allows you to send and receive SMS/MMS messages.

### 5.3 Camera Usage

Your phone is equipped with an 8MP rear camera and a 5MP front camera. Open the Camera app to capture photos and videos.



Image: The phone's 8MP rear camera module and an example of using the 5MP front camera for selfies.

## 5.4 Face Unlocking

For quick and secure access, your phone supports face unlocking. To set it up, navigate to **Settings > Security > Face Unlock** and follow the instructions to register your face. Once set up, simply look at your phone to unlock it.



Image: An illustration depicting the face unlocking technology in action, providing quick access to the device.

## 5.5 Connectivity

The device supports Wi-Fi and Bluetooth for wireless connectivity. Access these options via the Quick Settings panel (swipe down from the top of the screen) or through **Settings > Network & Internet**.

## 6. MAINTENANCE

### 6.1 Battery Charging

The phone is equipped with a 4000mAh battery. Use the provided USB cable and power adapter to charge your device. A full charge typically provides 6-10 hours of talk time or 3-5 hours of gaming.

### 6.2 Storage Management

The phone comes with 8GB of internal storage. To manage your storage, go to **Settings > Storage**. You can free up space by deleting unnecessary files or moving media to an installed MicroSD card.

### 6.3 Software Updates

Your device runs on Android 6. Periodically check for system updates to ensure optimal performance and security.

Go to **Settings > About phone > System update**



Image: The ASHATA smartphone displaying the Android 6 system interface.

## 7. TROUBLESHOOTING

If you encounter issues with your device, refer to the following common solutions:

- **Device not powering on:** Ensure the battery is charged. Connect the charger and wait a few minutes before attempting to power on again.
- **No network signal:** Check if your SIM card is properly inserted. Verify that mobile data is enabled in settings. Contact your network provider to confirm service availability in your area.
- **Apps not downloading/installing:** Ensure you have a stable internet connection (Wi-Fi recommended). Check available storage space. Clear the cache of the Google Play Store app.
- **Slow performance:** Close unused applications. Clear cache data from apps. Consider performing a factory reset if the issue persists (back up your data first).
- **Battery draining quickly:** Reduce screen brightness. Disable unused features like Wi-Fi, Bluetooth, and GPS when not needed. Limit background app activity.

## 8. SPECIFICATIONS

| Feature                | Specification         |
|------------------------|-----------------------|
| Operating System       | Android 6.0           |
| RAM                    | 1GB                   |
| Internal Storage (ROM) | 8GB                   |
| Expandable Storage     | Up to 128GB (MicroSD) |
| Screen Size            | 6.1 inches            |
| Screen Resolution      | 1440 x 720            |
| Rear Camera            | 8MP                   |
| Front Camera           | 5MP                   |

| Feature          | Specification                                 |
|------------------|-----------------------------------------------|
| Battery Capacity | 4000mAh                                       |
| Network Bands    | 2G: GSM 850/900/1800/1900, 3G: WCDMA 850/2100 |
| Dimensions       | 9.84 x 6.06 x 3.9 inches (Package)            |
| Item Weight      | 4.5 ounces (128 Grams)                        |
| Connectivity     | Bluetooth, Wi-Fi, USB                         |

## 9. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided with your purchase or contact ASHATA customer service through the retailer where you purchased the product. Keep your proof of purchase for warranty claims.

© 2024 ASHATA. All rights reserved.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

