

[Manuals.plus](#) /

> [ciciglow](#) /

> ciciglow Mini HD Digital Voice Recorder with MP3 Player User Manual

ciciglow ciciglowg2w1sap4md2304

ciciglow Mini HD Digital Voice Recorder with MP3 Player

User Instruction Manual

1. INTRODUCTION

Thank you for choosing the ciciglow Mini HD Digital Voice Recorder. This compact and versatile device is designed for high-quality audio recording, featuring HD noise reduction and MP3 player capabilities. Its portable design makes it ideal for various applications, from capturing lectures and meetings to interviews and personal notes.

WIDELY USED IN



The ciciglow voice recorder is suitable for use in diverse environments such as lectures, meetings, interviews, and classrooms.



The device's mini shape and lightweight design allow for easy portability in a pocket, key bag, or wallet.

2. PACKAGE CONTENTS

- Digital Voice Recorder
- USB Charging Cable
- Earphones
- User Manual



Image showing the digital voice recorder along with its included accessories: a USB charging cable and earphones.


3. SETUP

3.1 Charging the Device

Before first use, fully charge the device. Connect the recorder to a computer's USB port or a USB wall adapter (not included) using the provided USB cable. The battery indicator on the screen will show charging status.

3.2 Inserting a MicroSD Card

The device supports an external MicroSD memory card up to 32GB (not included). Locate the MicroSD card slot on the side of the recorder. Gently insert the card until it clicks into place. Ensure the card is inserted correctly to avoid damage.

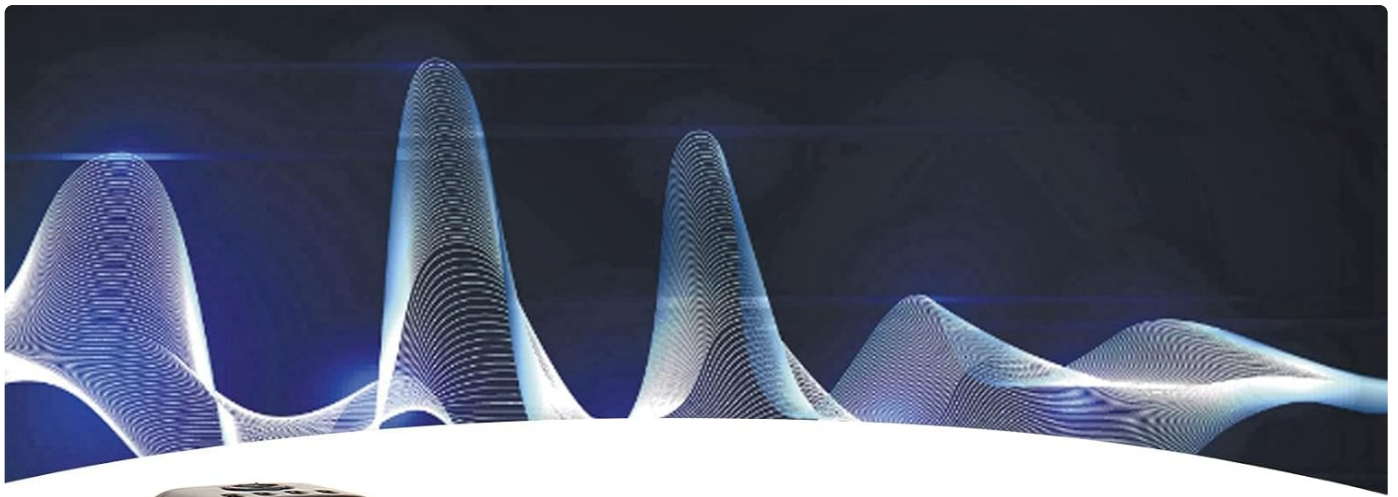

External insert card, support up to 32G (not included)
Convenient and simple

The device features an external slot for a MicroSD card, supporting up to 32GB of additional storage.


3.3 Power On/Off

To power on the device, slide the ON/OFF switch to the 'ON' position. To power off, slide it to the 'OFF' position.

4. OPERATING INSTRUCTIONS

4.1 Basic Navigation

Use the navigation buttons (UP, DOWN, MENU) to browse through the device's menu options displayed on the screen. The 'PLAY' button typically confirms selections or initiates playback.

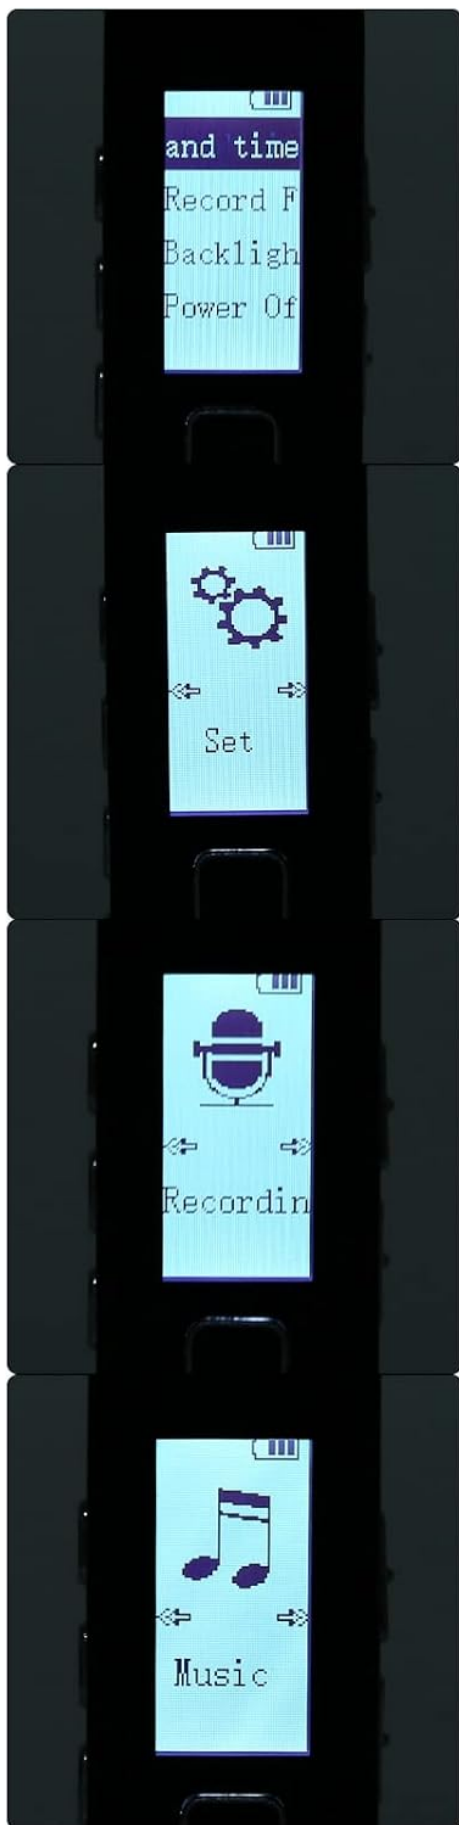

The device's screen shows various menu options for operation.

4.2 Recording Audio

1. **Start Recording:** With the device powered on, navigate to the "Recording" option in the menu. Select it to enter the recording state. The device will begin recording, and the recording interface will be displayed.

2. **Pause/Resume Recording:** During recording, briefly press the "PLAY" button to pause the recording. Press it again briefly to resume recording.
3. **Save Recording:** To save the current recording, slide the REC/SAVE switch to the 'SAVE' position. The machine will automatically save the file.

EASY OPERATION

CAPTURE SOUND AT ANYTIME ANYWHERE

1. **Recording:** In the state of the power on screen is on, dial the function key of the machine "Recording" to the "Recording" position to enter the recording state, the machine starts recording, the recording interface will have the corresponding. The recording interface will have the corresponding recording prompt.

2. Press the "Play" key to pause or continue recording (short press the "Play" key during the recording process to pause the recording. Press again briefly to continue recording).

3. **Save recording:** In the recording state, after the "record" position is set to the "hold" position, the machine will automatically save the current recording file, short press the "Play" key to play the current saved recording file.



Detailed steps for recording audio, including starting, pausing, and saving recordings.

4.3 Playback

- **Playing Recordings:** Navigate to the 'Recordings' or 'Files' section in the menu. Select the desired audio file and press the 'PLAY' button to start playback.
- **Using External Speaker:** The device features a built-in external speaker. No headphones are required for playback.
- **Using Earphones:** For private listening, connect the included earphones to the earphone jack.

The body comes with external speakers
No need to connect headphones to play



The device includes an external speaker for convenient audio playback without earphones.

4.4 MP3 Player Function

The device can also function as an MP3 player. Transfer MP3 audio files to the device's internal storage or MicroSD card. Navigate to the 'Music' or 'MP3' section in the menu to browse and play your music files.



The device features MP3 player functionality, allowing you to play music files.

4.5 HD Noise Reduction

The recorder incorporates HD noise reduction technology to capture clear audio by minimizing background interference. This feature is automatically active during recording to enhance sound quality.



The HD noise reduction feature helps to capture clear audio by filtering out background noise.

5. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the device. Avoid liquid cleaners or abrasive materials.
- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in use for extended periods.

6. TROUBLESHOOTING

Problem	Possible Solution
Device does not power on.	◦ Ensure the battery is charged. Connect to a power source. ◦ Check the ON/OFF switch is in the 'ON' position.
Cannot record audio.	◦ Verify that a MicroSD card is properly inserted and has sufficient free space. ◦ Ensure the device is in recording mode.
No sound during playback.	◦ Adjust the volume level. ◦ If using earphones, ensure they are fully plugged in. ◦ Check if the audio file is corrupted.
Device not recognized by computer.	◦ Try a different USB port or cable. ◦ Ensure the device is powered on when connected.

7. SPECIFICATIONS

Feature	Detail
Brand	ciciglow

Feature	Detail
Model Number	ciciglowg2w1sap4md2304
Memory Storage Capacity	Supports up to 32 GB (external MicroSD card, not included)
Digital Media Format	MP3 audio, WAV, WMA
Microphone Form Factor	Integrated
Hardware Interface	Memory Card, Earphones
Compatible Devices	Personal Computer
Manufacturer	ciciglow
Country of Origin	China

8. WARRANTY AND SUPPORT

Specific warranty details and direct support contact information are not available in the provided product data. Please refer to the retailer's return policy or contact the seller directly for warranty claims and technical assistance.

© 2023 ciciglow. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question