

Huhomco 24-Volt Hedge Trimmer & Grass Shear

Huhomco Cordless Grass Shear & Shrubbery Trimmer

Model: 24-Volt Hedge Trimmer & Grass Shear

1. INTRODUCTION

Thank you for choosing the Huhomco 2-in-1 Cordless Grass Shear & Shrubbery Trimmer. This versatile tool is designed for efficient and precise trimming of grass and shrubs in your garden. Its cordless design and dual functionality provide convenience and flexibility for various landscaping tasks. Please read this instruction manual thoroughly before operation to ensure safe and effective use of the product.

2. SAFETY INSTRUCTIONS

Always observe basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury.

General Safety

- Read all instructions carefully before operating the tool.
- Keep children and bystanders away while operating the trimmer.
- Wear appropriate personal protective equipment, including safety glasses, gloves, and sturdy footwear.
- Do not operate the tool in wet conditions or in the presence of flammable liquids or gases.
- Store the tool indoors in a dry, secure place, out of reach of children.

Battery Safety

- Use only the charger supplied with the product.
- Do not expose batteries to extreme temperatures or direct sunlight.
- Do not short-circuit the battery terminals.
- Dispose of batteries responsibly according to local regulations.

Blade Safety

- Always disconnect the battery before changing blades or performing maintenance.
- Blades are sharp; handle with extreme care.
- Ensure blades are properly installed and secured before operation.
- The tool features a double safety switch; both switches must be pressed simultaneously to operate, preventing

accidental activation.

3. PACKAGE CONTENTS

Carefully unpack the box and ensure all items are present and in good condition. If any items are missing or damaged, please contact customer support.

- 1 x 2-in-1 Electric Hedge Trimmer & Grass Cutter Unit
- 1 x 1-Hour Fast Charger
- 2 x 24V 1.5Ah Lithium Batteries
- 1 x Extra Pruning Scissor with Sheath
- 1 x Pair of Protective Gloves
- 1 x Instruction Manual



Image: All components included in the product package.

4. PRODUCT OVERVIEW

Familiarize yourself with the different parts of your Huhomco trimmer.



Image: Labeled components of the trimmer.

- **Comfortable Ergonomic Handle:** Provides a secure and comfortable grip.
- **Wireless Lithium Battery:** Powers the unit for cordless operation.
- **Safety Lock:** Prevents accidental starting.
- **ON/OFF Switch:** Activates and deactivates the trimmer.
- **Trimmer Head Angle Adjustment:** Allows for 90° adjustment of the cutting head.
- **Blade Release Button:** Used for quick and easy blade changes.
- **High Hardened Steel Grass Shear Blade:** Short blade for grass cutting.
- **Extended Hedge Trimmer Blade:** Long blade for shrub and hedge trimming.

5. SETUP

5.1 Charging the Battery

1. Insert the battery into the charger.
2. Plug the charger into a standard electrical outlet.
3. Allow approximately 1 hour for a full charge. The indicator light on the charger will signal when charging is complete.
4. Once charged, disconnect the charger from the outlet and remove the battery.

5.2 Installing the Battery

- Align the charged battery with the battery slot on the trimmer handle.
- Slide the battery firmly into place until it clicks, indicating it is securely locked.

5.3 Changing Blades (2-in-1 Functionality)

The trimmer allows for quick and easy blade changes between the grass shear blade and the hedge trimmer blade.



Image: Steps for quick blade change.

1. Ensure the trimmer is turned OFF and the battery is removed.
2. Locate the Blade Release Button on the side of the trimmer head.
3. Press and hold the Blade Release Button.
4. Carefully slide the currently installed blade attachment off the trimmer.
5. Align the desired blade (Grass Cutter Blade or Hedge Cutter Head) with the trimmer's attachment point.
6. Slide the new blade into place until it clicks securely. Release the button.

5.4 Adjusting Trimmer Head Angle

The trimmer head can be adjusted by 90 degrees for optimal cutting angles.



Image: Adjusting the trimmer head angle.

- Ensure the trimmer is turned OFF and the battery is removed.
- Press and hold the two round buttons located on both sides of the trimmer head.
- Adjust the head to the desired angle (up to 90 degrees).
- Release the buttons to lock the head in position.

6. OPERATING INSTRUCTIONS

Before operating, ensure you have read and understood all safety instructions.

6.1 Starting and Stopping the Trimmer

- To start the trimmer, first press and hold the Safety Lock button.
- While holding the Safety Lock, press the ON/OFF Switch. The blades will begin to move.
- To stop the trimmer, release the ON/OFF Switch. The blades will cease movement.

6.2 Using the Grass Shear Blade

The short grass shear blade is ideal for precise trimming of lawn edges and small patches of grass.



Image: Trimmer in use for hedge and grass trimming.

- Attach the grass shear blade as described in Section 5.3.
- Hold the trimmer firmly with one hand, ensuring a comfortable grip.

- Position the blade above the grass to be trimmed.
- Start the trimmer and move it slowly and steadily along the desired cutting line.

6.3 Using the Shrubbery Trimmer Blade

The long hedge trimmer blade is suitable for shaping shrubs, bushes, and small hedges.

- Attach the hedge trimmer blade as described in Section 5.3.
- Hold the trimmer firmly with both hands if necessary for better control, especially for larger tasks.
- Start the trimmer and guide the blade through the branches, using a sweeping motion.
- Avoid cutting branches thicker than 3/8 inch (approximately 9.5 mm).

7. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your trimmer.

7.1 Blade Cleaning and Care

- Always remove the battery before cleaning the blades.
- Use a stiff brush to remove debris, sap, and dirt from the blades.
- Apply a light coat of machine oil or blade lubricant to the blades after each use to prevent rust and ensure smooth operation.
- Inspect blades for damage or dullness. Replace if necessary.

7.2 Battery Care

- Store batteries in a cool, dry place away from direct sunlight.
- Do not store fully discharged batteries for extended periods. Charge them periodically if not in use.

7.3 Storage

- Clean the trimmer thoroughly before storing.
- Remove the battery from the trimmer before storage.
- Store the trimmer in a dry, secure location, out of reach of children.

8. TROUBLESHOOTING

If you encounter issues with your trimmer, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Trimmer does not start	Battery not charged Battery not properly installed Safety lock not engaged ON/OFF switch not pressed correctly	Charge the battery Ensure battery is clicked into place Press safety lock before ON/OFF switch Ensure both safety lock and ON/OFF switch are pressed simultaneously
Poor cutting performance	Dull or dirty blades Cutting material too thick	Clean and lubricate blades; replace if dull Do not attempt to cut branches thicker than 3/8 inch
Blades jam	Debris caught in blades Overloading the motor	Turn off and remove battery, then clear debris Reduce cutting load; do not force the trimmer


If the problem persists after attempting these solutions, please contact customer support.

9. SPECIFICATIONS

Key technical specifications for the Huhomco Cordless Grass Shear & Shrubbery Trimmer.

Feature	Specification
Model Number	24-Volt Hedge Trimmer & Grass Shear
Product Dimensions	35.56 x 12.7 x 12.7 cm (14 x 5 x 5 inches)
Item Weight	1.09 kg (2.4 lbs)
Power Source	Battery Powered (24V 1.5Ah Lithium Battery)
Material	Plastic, Rubber, Stainless Steel
Blade Material	Stainless Steel
Hedge Trimmer Blade Length	10.2 inches (25.9 cm)
Grass Shear Blade Width	5.1 inches (13 cm)
Max Cutting Thickness	3/8 inch (9.5 mm)

Blade is 6cm longer than others

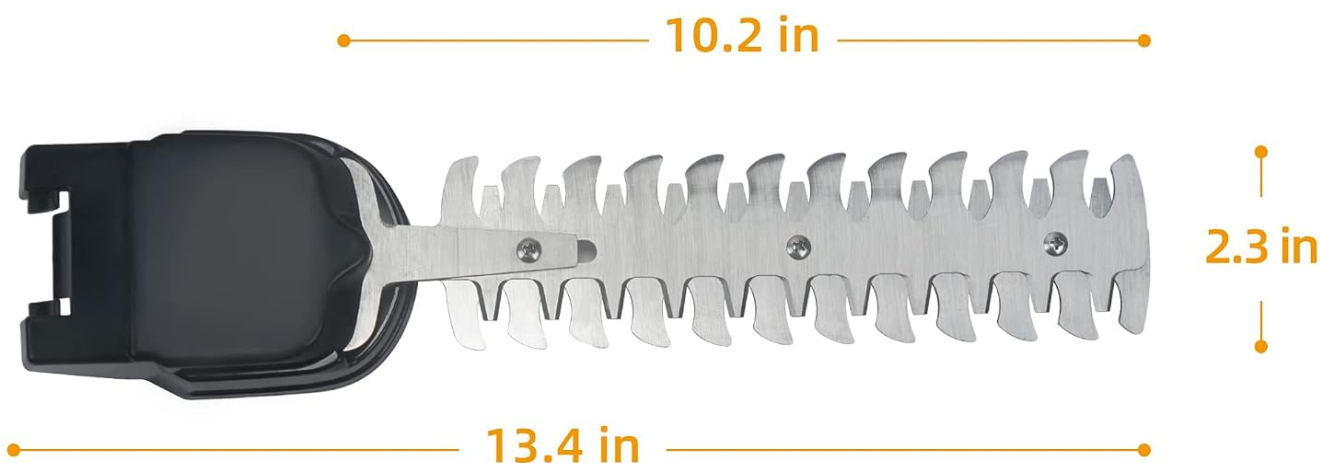

Blade is 2cm wider than others



Image: Blade dimensions and overall tool dimensions.

10. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official Huhomco website. Keep your purchase receipt as proof of purchase for any warranty claims.

If you have any questions or require assistance with your product, please contact the manufacturer's customer service department.

© 2023 Huhomco. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question