



Manuals.plus /

› PARKSIDE /

› PARKSIDE 20V Cordless Handheld Vacuum Cleaner PHSSA 20-Li C1 Instruction Manual

PARKSIDE PHSSA 20-Li C1

PARKSIDE 20V Cordless Handheld Vacuum Cleaner PHSSA 20-Li C1 Instruction Manual

Model: PHSSA 20-Li C1

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation, maintenance, and care of your PARKSIDE 20V Cordless Handheld Vacuum Cleaner, model PHSSA 20-Li C1. Please read these instructions thoroughly before first use and keep them for future reference. This versatile vacuum cleaner is designed for both dry and wet dirt collection, offering flexibility for various cleaning tasks.

2. SAFETY INSTRUCTIONS

Always observe basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury.

2.1 General Safety

- Do not use the appliance in explosive atmospheres, such as in the presence of flammable liquids, gases, or dust.
- Keep children and bystanders away while operating the vacuum cleaner.
- Do not vacuum up burning or smoking materials, such as cigarettes, matches, or hot ashes.
- Do not vacuum up toxic materials, such as bleach, ammonia, or drain cleaner.
- Ensure the filter is correctly installed before use.
- Do not immerse the appliance in water or other liquids.

2.2 Battery Safety

- Use only PARKSIDE X 20 V Team series batteries with this appliance.
- Do not open, disassemble, or short-circuit the battery.
- Protect the battery from heat, direct sunlight, and fire.
- If battery fluid comes into contact with skin or eyes, rinse immediately with water and seek medical attention.

3. PACKAGE CONTENTS

Carefully unpack the appliance and check for completeness. Ensure all components are present and undamaged.

- PARKSIDE 20V Cordless Handheld Vacuum Cleaner (main unit)
- Crevice Nozzle
- Wet Nozzle
- Brush Attachment
- Universal Nozzle Attachment
- Attachable Extension Tube (for floor vacuum function)
- Washable Fine Lamella Filter (pre-installed)
- Nozzle Holder (for clamping)
- Instruction Manual

Note: Battery and charger are not included and must be purchased separately as part of the PARKSIDE X 20 V Team series.



Image 3.1: Included accessories for the PARKSIDE PHSSA 20-Li C1 vacuum cleaner. This image displays the crevice nozzle, wet nozzle, brush attachment, universal nozzle, and two clamps for the extension tube.

4. PRODUCT OVERVIEW

Familiarize yourself with the components of your vacuum cleaner before use.



Image 4.1: The main handheld unit of the PARKSIDE PHSSA 20-Li C1 vacuum cleaner, showing the dust collection container, power switch, and battery interface.



Image 4.2: Exploded view of the PARKSIDE PHSSA 20-Li C1, illustrating how the dust container and washable filter detach from the main motor unit for cleaning.

Key Components:

1. **Power Switch:** On/Off button, typically located on the handle.
2. **Dust Collection Container:** Transparent, bagless container for collected dirt.

3. **Filter Unit:** Contains the washable fine lamella filter.
4. **Suction Inlet:** Where nozzles attach.
5. **Battery Interface:** Slot for PARKSIDE X 20 V Team battery.
6. **Handle:** Ergonomic handle with soft grip.

5. SETUP

5.1 Inserting the Battery

1. Ensure the vacuum cleaner is switched off.
2. Align a charged PARKSIDE X 20 V Team battery with the battery interface on the vacuum cleaner.
3. Slide the battery into the slot until it clicks securely into place.
4. To remove, press the battery release button (if present) and slide the battery out.

5.2 Attaching Nozzles and Extension Tube

1. Select the appropriate nozzle for your cleaning task (crevice, wet, brush, or universal).
2. Push the desired nozzle firmly onto the suction inlet of the handheld unit.
3. For floor cleaning, first attach the extension tube to the suction inlet, then attach the universal nozzle or floor tool to the end of the extension tube.



Image 5.1: The PARKSIDE PHSSA 20-Li C1 vacuum cleaner fully assembled with the extension tube and floor nozzle, ready for floor cleaning.



Image 5.2: The handheld unit of the PARKSIDE PHSSA 20-Li C1 with the crevice nozzle attached, suitable for narrow spaces.

6. OPERATING INSTRUCTIONS

6.1 Switching On/Off

- To switch on the vacuum cleaner, press the power switch.
- To switch off, press the power switch again.

6.2 Dry Vacuuming

- Attach the desired nozzle (brush, crevice, or universal) directly to the handheld unit or via the extension tube.
- Switch on the appliance and move the nozzle over the dry dirt to be collected.
- Regularly check the dust collection container and empty it when full to maintain optimal suction.

6.3 Wet Vacuuming

- Attach the wet nozzle directly to the handheld unit.
- Switch on the appliance and carefully move the wet nozzle over spilled liquids.
- **Important:** Do not vacuum up large quantities of liquid or immerse the appliance in liquid. The maximum fill level for liquids is indicated on the dust collection container.
- After wet vacuuming, always empty and clean the dust collection container and filter immediately to prevent odors and mold growth.



Image 6.1: A user demonstrating the PARKSIDE PHSSA 20-Li C1 in floor vacuum mode, effectively cleaning dry debris from a hard surface.

7. MAINTENANCE AND CLEANING

Regular cleaning and maintenance ensure optimal performance and extend the lifespan of your vacuum cleaner.

7.1 Emptying the Dust Collection Container

1. Ensure the vacuum cleaner is switched off and the battery is removed.
2. Press the release button for the dust collection container (usually located near the handle).
3. Carefully detach the container from the main unit.
4. Empty the contents into a waste bin.

7.2 Cleaning the Filter

1. After emptying the dust container, remove the filter unit.
2. Tap the filter gently to dislodge dry dust.
3. For thorough cleaning, rinse the fine lamella filter under running water.
4. Allow the filter to air dry completely before reassembling. Do not use heat to dry.
5. Reinsert the dry filter into the dust container, then reattach the container to the main unit.

7.3 General Cleaning

- Wipe the exterior of the vacuum cleaner with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Ensure all nozzles and attachments are free from blockages.

8. TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
Vacuum cleaner does not turn on.	Battery not inserted correctly or discharged.	Ensure battery is fully charged and correctly inserted.
Low suction power.	Dust container full, filter clogged, or nozzle/hose blocked.	Empty dust container. Clean or replace filter. Check and clear any blockages in nozzles or extension tube.
Water leaks during wet vacuuming.	Dust container overfilled with liquid.	Do not exceed the maximum fill level for liquids. Empty the container immediately.
Unusual noise during operation.	Foreign object in the suction path or motor issue.	Switch off and remove battery. Check for and remove any foreign objects. If noise persists, contact customer support.

9. TECHNICAL SPECIFICATIONS

Model:	PHSSA 20-Li C1
Power Source:	20V Battery (PARKSIDE X 20 V Team series, not included)
Dirt Collection:	Wet / Dry
Suction Power:	12 AirWatt / 35 mbar (3.5 kPa)
Container Volume:	650 ml
Operating Time (approx.):	17 min (with 2 Ah battery) / 34 min (with 4 Ah battery)
Filter Type:	Washable Fine Lamella Filter
Dimensions (approx.):	410 x 118 x 140 mm (main unit)
Weight (approx.):	909 g (main unit, without battery)
Material:	Plastic

10. WARRANTY AND SUPPORT

This PARKSIDE product is manufactured with care and undergoes strict quality control. In the unlikely event of a defect, please contact your retailer or the PARKSIDE customer service department. Please retain your proof of purchase for any warranty claims. Specific warranty terms and conditions may vary by region and retailer.

For technical support, spare parts, or further information, please refer to the official PARKSIDE website or contact their customer service directly. Contact details are typically provided with your purchase documentation.

