

WLIVE ADSG027WH

WLIVE LED TV Stand User Manual

MODEL: ADSG027WH

1. PRODUCT OVERVIEW

Thank you for choosing the WLIVE LED TV Stand. This modern entertainment center is designed to accommodate TVs up to 65 inches and features adjustable glass shelves and customizable LED lighting to enhance your living space. This manual provides detailed instructions for assembly, operation, maintenance, and troubleshooting to ensure a smooth and enjoyable experience with your new TV stand.



Image: The WLIVE LED TV Stand, white in color, with a television placed on its top surface. The stand features three compartments, each with a glass shelf, illuminated by blue LED lights. Various media devices and decorative items are displayed within the compartments.

2. SAFETY INFORMATION

Please read all safety warnings and instructions carefully before assembly and use. Keep this manual for future reference.

- **Weight Capacity:** Do not exceed the maximum weight capacity of 150 lbs (68 kg) for the top surface. Each glass shelf has a lower weight limit; distribute weight evenly.
- **Stability:** Ensure the TV stand is placed on a flat, level, and stable surface. Avoid placing it on uneven flooring or carpets that may cause instability.
- **Tip-Over Prevention:** For added safety, especially in homes with children or pets, consider securing the TV stand to the wall using anti-tip hardware (not included, but recommended).
- **Electrical Safety:** When connecting LED lights, ensure all cables are properly routed and not pinched. Do not expose electrical components to water or excessive moisture.
- **Glass Handling:** Handle glass shelves with care to prevent breakage. In case of breakage, dispose of broken glass safely.
- **Assembly:** Assemble the unit according to the instructions. Do not overtighten screws. Two people are recommended for assembly.

3. PACKAGE CONTENTS

Before beginning assembly, verify that all parts listed below are present and undamaged. If any parts are missing or damaged, please contact customer support.

- Main particle board panels (top, bottom, side, and divider panels)
- 3 x Tempered Glass Shelves
- LED Light Strips with Remote Control
- Hardware pack (screws, dowels, cam locks, shelf pins, etc.)
- Assembly Instructions Manual

Tools Required (Not Included): Phillips head screwdriver, Hammer (optional, for dowels).

4. SETUP AND ASSEMBLY

Follow these step-by-step instructions carefully. It is recommended to assemble the TV stand on a soft, clean surface to prevent scratches.

1. **Prepare Components:** Unpack all components and lay them out on a clean, flat surface. Identify each part using the provided parts list in the separate assembly guide.
2. **Assemble Base Frame:** Attach the side panels and central divider panels to the bottom panel using the designated hardware (e.g., dowels and cam locks). Ensure all connections are secure.
3. **Install Top Panel:** Secure the top panel to the assembled frame using the appropriate hardware.
4. **Insert Adjustable Glass Shelves:** Locate the pre-drilled holes inside each compartment. Insert the shelf pins into the desired height. Carefully place the tempered glass shelves onto the pins. There are multiple height options for customization.



Image: A close-up view illustrating the adjustable shelf feature, with arrows indicating the ability to move the shelf up or down to different height settings within the compartment.

5. **Install LED Lighting:** Carefully attach the LED light strips to the designated areas within the compartments, typically along the top or back edges, using the adhesive backing. Connect the LED strips to the power adapter and controller. Route the cables neatly to avoid tangles.
6. **Final Placement:** Once fully assembled, carefully move the TV stand to its desired location. Ensure it is stable and level.

5. OPERATING INSTRUCTIONS (LED LIGHTS)

Your WLIVE TV Stand comes with integrated LED lighting that can be controlled via the included remote.

5.1. Remote Control Functions

The remote control allows you to customize the lighting effects:

- **Power Button:** Turns the LED lights On/Off.
- **Color Selection:** Choose from 20 main colors directly using the color buttons.
- **Dynamic Modes:** Select from 22 dynamic modes (e.g., flash, fade, jump) for various lighting effects.
- **Brightness Adjustment:** Increase or decrease the brightness (5 adjustable levels).
- **Speed Adjustment:** For dynamic modes, adjust the speed of the effect.



Image: A visual representation of the multi-functional RGB LED lights, highlighting 5 adjustable levels, 22 dynamic modes, and 20 main colors, along with the remote control used to operate them.

Note: The remote control requires a CR2025 battery (not included). Ensure the remote is pointed towards the LED receiver for optimal functionality.

6. MAINTENANCE AND CARE

Proper care will help maintain the appearance and longevity of your TV stand.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals, abrasive cleaners, or polishes that may damage the finish or LED components.
- **Spills:** Immediately wipe up any spills to prevent moisture damage to the particle board. The stand features waterproof wood, but prolonged exposure to liquids should be avoided.
- **Dusting:** Regularly dust the surfaces and glass shelves with a dry, soft cloth.
- **LED Lights:** The LED lights are designed for long-term use and typically do not require maintenance. If an issue arises, refer to the troubleshooting section.
- **Glass Shelves:** Clean glass shelves with a glass cleaner and a lint-free cloth.



Image: An illustration emphasizing the key structural features of the TV stand: waterproof material, tempered glass shelves, and a sturdy overall construction.

7. TROUBLESHOOTING

If you encounter any issues with your WLIVE LED TV Stand, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
LED lights do not turn on.	Power adapter unplugged, remote battery dead, LED strip connection loose.	Ensure power adapter is securely plugged in. Replace remote battery (CR2025). Check all LED strip connections.
Remote control not working.	Remote battery dead, remote not pointed at receiver, obstruction.	Replace remote battery. Ensure clear line of sight between remote and LED receiver.
Stand is wobbly or unstable.	Uneven floor, loose assembly hardware.	Move stand to a level surface. Check and tighten all assembly screws and cam locks.
Glass shelf does not fit or is uneven.	Shelf pins incorrectly inserted, wrong shelf used.	Ensure shelf pins are fully inserted into corresponding holes at the same height. Verify you are using the correct glass shelf for the compartment.

If the problem persists after trying these solutions, please contact WLIVE customer support for further assistance.

8. SPECIFICATIONS

Detailed specifications for your WLIVE LED TV Stand, Model ADSG027WH:

- **Brand:** WLIVE
- **Model Name:** ADSG027 SW LED TV Stand/WH
- **Item Model Number:** ADSG027WH
- **Color:** White

- **Product Dimensions:** 58.3 x 15.43 x 20.8 inches (Length x Width x Height)
- **Item Weight:** 52.4 pounds
- **Material:** Engineered Wood (Frame), Tempered Glass (Shelves)
- **Maximum Load Weight (Top Surface):** 150 Pounds
- **Number of Shelves:** 3 (Adjustable Glass Shelves)
- **TV Size Compatibility:** Up to 65-inch TV
- **LED Lighting:** 2 LED strips, 20 main colors, 22 dynamic modes, 5 adjustable brightness levels.
- **Assembly Required:** Yes



Image: A diagram illustrating the dimensions of the TV stand (58.3" L x 15.4" W x 20.8" H) and indicating its compatibility with TVs up to 65 inches, along with its 150 lbs max weight capacity.

9. WARRANTY AND SUPPORT

WLIVE is committed to providing high-quality products and customer satisfaction. For information regarding warranty coverage, product support, or to report any issues, please refer to the contact information provided with your purchase documentation or visit the official WLIVE website.

Customer Support: For assistance, please contact WLIVE customer service through the platform where you purchased the product or via the contact details provided in your product packaging.

© 2023 WLIVE. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BJ73BBKG>

More documents and user manuals: <https://manuals.plus/>