

[Manuals.plus](#) /

› [Bewinner](#) /

› Bewinner H5577 Unlocked 4G LTE Mobile WiFi Router User Manual

Bewinner H5577

Bewinner H5577 Unlocked 4G LTE Mobile WiFi Router User Manual

Model: H5577 / MF800-2

1. INTRODUCTION

This manual provides essential information for the proper setup, operation, and maintenance of your Bewinner H5577 Unlocked 4G LTE Mobile WiFi Router. Please read this manual thoroughly before using the device to ensure optimal performance and safety.

Important Note: This device is not applicable to countries in the Americas, with the exception of T-Mobile networks in some regions. Please verify compatibility with your local network provider before use.

2. SAFETY INFORMATION

- Do not expose the device to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the device to strong impacts.
- Use only the provided or approved charging cable and battery.
- Do not attempt to disassemble or repair the device yourself. Contact support if issues arise.
- Keep the device away from water and other liquids.

3. PACKAGE CONTENTS

Verify that all items are present in your package:

- 1 x Portable WiFi Router (Model H5577 / MF800-2)
- 1 x Matching 2100mAh Li-Battery
- 1 x Charging Cable
- 1 x User Manual



Image: Contents of the Bewinner H5577 package, including the router, battery, and charging cable.

4. PRODUCT OVERVIEW

The Bewinner H5577 is a compact and portable 4G LTE Mobile WiFi Router designed for high-speed internet access. It supports up to 10 users simultaneously and features an LED smart display for easy operation.



Image: Front view of the Bewinner H5577 Mobile WiFi Router, showing the 4G LTE logo and display area.



Image: Close-up view of the Bewinner H5577 router's display, showing signal strength, Wi-Fi status, and battery indicator.

Key Features:

- High-speed 3G/4G internet access (Download 150Mbps, Upload 50Mbps).
- Supports up to 10 simultaneous users.
- 2100mAh large capacity battery for extended standby time.
- Compact and portable design.
- Compatible with various devices including phones, laptops, desktops, and tablets.

5. SETUP

5.1 Inserting the SIM Card and Battery

1. Carefully open the back cover of the device.
2. Insert a Micro SIM card into the designated SIM card slot. Ensure the card is oriented correctly.

3. Insert the 2100mAh Li-Battery. Before inserting, check for and remove any protective spacer sticker at the battery interface. Failure to remove this sticker will prevent the device from powering on.
4. Replace the back cover securely.

5.2 Initial Power On

Press and hold the power button until the device's LED display illuminates. The device will begin searching for a network signal.

6. OPERATING INSTRUCTIONS

6.1 Connecting to the WiFi Network

1. Ensure the Mobile WiFi Router is powered on and has established a network connection (indicated by the signal strength icon on the display).
2. On your device (phone, laptop, tablet), open the WiFi settings.
3. Locate the WiFi network name (SSID) of your router. This is typically printed on a sticker inside the battery compartment or on the device itself.
4. Select the network and enter the password (WiFi Key) when prompted. The password is also usually found on the same sticker as the SSID.
5. Once connected, your device will have internet access through the router.



Lightweight, slim and compact design for easy portability
Support for Phone, Laptop, Desktop, Tablet

Image: A user operating a laptop, demonstrating the use of the portable WiFi router for internet connectivity.

6.2 Charging the Device

Connect the provided charging cable to the micro USB port on the router and plug the other end into a USB power adapter or a computer's USB port. The battery indicator on the display will show charging status.



Image: Close-up of the Bewinner H5577 router, highlighting the micro USB charging port.

7. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the device. Do not use liquid cleaners or aerosols.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. If storing the device for an extended period, charge the battery to about 50% and store it in a cool, dry place.
- **Software Updates:** Periodically check the manufacturer's website for any available firmware updates to ensure optimal performance and security.

8. TROUBLESHOOTING

Q: The device does not turn on.

A: Ensure the battery is correctly inserted and fully charged. Check if there was a protective spacer sticker on the battery interface that needed to be removed before initial use. Remove it if present.

Q: No internet connection.

A: Verify that the SIM card is properly inserted and active with a data plan. Check the signal strength indicator on the device. Ensure your location is within a supported network coverage area (e.g., not in unsupported Americas regions). Restart the device and your connected WiFi client.

Q: What type of SIM card is required?

A: The device uses a Micro SIM card.

Q: My device cannot find the WiFi network.

A: Ensure the router is powered on and the WiFi function is active. Move your connecting device closer to the router. If the issue persists, restart both devices.

9. SPECIFICATIONS

Feature	Specification
Model	H5577 / MF800-2
Material	ABS
Color	White
SIM Card Slot	Micro Card
Battery Type	2100mAh Li Battery (Included)
4G LTE Frequency Band	B1 B3 B5 B40
3G UMTS WCDMA	B1
Peak Download Rate	150Mbps
Peak Upload Rate	50Mbps
WIFI Support	802.11 b/g/n
Max Users	Up To 10 Users
Compatible OS	Windows 7/8/10, Linux
Item Weight	3.52 ounces
Package Dimensions	4.33 x 2.91 x 1.06 inches
Special Feature	WPS
Antenna Type	Internal

10. WARRANTY AND SUPPORT

Warranty Information: Please refer to your purchase documentation or the retailer's website for specific warranty terms and conditions applicable to your Bewinner H5577 Mobile WiFi Router.

Customer Support: For technical assistance, troubleshooting beyond this manual, or service inquiries, please contact your original retailer or visit the official Bewinner website for support resources.

© 2023 Bewinner. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BJ766FB4>

More documents and user manuals: <https://manuals.plus/>