

Manuals.plus /

› Farberware /

› Farberware Cookware Nonstick Stockpot with Lid, 10.5 Quart, Silver - Instruction Manual

Farberware 16357

Farberware 10.5 Quart Nonstick Stockpot with Lid

Model: 16357

INTRODUCTION

This manual provides essential information for the proper use and care of your new Farberware 10.5 Quart Nonstick Stockpot with Lid. Designed for versatility and durability, this stockpot features aluminum construction for even heating and a long-lasting nonstick interior for easy food release and cleanup. The generous capacity is suitable for preparing large meals, soups, and stews.



Image: The Farberware 10.5 Quart Nonstick Stockpot in silver, shown with its glass lid.

BEFORE FIRST USE

1. **Unpack:** Carefully remove all packaging materials, labels, and tags from the stockpot and lid.
2. **Wash:** Wash the stockpot and lid thoroughly in warm, soapy water using a soft sponge or cloth.
3. **Rinse and Dry:** Rinse completely with clean water and dry immediately with a soft towel to prevent water spots.

Your Farberware stockpot is now ready for use.

USAGE GUIDELINES

Heat Sources

- This stockpot is suitable for use on all stovetops, **except induction**.
- Use low to medium heat settings for most cooking tasks. High heat can damage the nonstick coating and may cause food to burn.
- Ensure the stockpot is centered on the burner to promote even heating.

Oven Use

- The stockpot is oven safe up to 350°F (175°C).
- The glass lid is also oven safe within this temperature range.

Nonstick Surface Care

- Use nylon, plastic, or wooden utensils to protect the nonstick surface. Metal utensils can scratch and damage the coating.
- Avoid cutting food directly in the stockpot.



Image: The Farberware stockpot placed on a gas stovetop burner, illustrating proper placement for cooking.

Voted #1 *Most Trusted Cookware* Brand in America



Newsweek.

*Voted most trusted Cookware brand by American shoppers based on the 2022 BrandSpark® American Trust Study.

Image: The Farberware stockpot containing a prepared chicken noodle soup, demonstrating its capacity and use.

CARE AND MAINTENANCE

Cleaning

- **Dishwasher Safe:** This stockpot is dishwasher safe for convenient cleaning.
- **Hand Washing:** For best results and to prolong the life of the nonstick coating, hand washing is recommended. Wash with warm, soapy water and a non-abrasive sponge or cloth.
- **Stubborn Food:** If food is stuck, soak the stockpot in warm, soapy water for a few minutes before cleaning. Avoid using steel wool, abrasive scouring pads, or harsh detergents, as these can damage the nonstick surface and exterior finish.

Storage

- When storing, place a soft cloth or paper towel between stacked cookware to prevent scratching the nonstick surface.



Image: An overhead view of the stockpot's interior, showcasing its nonstick coating.

TROUBLESHOOTING

- **Food Sticking:** Ensure you are using appropriate cooking fats (oil or butter) and not overheating the pan. While nonstick, some foods may still adhere if cooked at excessively high temperatures or without any lubrication.
- **Uneven Heating:** Verify the stockpot is centered on the burner. Aluminum construction generally provides excellent heat distribution, but extreme heat or off-center placement can affect performance.
- **Exterior Discoloration:** High heat settings can sometimes cause discoloration on the exterior. Always use low to medium heat.
- **Lid Fit:** The shatter-resistant glass lid is designed to fit securely. If it seems loose, check for any debris on the rim of the pot or lid.

SPECIFICATIONS

Feature	Detail
Model Number	16357
Material	Aluminum
Finish Type	Non-Stick
Color	Silver
Capacity	10.5 Quarts
Item Weight	4.97 pounds (2.26 Kilograms)
Product Dimensions	15.4 x 11.9 x 8.37 inches
Coating Description	Silicone Polyester
Oven Safe Temperature	Up to 350°F (175°C)
Stovetop Compatibility	All stovetops except induction
Care Instructions	Dishwasher Safe
Included Components	10.5-Qt. Stockpot, Lid

WARRANTY INFORMATION

This Farberware stockpot is covered by a **Limited Lifetime Warranty**. This warranty covers defects in materials and workmanship under normal household use. For specific details regarding warranty claims, exclusions, and service, please refer to the official Farberware warranty documentation or contact customer support.

CUSTOMER SUPPORT

For further assistance, questions, or to report any issues with your Farberware stockpot, please visit the official Farberware website or contact their customer service department. Contact information can typically be found on the product packaging or the brand's official website.

You can also visit the [Farberware Store on Amazon](#) for more product information and support resources.