

[Manuals.plus](#) /

› [REVLON](#) /

› REVLON SmoothStay Coconut Oil Infused Hair Dryer User Manual

REVLON RVDR5317

REVLON SmoothStay Coconut Oil Infused Hair Dryer User Manual

Model: RVDR5317

1. PRODUCT OVERVIEW

The REVLON SmoothStay Coconut Oil Infused Hair Dryer is designed to provide visibly shinier, smoother hair with reduced frizz. It incorporates triple-coated ceramic barrels infused with coconut oil and ceramic tourmaline ionic technology for enhanced hair health and faster drying.



Image 1.1: REVLON SmoothStay Hair Dryer with its included diffuser and concentrator attachments.

Key Features:

- **Coconut Oil Infusion:** Triple-coated ceramic barrels infused with coconut oil for long-lasting smoothness and shine.
- **Ionic Ceramic Technology:** Ceramic tourmaline ionic technology reduces static and frizz, promoting a silky finish.
- **Powerful 1875W Motor:** Provides efficient and fast drying for various hair types.
- **Custom Styling Control:** Features 3 heat settings (Hot, Warm, Cool) and 2 speed settings (High, Low).
- **Cool Shot Button:** Locks in hairstyles for a lasting finish.
- **Versatile Attachments:** Includes a diffuser for curls and volume, and a concentrator for sleek, smooth blowouts.
- **Lightweight Design:** Ensures comfortable handling during use.

2. IMPORTANT SAFETY INFORMATION

For External Use Only.

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

- Always unplug the appliance immediately after use.
- Do not use while bathing or in a shower.
- Do not place or store appliance where it can fall or be pulled into a tub or sink.
- Do not place in or drop into water or other liquid.
- If an appliance falls into water, unplug it immediately. Do not reach into the water.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

3. SETUP AND ASSEMBLY

Before first use, ensure all packaging materials are removed and inspect the hair dryer and its attachments for any damage.

Attaching Accessories:

The hair dryer comes with two attachments: a concentrator and a diffuser. These attachments snap onto the front nozzle of the dryer.

- **Concentrator:** Designed to direct airflow for precise styling and smooth finishes. Align the concentrator with the dryer nozzle and push firmly until it clicks into place.
- **Diffuser:** Used to enhance natural curls and waves, adding volume and reducing frizz. Align the diffuser with the dryer nozzle and push firmly until it clicks into place.

Two Attachments for Custom Styling



Concentrator

Evenly guides airflow for a smooth finish



Diffuser

Maximizes curl definition for shiny results



Image 3.1: The concentrator and diffuser attachments for custom styling.

To remove an attachment, gently pull it off the nozzle.

4. OPERATING INSTRUCTIONS

Follow these steps for optimal drying and styling results:

1. **Prepare Hair:** Gently towel-dry hair to remove excess water before using the dryer.
2. **Plug In:** Ensure the hair dryer is plugged into a suitable electrical outlet.
3. **Initial Drying:** For quick initial drying, set the dryer to the highest heat and speed settings. With your head forward, flip hair over and dry the under-layers first. **Do not** concentrate airflow on any one area for an extended period of time to prevent heat damage.
4. **Adjust Settings:** As hair becomes almost completely dry, lower the heat and speed settings.
5. **Style as Desired:** Use the appropriate attachment (concentrator for smooth styles, diffuser for curls) and brush as

needed to style your hair.

6. **Set Style:** Once the desired style is achieved, press the **Cool Shot Button** to release a burst of cold air. This helps to set the style and add shine.

Quick Drying for Salon Quality Hair



Up to 1875 Watts: For ultra-fast drying



Heat Settings: Hot, Warm, Cool



2 Speed Settings: High, Low



Image 4.1: Control panel with High/Low speed, Hot/Warm/Cool heat settings, and Cool Shot button.

Heat and Speed Settings:

- **Heat Settings:**
 - **Hot:** For fast drying and styling.
 - **Warm:** For normal drying.
 - **Cool:** For gentle drying and setting styles.
- **Speed Settings:**
 - **High:** For fast drying.
 - **Low:** For gentle drying and precise styling.

- **Cool Shot:** Activates a stream of cool air to help set your style.

5. MAINTENANCE AND CARE

Proper maintenance ensures the longevity and optimal performance of your hair dryer.

- **Cleaning the Removable End-Cap:** The hair dryer features a removable end-cap for easy cleaning. Regularly remove the end-cap and clean any accumulated lint or hair from the air filter to maintain airflow and extend motor life.
- **Cool Down Before Storage:** After each use, allow the appliance to cool completely before storing it.
- **Cord Care:** Do not wrap the power cord around the dryer. This can cause premature wear and damage to the cord. Use the integrated hanging ring for convenient and safe storage.
- **General Cleaning:** Wipe the exterior of the dryer with a soft, damp cloth. Do not use abrasive cleaners or solvents.

Pretty, Sleek, Hassle-Free



Removable End-Cap for easy cleaning



Cool Shot seals hair cuticle for smooth, shiny finish



Hanging Ring for easier storage



Image 5.1: Features like the removable end-cap and hanging ring aid in maintenance and storage.

6. TROUBLESHOOTING

If you encounter issues with your REVLON SmoothStay Hair Dryer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Dryer does not turn on.	No power supply; tripped circuit breaker; faulty outlet.	Check if the dryer is securely plugged in. Test the outlet with another appliance. Check your household circuit breaker.
Weak airflow.	Blocked air intake filter.	Unplug the dryer and clean the removable end-cap/air filter as described in the Maintenance section.
Dryer overheats and shuts off.	Blocked air filter; prolonged use on high heat.	Unplug the dryer and allow it to cool down. Clean the air filter. Ensure proper ventilation during use.
Attachments are difficult to attach/remove.	Incorrect alignment or insufficient force.	Ensure the attachment is correctly aligned with the nozzle. Apply firm, even pressure to attach or remove.

If the problem persists after attempting these solutions, please contact customer support.

7. SPECIFICATIONS

Brand	REVLON
Model Number	RVDR5317
Power Source	Corded Electric
Wattage	1875 watts
Material	Ceramic, Plastic
Color	Black
Product Dimensions	4.15 x 11.3 x 9.25 inches
Item Weight	1.54 Pounds
UPC	761318053170, 761318153177, 761318753179, 761318053057

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your product or visit the official REVLON website. You may also contact REVLON customer service directly for assistance.
Manufacturer: Helen of Troy

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question