

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [ENCHEN](#) /

› [ENCHEN BEARDO Hair Clipper User Manual](#)

## ENCHEN Beardo

# ENCHEN BEARDO Hair Clipper User Manual

**Model:** Beardo

**Brand:** ENCHEN

---

## 1. INTRODUCTION

---

Welcome to the user manual for your ENCHEN BEARDO Hair Clipper. This device is designed to provide a precise, comfortable, and efficient grooming experience. Please read this manual thoroughly before first use to ensure proper operation, maintenance, and safety.



**Figure 1:** ENCHEN BEARDO Hair Clipper with included accessories, including various comb attachments, a cleaning brush, a charging cable, and a small oil bottle.

## 2. SAFETY INFORMATION

### **WARNING:**

- Always keep the trimmer away from water sources.
- Do not use on infants or children.
- Avoid contact with eyes and skin.
- Always disconnect the trimmer before cleaning.
- Always follow the manufacturer's instructions for proper use and maintenance.
- This appliance contains a Lithium-Ion battery. Do not expose to extreme temperatures or fire.

### 3. PRODUCT COMPONENTS

Familiarize yourself with the main parts of your ENCHEN BEARDO Hair Clipper:

- **Trimmer Body:** Ergonomically designed for comfortable grip.
- **Blade Head:** Ultra-sharp, R-type cutter blade made of stainless steel.
- **Power Button:** Located on the front for easy operation.
- **LED Indicator:** Displays power level and charging status.
- **Charging Port:** Type-C port for convenient charging.
- **Comb Attachments:** Various sizes for different trimming lengths.
- **Cleaning Brush:** For removing hair debris from the blade.
- **Lubricating Oil:** For maintaining blade performance.



**Figure 2:** The ergonomic design of the ENCHEN BEARDO Hair Clipper, providing a comfortable and secure grip during use.

## 4. SETUP AND INITIAL USE

---

### 4.1. Charging the Trimmer

Before first use, fully charge the trimmer. The ENCHEN BEARDO features an 800mAh Li-ion battery and Type-C charging for quick power-up.

1. Connect the Type-C charging cable to the trimmer's charging port.
2. Plug the other end of the cable into a compatible USB power adapter (not included) or a USB port.
3. The LED indicator will show the charging status. A full charge takes approximately 1.5 hours.
4. Once fully charged, disconnect the trimmer from the power source.

# ADVANCED LI-ION BATTERY 800MAH

## POWER SAVING

UP TO 3 MONTHS OF CORDLESS TRIMMING WITH 1 HOUR CHARGE

## TYPE-C CHARGING

EASY TO FIND A TYPE-C CHARGING CABLE FOR FAST



**Figure 3:** The ENCHEN BEARDO Hair Clipper during charging, highlighting its Type-C charging capability and 800mAh Li-ion battery.

## 4.2. Attaching Comb Attachments

Select the desired comb attachment for your preferred hair length.

1. Ensure the trimmer is turned off.
2. Align the comb attachment with the trimmer's blade head.
3. Gently push the attachment until it clicks securely into place.
4. To remove, gently pull the attachment away from the blade head.

## 5. OPERATING INSTRUCTIONS

## 5.1. Powering On/Off

Press the power button once to turn the trimmer on. Press it again to turn it off.

## 5.2. Trimming Hair

For best results, ensure hair is clean and dry before trimming.

1. Choose the appropriate comb attachment for your desired length.
2. Hold the trimmer firmly with the blade flat against the skin.
3. Move the trimmer slowly and steadily against the direction of hair growth.
4. For detailed shaping or outlining, remove the comb attachment and use the bare blade carefully.



**Figure 4:** The ENCHEN BEARDO Hair Clipper is versatile for various grooming styles, from close shaves to longer trims.

### 5.3. Smart Travel Lock Function

The ENCHEN BEARDO is equipped with a smart travel lock to prevent accidental activation during transport.

- To activate: Press and hold the power button for 3 seconds until the LED indicator blinks.
- To deactivate: Press and hold the power button for 3 seconds again until the LED indicator stops blinking and the device powers on.



Figure 5: The ENCHEN BEARDO features a smart travel lock and an LED indicator for power status.

### 6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your trimmer.

## 6.1. Cleaning the Blade Head

1. Ensure the trimmer is turned off and disconnected from any power source.
2. Remove the comb attachment.
3. Use the provided cleaning brush to brush away any hair debris from the blade and the trimmer head.
4. The blade head can be rinsed under running water for thorough cleaning. Ensure the trimmer body does not get wet.
5. Allow the blade head to air dry completely before reattaching or storing.



**Figure 6:** The ultra-sharp R-type cutter blade of the ENCHEN BEARDO, designed for smooth and safe trimming.

## 6.2. Lubricating the Blades

Apply a small drop of lubricating oil (included) to the blades periodically to maintain smooth operation and

prevent wear.

1. Turn off the trimmer.
2. Apply 1-2 drops of oil evenly across the blade teeth.
3. Turn the trimmer on for a few seconds to distribute the oil.
4. Wipe off any excess oil with a soft cloth.

### 6.3. Storage

Store the trimmer in a cool, dry place, away from direct sunlight and moisture. Ensure it is clean and dry before storage.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is low or depleted. Travel lock is activated.	Charge the trimmer fully. Deactivate the travel lock by pressing and holding the power button for 3 seconds.
Poor cutting performance.	Blades are dirty or clogged with hair. Blades need lubrication.	Clean the blades thoroughly using the brush and rinse if necessary. Apply lubricating oil to the blades.
Trimmer makes unusual noise.	Blades are not properly aligned or lubricated.	Ensure blades are clean and well-lubricated. If the issue persists, contact customer support.
Charging indicator not working.	Faulty cable or power source.	Try a different Type-C cable and USB power adapter.

# 6000RPM HIGH-FREQUENCY SPEED MOTOR

PROVIDES POWER BUT THE NOISE IS LESS THAN 65DB.



**Figure 7:** The ENCHEN BEARDO is powered by a 6000RPM high-frequency speed motor, ensuring powerful yet quiet operation (less than 65dB).

## 8. SPECIFICATIONS

Feature	Detail
Brand	ENCHEN
Model	Beardo
Dimensions	18.9 x 11.7 x 4.5 cm

Feature	Detail
Weight	290 g
Power Source	Battery operated
Battery Type	1 Lithium Ion (800mAh)
Charging Time	Approx. 1.5 hours
Blade Material	Stainless Steel
Motor Speed	6000 RPM
Color	Black
Special Features	Easy to clean, Cordless, Rechargeable, Travel Lock
Target Audience	Unisex-adults

## 9. WARRANTY AND SUPPORT

---

ENCHEN products are manufactured with high-quality standards. For any questions regarding your ENCHEN BEARDO Hair Clipper, including warranty information or technical support, please contact your retailer or ENCHEN customer service through their official website or contact channels provided at the time of purchase.

Please retain your proof of purchase for warranty claims.