

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [SMOOSAT](#) /

› [SmooSat MAX Electric Scooter User Manual](#)

SMOOSAT MAX

SmooSat MAX Electric Scooter User Manual

Model: MAX | Brand: SMOOSAT

INTRODUCTION

Welcome to the SmooSat MAX Electric Scooter User Manual. This guide provides comprehensive instructions for the safe and efficient operation, maintenance, and care of your new electric scooter. The SmooSat MAX is designed for adult commuting, featuring a powerful 500W brushless motor, front suspension, and durable 10-inch solid tires for a comfortable and reliable ride. Please read this manual thoroughly before your first use to ensure optimal performance and safety.



Image: The SmooSat MAX Electric Scooter, showcasing its sleek design and the accompanying mobile application for smart control.

SETUP

Your SmooSat MAX scooter comes largely pre-assembled. Follow these steps to complete the setup and prepare for your first ride.

1. Unboxing and Initial Inspection

Carefully remove all components from the packaging. Inspect the scooter for any signs of damage during transit. Ensure

all included components are present: MAX Electric scooter, MAX Owner's Manual, Quick Start Guide, Warranty Card, Charger, 3mm Allen Wrench, M5 x 14mm Screw x 4.

2. Handlebar Installation

Attach the handlebar to the main stem. Use the provided 3mm Allen wrench and M5 x 14mm screws to securely fasten the handlebar. Ensure all screws are tightened firmly to prevent wobbling during operation.

Your browser does not support the video tag.

Video: "SMOOSAT MAX Electric Scooter Unboxing & Installation" - This video demonstrates the unboxing process and how to install the handlebar, providing a visual guide for initial setup.

3. Folding Mechanism

The scooter features a one-step folding design for easy transport and storage. To fold, locate the folding latch on the stem, release it, and fold the stem down until it clicks into place with the rear fender hook. To unfold, release the hook and lift the stem until it locks upright.



Image: A user demonstrating the compact folding mechanism of the SmooSat MAX scooter, highlighting its portability.

4. Charging the Battery

Before first use, fully charge the scooter's 12Ah automotive-grade battery. Connect the charger to the charging port located on the scooter's deck and then to a power outlet. The charging time is approximately 6 hours. The battery packs are located under the foot platform, contributing to a low center of gravity for stability.

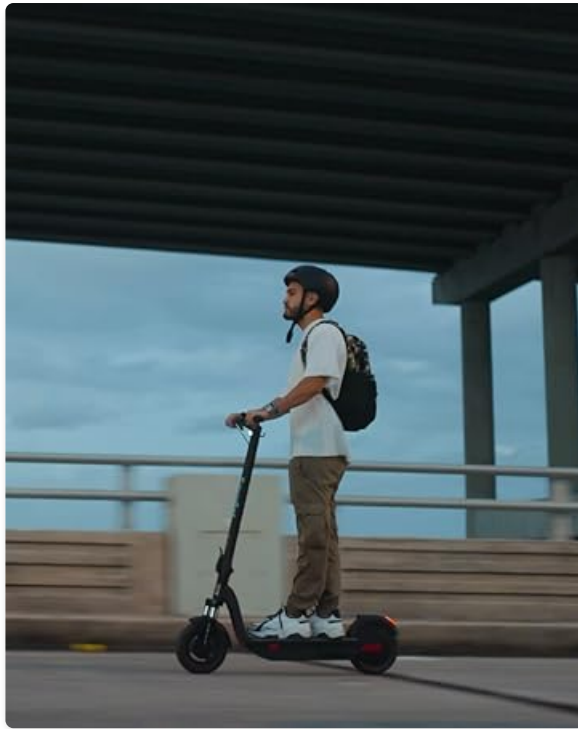 


Image: An internal view illustrating the placement of the battery cells within the scooter's deck, ensuring a low center of gravity.

OPERATING INSTRUCTIONS

1. Power On/Off

Press and hold the power button on the handlebar to turn the scooter ON or OFF. The display will illuminate when powered on.

2. Riding the Scooter

To engage the motor, push off with your foot to reach a speed of at least 3 MPH, then press the accelerator. The 500W brushless motor provides strong power for climbing hills up to 15° and reaching a maximum speed of 18.6 MPH.

Your browser does not support the video tag.

Video: "SmooSat MAX Electric Scooter - The Ideal for City Commuting" - This video showcases the scooter's performance, including its powerful motor and ability to handle inclines, demonstrating typical riding scenarios.

500W BRUSHLESS MOTOR

18.6 MPH Max Speed



Stronger Power



Longer Life



Less Maintenance



Image: A detailed view of the 500W brushless motor, emphasizing its power, longevity, and low maintenance requirements.

3. Braking System

The SmooSat MAX is equipped with a dual braking system for enhanced safety: a front drum brake and a rear electric brake. Apply the brake lever on the handlebar to slow down or stop. When braking, the rear LED red light on the fender will illuminate, serving as a safety feature to alert others.

SAFE DOUBLE BRAKES



- 1 Front Drum Brake
- 2 Rear Electric Brake

Image: An illustration highlighting the dual braking system, including the front drum brake and rear electric brake, for reliable stopping power.

4. Smart App Control

Download the SmooSat App to connect to your scooter via Bluetooth. The app allows you to: lock/unlock the scooter, review ride history, control speed mode, turn headlights on/off, and more. This provides a comprehensive solution for managing your ride.

SUPPORT APP CONTROL



**Lock/Unlock
Scooter**



**Speed Switch
/Cruise Control**



Headlight



Trip Monitoring

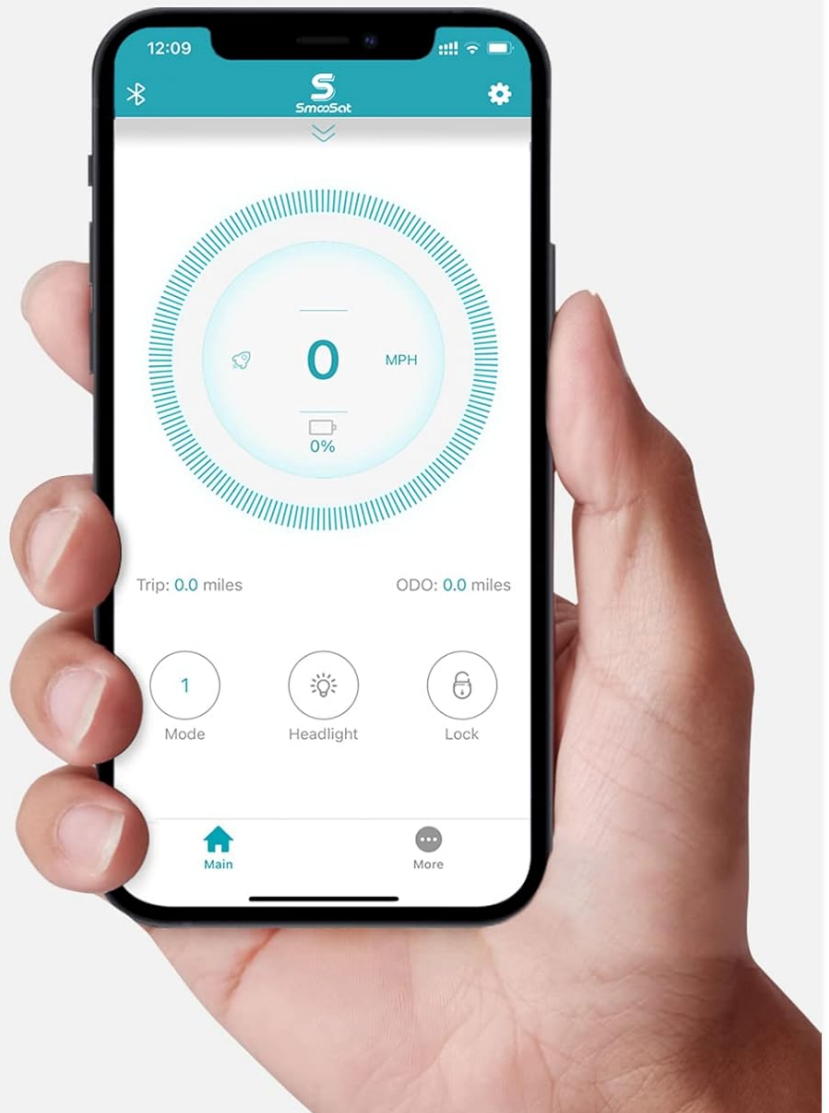 


Image: The SmooSat mobile application interface, showing options for locking/unlocking, speed control, headlight operation, and trip monitoring.

5. Cruise Control

Activate cruise control via the SmooSat App with a single click, or by pressing the on/off button five times in a row without the app. Once activated, the scooter will maintain its current speed, reducing rider fatigue on longer rides.

6. Lighting

The scooter features a front headlight and a rear brake light for visibility. The headlight can be controlled via the app or the scooter's controls. The rear brake light automatically illuminates when braking.

SAFE RIDE AT NIGHT

Headlight & Brake Light



Image: The SmooSat MAX Electric Scooter shown with its headlight and brake light active, emphasizing safety during night rides.

MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your SmooSat MAX scooter.

1. Tire Care

The scooter is equipped with 10-inch solid tires, which do not require inflation and are puncture-proof. Regularly inspect the tires for any signs of wear or damage. While solid, they should still be kept clean for optimal grip.

SUPREME SHOCK ABSORPTION



Bike-level Front Suspension



10 Inch Solid Tires

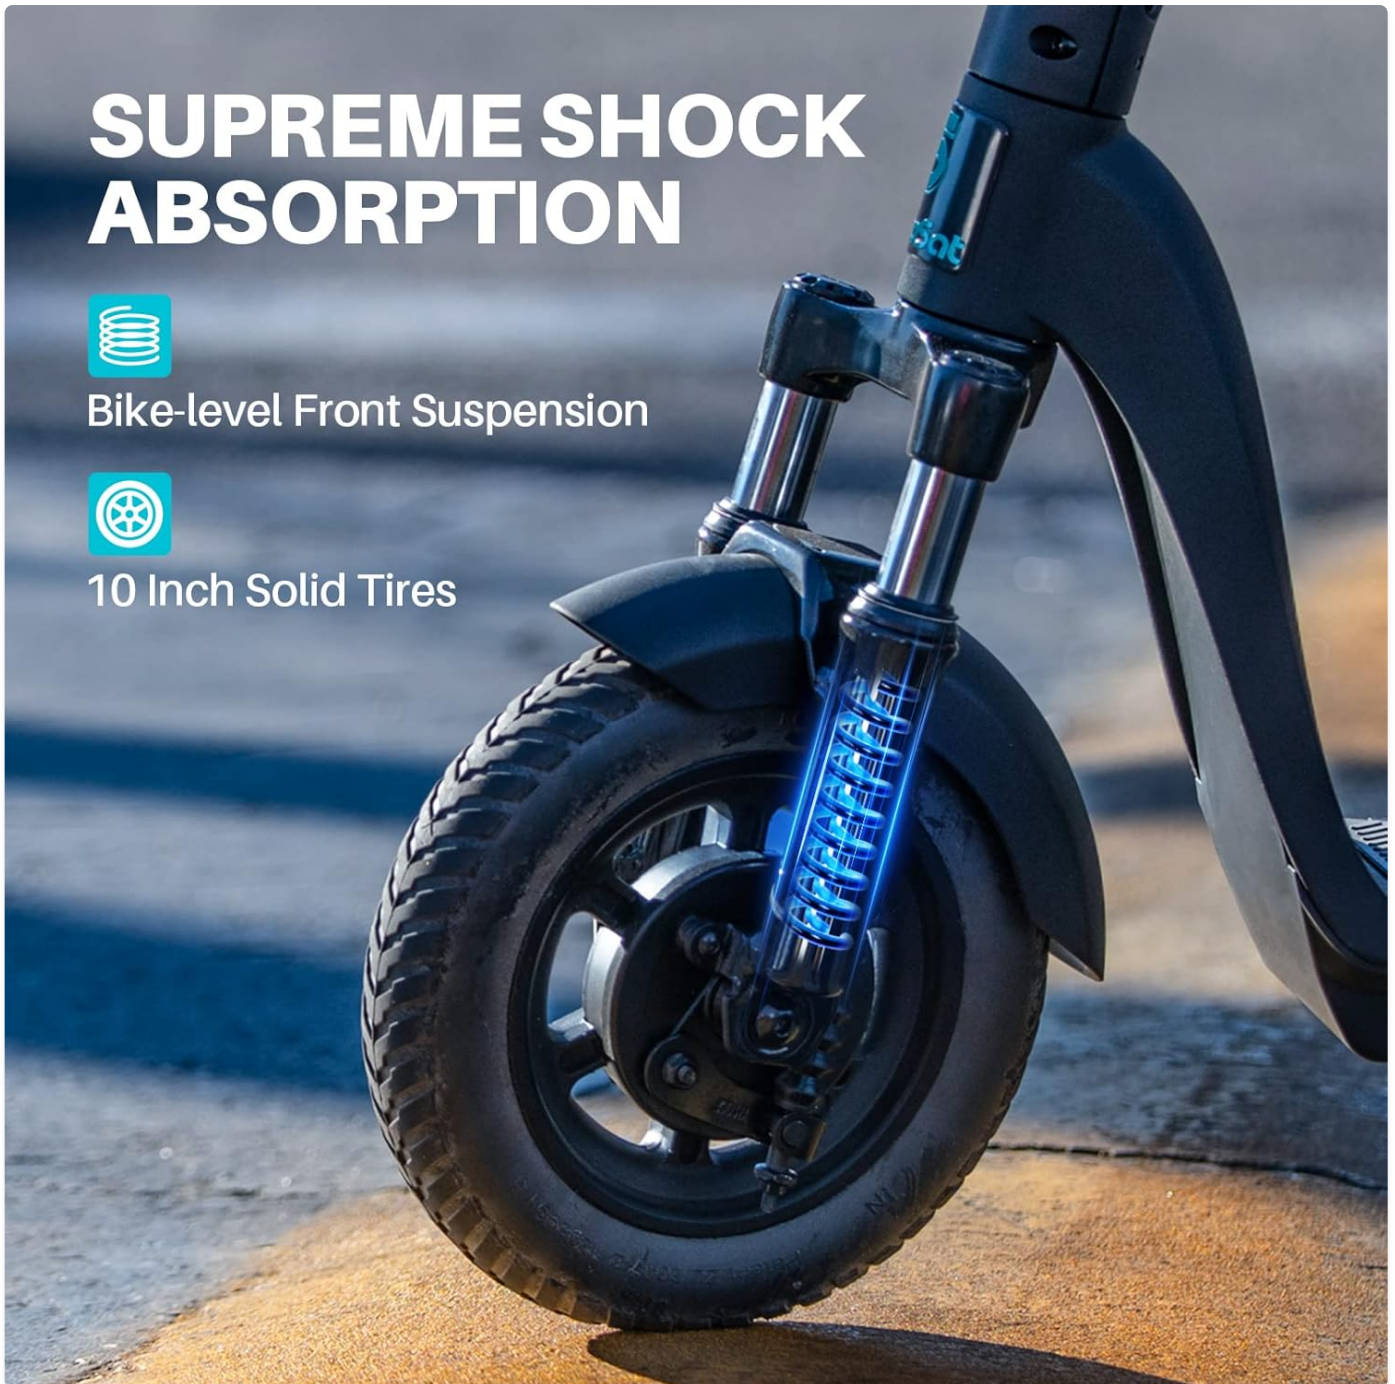 


Image: A close-up of the front wheel and suspension system, highlighting the durable 10-inch solid tires and front-dual-suspension for a smooth ride.

2. Cleaning

Wipe down the scooter with a damp cloth after use. Avoid using high-pressure water jets or harsh chemicals, as these can damage electronic components. Ensure the charging port cover is securely closed when not charging to prevent water ingress.

3. Storage

Store the scooter in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, ensure the battery is charged to approximately 50-70% to preserve battery health.

TROUBLESHOOTING

If you encounter any issues with your SmooSat MAX scooter, please refer to the following common troubleshooting tips:

- **Scooter not powering on:** Ensure the battery is fully charged. Check the power button for proper function.
- **Motor not engaging:** Remember to push off to at least 3 MPH before pressing the accelerator. Check for any error codes on the display.
- **Reduced range or speed:** This could indicate a low battery charge or a need for battery recalibration. Riding conditions (e.g., uphill, heavy load, cold weather) can also affect performance.
- **App connectivity issues:** Ensure Bluetooth is enabled on your smartphone and the scooter is powered on and within range. Try restarting both the app and the scooter.

For more complex issues or if the problem persists, please contact SmooSat customer support.

SPECIFICATIONS

Feature	Detail
Brand	SMOOSAT
Model Name	MAX
Motor	500W Brushless
Max Speed	Up to 18.6 MPH
Max Distance Range	30 Miles
Weight Limit	264 Pounds
Tire Type	10 Inches Solid Tires
Suspension	Front Suspension
Brake Style	Front Drum Brake, Rear Electric Brake
Charging Time	6 Hours
Folding Design	One-step Folding
Item Weight	42.5 Pounds
Material	Aluminum

WARRANTY AND SUPPORT

The SmooSat MAX Electric Scooter comes with a **180-day warranty** and lifetime services. SmooSat is committed to providing a great shopping experience and friendly customer service. For any inquiries, technical assistance, or warranty claims, please feel free to contact us at any time.

You can also visit the official [SMOOSAT Store on Amazon](#) for more information and support resources.