

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Saba](#) /
- › [Saba SA40S77A11 40-inch Full HD Smart Android TV User Manual](#)

Saba SA40S77A11

Saba SA40S77A11 40-inch Full HD Smart Android TV User Manual

Model: SA40S77A11

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Saba SA40S77A11 40-inch Full HD Smart Android TV. Please read these instructions carefully before using the product and retain them for future reference. This television combines Full HD resolution with the Android 11 operating system, offering integrated smart features like Chromecast and Airplay, along with versatile connectivity options.

IMPORTANT SAFETY INFORMATION

Always observe the following safety precautions to prevent electric shock, fire, or damage to the television.

- Do not expose the TV to rain or moisture.
- Do not open the TV casing; refer all servicing to qualified personnel.
- Ensure proper ventilation around the TV. Do not block ventilation openings.
- Place the TV on a stable, level surface to prevent it from falling.
- Protect the power cord from being walked on or pinched.
- Unplug the TV during lightning storms or when unused for long periods.
- Keep small objects and liquids away from the TV to prevent them from entering the unit.

PACKAGE CONTENTS

Verify that all items are present in the box:

- Saba SA40S77A11 40-inch Full HD Smart Android TV
- Remote Control (with 2x AAA 1.5V batteries)
- Mini AV Adapter Cable
- Power Cable

- TV Stand (if not pre-assembled)
- User Manual (this document)

SETUP

1. Attaching the Stand (Optional)

If your TV stand is not pre-assembled, carefully attach it to the bottom of the television using the provided screws. Ensure the TV is placed face down on a soft, clean surface to prevent screen damage during this process.



Image: Front view of the Saba SA40S77A11 TV with its silver stand attached, ready for placement.

Alternatively, the TV can be wall-mounted using a compatible VESA mount (sold separately). Refer to the wall mount's instructions for installation.

2. Connecting Peripherals

Connect your external devices to the appropriate ports on the back or side of the TV.

- **HDMI:** For Blu-ray players, game consoles, set-top boxes, etc.
- **USB:** For USB drives to play media or connect compatible accessories.
- **Antenna/Cable:** Connect an antenna or cable TV signal for DVB-T2/S2/C reception.
- **Ethernet:** For a wired internet connection.
- **Mini AV:** Use the provided adapter cable for older analog devices.

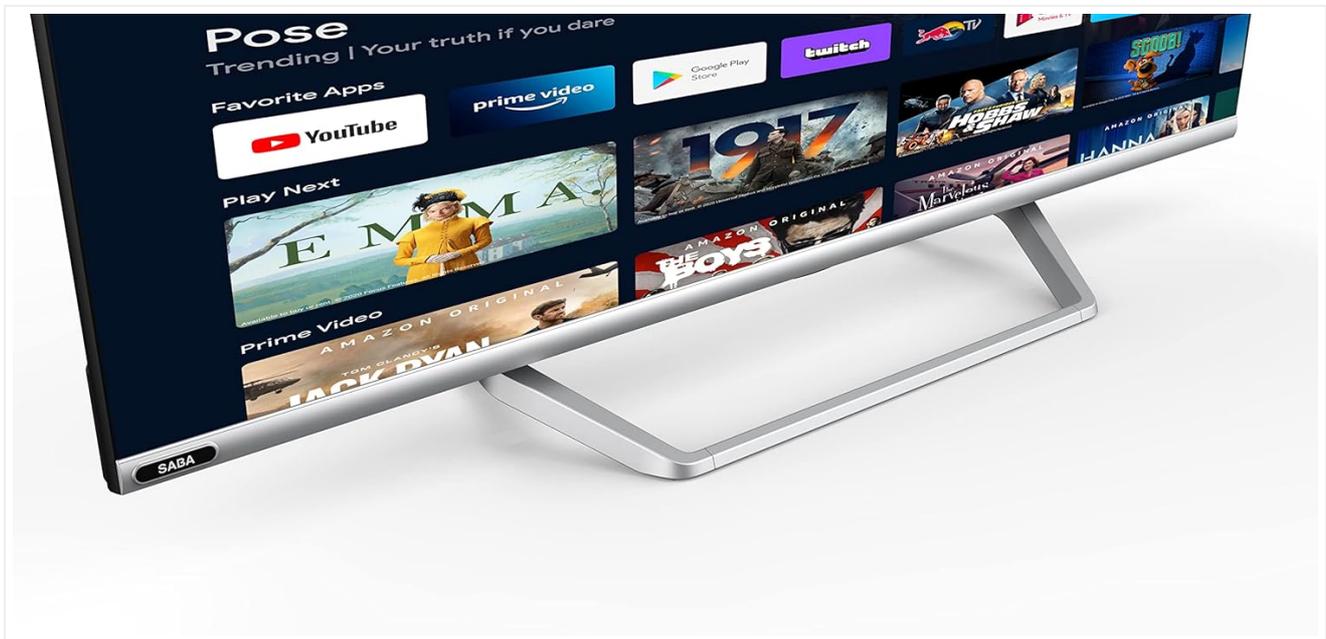


Image: Side view of the Saba SA40S77A11 TV, illustrating the various input and output ports for connecting external devices.

3. Powering On and Initial Setup

After connecting all necessary cables, plug the power cord into an electrical outlet. Press the power button on the remote control or on the TV itself.

The first time you turn on the TV, a setup wizard will guide you through initial configurations:

- **Language Selection:** Choose your preferred language.
- **Network Connection:** Connect to your Wi-Fi network or use an Ethernet cable for internet access.
- **Google Account:** Sign in with your Google account to access the Google Play Store and other Android TV features.
- **Channel Scan:** Scan for available digital TV channels (DVB-T2/S2/C).

OPERATING INSTRUCTIONS

1. Remote Control Overview

The remote control allows you to navigate the TV's interface and control various functions. Common buttons include:

- **Power:** Turns the TV on or off.
- **Input:** Selects the input source (HDMI, AV, TV).
- **Navigation (Up/Down/Left/Right) & OK:** For menu navigation and selection.
- **Volume (+/-):** Adjusts the volume level.
- **Channel (P+/P-):** Changes TV channels.
- **Home:** Returns to the Android TV home screen.
- **Back:** Returns to the previous screen or menu.
- **Google Assistant:** Activates voice control.

2. Smart Android TV Features

Your Saba TV runs on Android 11, providing access to a wide range of smart features.



Image: The Saba SA40S77A11 TV screen showing the Android TV home interface with various streaming app icons and content recommendations.

- **Google Play Store:** Download and install your favorite streaming apps, games, and utilities.
- **Chromecast Built-in:** Cast content (videos, photos, music) from your compatible smartphone, tablet, or computer directly to the TV.
- **Airplay:** Stream content from Apple devices to your TV.
- **Voice Control:** Use the Google Assistant button on your remote to search for content, control smart home devices, and get information using voice commands.

3. Input Source Selection

Press the "Input" button on your remote control to cycle through available input sources (e.g., HDMI 1, HDMI 2, AV, TV Tuner). Select the desired source for your connected device.

MAINTENANCE

1. Cleaning the TV

- Always unplug the TV before cleaning.
- Use a soft, dry cloth to wipe the screen and cabinet.
- For stubborn marks on the screen, lightly dampen the cloth with water or a specialized screen cleaner. Never spray liquid directly onto the screen.
- Avoid using abrasive cleaners, waxes, or solvents.

2. Software Updates

Your Android TV may receive software updates periodically to improve performance and add new features. Ensure your TV is connected to the internet to receive these updates. You can usually check for updates in the TV's settings menu under "About" or "System Update."

TROUBLESHOOTING

If you encounter problems with your TV, refer to the following common issues and solutions:

Problem	Possible Solution
No power	Check if the power cord is securely plugged into the TV and the wall outlet. Try a different outlet. Ensure the remote control batteries are not depleted.
No picture, but sound is present	Ensure the correct input source is selected. Check cable connections (HDMI, AV). Try restarting the TV.
No sound, but picture is present	Check the volume level and ensure the TV is not muted. Verify audio settings in the TV menu. Check external audio device connections if applicable.
"No Signal" message	Verify the antenna/cable connection. Ensure the correct input source is selected. Perform a channel scan if using the TV tuner.
Cannot connect to Wi-Fi	Ensure your Wi-Fi router is on and working. Re-enter the Wi-Fi password. Try restarting both the TV and the router.
Remote control not working	Replace the batteries. Ensure there are no obstructions between the remote and the TV's IR sensor.

SPECIFICATIONS

Below are the technical specifications for the Saba SA40S77A11 TV:

Feature	Detail
Brand	Saba
Model Number	SA40S77A11
Screen Size	40 inches (100.3 cm diagonal)
Display Technology	LED
Resolution	1920 x 1080 (Full HD)
Operating System	Android 11
Refresh Rate	60 Hz
Connectivity	Wi-Fi, Ethernet, Bluetooth, HDMI, USB
Special Features	Flat screen, Chromecast, Airplay
Total USB Ports	1
Included Components	Mini AV adapter cable, Remote control with 2x AAA 1.5V batteries
Product Dimensions (DxWxH)	22.9 x 89.8 x 56.8 cm
Energy Efficiency Class (SDR)	G

Feature	Detail
Power Consumption (SDR)	47.0 W / 1000h
Power Consumption (Stand-by)	0.4 W
Minimum Software Updates Guaranteed Until	Information not available
Minimum Spare Parts Availability	Information not available

<i>iii</i>	Tensione di uscita	-	V
26.	Alimentatore esterno standardizzato (o alimentatore esterno adatto se non incluso nell'imballaggio del prodotto)		
<i>i</i>	-		
<i>ii</i>	Tensione di uscita necessaria	-	V
<i>iii</i>	Intensità di corrente necessaria (minima)	-	A
<i>iv</i>	Frequenza di corrente necessaria	-	Hz

Pagina 2 / 2

Image: EU Energy Label for the Saba SA40S77A11 TV, showing energy efficiency class G and power consumption of 47 kWh/1000h.

For more details, visit the [EPREL database](#).



Image: Official product information sheet for the Saba SA40S77A11 TV, detailing various technical parameters and energy consumption data.

WARRANTY AND SUPPORT

The manufacturer provides a minimum general warranty period of **2 years** for this product. For specific warranty terms and conditions, please refer to the warranty card included with your product or contact the retailer where the TV was purchased.

For technical support, troubleshooting beyond this manual, or inquiries regarding spare parts and software updates, please contact Saba customer service or your local dealer. Information regarding the guaranteed availability of spare parts and software updates is not explicitly provided in the product specifications.