

[Manuals.plus](#) /

› [KONKA](#) /

› Konka Smart TV LED 32" User Manual

KONKA KDG32RR680LN

Konka Smart TV LED 32" User Manual

Model: KDG32RR680LN

1. PRODUCT OVERVIEW

The Konka Smart TV LED 32" KDG32RR680LN offers a complete entertainment experience with its borderless design and smart features. Powered by Android TV, it integrates Google Assistant for voice control and Chromecast built-in for seamless content streaming. Enjoy vibrant HD images with HDR technology and smooth performance thanks to its quad-core processor.

Key Features:

- **Android TV System:** Access thousands of compatible applications from the Google Play Store.
- **Google Assistant:** Control your TV with voice commands for app launching, settings adjustments, and more.
- **Google Chromecast Built-in:** Mirror and control content from your smartphone, tablet, or laptop directly to the TV.
- **HDR (High Dynamic Range):** Experience vivid colors, enhanced brightness, and contrast for realistic images.
- **Quad-Core Processor (CA55):** Ensures smooth navigation and multitasking across applications.
- **Borderless Design:** Provides an immersive viewing experience.
- **Connectivity:** Features HDMI, USB, Wi-Fi, and Bluetooth connections.

Product Images:



Front view of the Konka 32 inch Smart TV, showcasing its display with a soccer match. The screen prominently displays logos for HD, HDMI, Android, Wi-Fi, and Google Assistant, indicating its key features.



Angled side view of the Konka 32 inch Smart TV, emphasizing its slim design while displaying the same soccer game on screen.

KONKA Series 680
Nova tela **Smart**

KONKA 32"
tela **smart**
HD(1366*768 px)

Design moderno, borda infinita.



Android 11



Áudio estéreo



Conexão Bluetooth



Google Assistente*

 


Chromecast built in e
Google Play

*Para utilizar o Google Assistente, baixe o Google Home em seu smartphone e conecte a sua Konka.

**Youtube, Netflix
e Prime Vídeo
pré instalados**

A graphic illustrating the key features of the Konka Series 680 Smart TV, including its HD resolution (1366x768 px), modern borderless design, Android 11 operating system, stereo audio, Bluetooth connectivity, Google Assistant, Chromecast built-in, Google Play access, and pre-installed applications such as YouTube, Netflix, and Prime Video.



PROCESSADOR
CA55QUAD CORE



Adaptador
Cabo VGA



Conexões
3 HDMI, 2 usb, wi-fi e
bluetooth



Áudio
8W*2



BRILHO
200cd/m²



Contraste
1200:1



Bivolt

Rear view of the Konka 32 inch Smart TV, displaying the VESA mounting holes for wall installation and the location of various input ports.



The Konka 32 inch Smart TV integrated into a modern living room setup, resting on a wooden TV stand. The screen displays the Android TV interface, featuring icons for popular streaming applications like Netflix and YouTube.



A collage showcasing various detailed aspects of the Konka 32 inch Smart TV, including close-ups of its connectivity ports, the design of its stand, the slimness of its bezel, and an additional view of the TV within a living room environment.

2. SETUP GUIDE

2.1 Unboxing and Initial Placement

Carefully remove the TV from its packaging. It is recommended to have two people for this process. Place the TV on a stable, flat surface or mount it on a wall using a compatible VESA mount (not included). Ensure adequate ventilation around the TV.

2.2 Attaching the Stands

If using the included stands, align them with the designated slots on the bottom of the TV. Secure them firmly with the provided screws. Refer to the quick start guide included in the box for specific instructions and screw types.

2.3 Connecting Power

Plug the power cord into the TV's power input, then plug the other end into a wall outlet. Ensure the power outlet is easily

accessible.

2.4 Connecting External Devices

- **HDMI Devices:** Connect Blu-ray players, game consoles, or set-top boxes to the HDMI ports. This TV features multiple HDMI inputs.
- **USB Devices:** Insert USB drives for media playback or software updates into the USB ports. This TV has 2 USB inputs.
- **Antenna/Cable:** Connect an antenna or cable TV coaxial cable to the RF input for broadcast channels.
- **Bluetooth Devices:** Pair Bluetooth headphones, soundbars, or other compatible accessories via the TV's Bluetooth settings.

2.5 Initial Power On and Setup Wizard

Press the power button on the remote control or the TV. The TV will guide you through the initial setup wizard, which includes:

1. Language selection.
2. Network connection (Wi-Fi setup).
3. Google account sign-in (optional, but recommended for full Android TV features).
4. Channel scanning (for antenna/cable).
5. Accepting terms and conditions.

3. OPERATING INSTRUCTIONS

3.1 Remote Control Usage

The included remote control provides full functionality for navigating the Android TV interface. It typically includes:

- **Power Button:** Turns the TV on/off.
- **Navigation Pad (Directional Buttons & OK):** For menu navigation and selection.
- **Back/Home Buttons:** To return to the previous screen or the home screen.
- **Volume Up/Down:** Adjusts audio volume.
- **Channel Up/Down:** Changes TV channels.
- **App Shortcut Buttons:** Direct access to popular streaming services (e.g., Netflix, YouTube, Prime Video).
- **Google Assistant Button:** Activates voice control.

3.2 Android TV Interface Navigation

The Android TV home screen provides quick access to your favorite apps, live TV, and recommended content. Use the navigation pad on your remote to scroll through sections and select items.

3.3 Using Google Assistant

Press the Google Assistant button on your remote control. Speak clearly into the remote's microphone. You can ask questions, search for content, control smart home devices, and manage TV settings using voice commands. For full functionality, ensure your TV is connected to the internet and you are signed into a Google account.

3.4 Chromecast Built-in

To cast content from your smartphone, tablet, or computer:

1. Ensure your mobile device and the TV are connected to the same Wi-Fi network.

2. Open a Chromecast-enabled app (e.g., YouTube, Netflix, Google Photos) on your device.
3. Tap the Cast icon (*a rectangle with a Wi-Fi signal in the corner*) within the app.
4. Select your Konka TV from the list of available devices.
5. The content will begin playing on your TV.

3.5 App Management

Access the Google Play Store from the home screen to download new applications. You can also manage installed apps, including updating or uninstalling them, through the TV's settings menu.

4. MAINTENANCE

4.1 Cleaning the Screen

To clean the screen, gently wipe it with a soft, lint-free cloth. For stubborn marks, slightly dampen the cloth with water or a screen-specific cleaning solution. **Do not spray liquid directly onto the screen.** Avoid using abrasive cleaners, alcohol, or ammonia-based products.

4.2 Cleaning the TV Body

Wipe the TV's frame and back panel with a soft, dry cloth. If necessary, use a slightly damp cloth, then immediately dry the surface.

4.3 Software Updates

Ensure your TV is connected to the internet to receive automatic software updates. Updates can improve performance, add new features, and fix bugs. You can also manually check for updates in the TV's settings menu (Settings > Device Preferences > About > System update).

4.4 General Care

- Avoid placing the TV in direct sunlight or near heat sources.
- Do not block the ventilation openings on the back of the TV.
- Protect the power cord from being walked on or pinched.
- Unplug the TV during lightning storms or when unused for long periods.

5. TROUBLESHOOTING

This section addresses common issues you might encounter with your Konka Smart TV. If the problem persists after trying these solutions, please contact customer support.

Problem	Possible Cause / Solution
No Power / TV Does Not Turn On	Ensure the power cord is securely plugged into both the TV and a working wall outlet. Try a different outlet. Check if the remote control batteries are dead.
No Picture / Black Screen	Check the input source (HDMI, AV, TV) is correctly selected. Ensure external devices are powered on and connected properly. Try restarting the TV.
No Sound	Check the volume level. Ensure Mute is not activated. Verify audio cables for external sound systems are connected correctly. Check TV audio output settings.

Problem	Possible Cause / Solution
Wi-Fi Connection Issues	Ensure your router is on and working. Restart the TV and router. Re-enter the Wi-Fi password. Move the TV closer to the router or consider a Wi-Fi extender.
Apps are Slow or Freeze	Close unused applications. Clear app cache (Settings > Apps > [App Name] > Clear cache). Ensure sufficient internet speed. Perform a system update.
TV Turns Off Randomly	Check sleep timer or auto-off settings. Ensure proper ventilation to prevent overheating. Perform a factory reset as a last resort (this will erase all settings and data).
Voice Control Not Working	Ensure the remote control is paired with the TV. Check remote batteries. Ensure the TV is connected to the internet and you are signed into your Google account.

6. SPECIFICATIONS

Feature	Detail
Brand	KONKA
Model Number	KDG32RR680LN
Screen Size	32 Inches / 82 cm
Display Technology	LED
Resolution	1366x768 (HD) Pixels / 720p
Aspect Ratio	16:9
Refresh Rate	60 Hz
Contrast Ratio	1200:1
Response Time	8 Milliseconds
Operating System	Android TV
Processor	CA55 Quad Core
Audio Output	8W*2
Connectivity	Bluetooth, Wi-Fi, HDMI (multiple), USB (2 ports)
Special Features	Flat Screen, Google Assistant, Chromecast Built-in, HDR
Power Source	AC/DC
Energy Efficiency Label (ENCE)	A+
Product Dimensions (LxWxH)	2 x 111 x 70 cm (approximate, based on package dimensions and diagonal)
Product Weight	5.6 Kilograms

7. WARRANTY AND SUPPORT

7.1 Manufacturer's Warranty

The Konka Smart TV LED 32" KDG32RR680LN comes with a **1-year manufacturer's warranty**. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims.

7.2 Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty claims, please contact Konka customer support. Refer to the contact information provided in your product packaging or visit the official Konka website for the most up-to-date support details.

When contacting support, please have your TV's model number (KDG32RR680LN) and serial number ready. The serial number is typically located on a sticker on the back of the TV.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

I am having trouble turning on my Konka KDG43RR680 TV; what should I do?

If your Konka TV (Model KDG43RR680) is having trouble turning on, please follow these troubleshooting steps based on the manufacturer's guidelines: Check the Power Connection: Ensure the power cord is securely plugged into both the...

[Read full answer](#)