

[Manuals.plus](#) /
› [YESHOMY](#) /
› YESHOMY Electric Fireplace TV Stand User Manual

YESHOMY YH-TS1056GGY1

YESHOMY Electric Fireplace TV Stand User Manual

Model: YH-TS1056GGY1 | Brand: YESHOMY

1. INTRODUCTION

Thank you for purchasing the YESHOMY Electric Fireplace TV Stand. This manual provides detailed instructions for the assembly, operation, and maintenance of your new media entertainment center. Please read this manual thoroughly before assembly and use to ensure safe and proper operation.



Figure 1.1: YESHOMY Electric Fireplace TV Stand (Barnwood)

2. SAFETY INFORMATION

Your safety and the safety of others are very important. Please read and follow all safety instructions carefully before assembling and operating this product.

- Always follow the assembly instructions carefully.
- Keep the fireplace area clear of flammable materials.
- Never leave the fireplace unattended while in use.
- Ensure all cables are properly managed and not exposed to prevent electrical hazards.
- Always unplug the product before cleaning or performing any maintenance.

3. PACKAGE CONTENTS

The YESHOMY Electric Fireplace TV Stand is shipped in two separate packages. Please ensure you have received both packages and all components are present before beginning assembly.

- TV Stand components
- Electric Fireplace insert
- Assembly tool kit
- Installation and usage manual (this document)




Figure 3.1: Product delivered in two separate packages.

4. ASSEMBLY INSTRUCTIONS

Assembly typically requires two adults. All hardware components are labeled with number stickers for easy identification. Follow the included detailed diagrammatic instructions for step-by-step assembly.

1. **Unpack and Identify Parts:** Carefully unpack all components from both packages. Verify all parts against the parts list provided in the separate installation manual.
2. **Assemble the Main Frame:** Begin by assembling the base and side panels of the TV stand according to the diagrams.
3. **Install Shelves:** Insert the adjustable shelves into the designated slots. The shelves can be repositioned to three different heights to accommodate various item sizes.
4. **Integrate Fireplace:** Carefully slide the electric fireplace insert into the central compartment of the TV stand.
5. **Cable Management:** Utilize the round cable hole located at the back of the TV stand to neatly organize power cords and other cables, ensuring a tidy and safe setup.
6. **Final Checks:** Ensure all screws are tightened and the stand is stable before placing a television or other heavy items on it.

— PRODUCT SIZE —

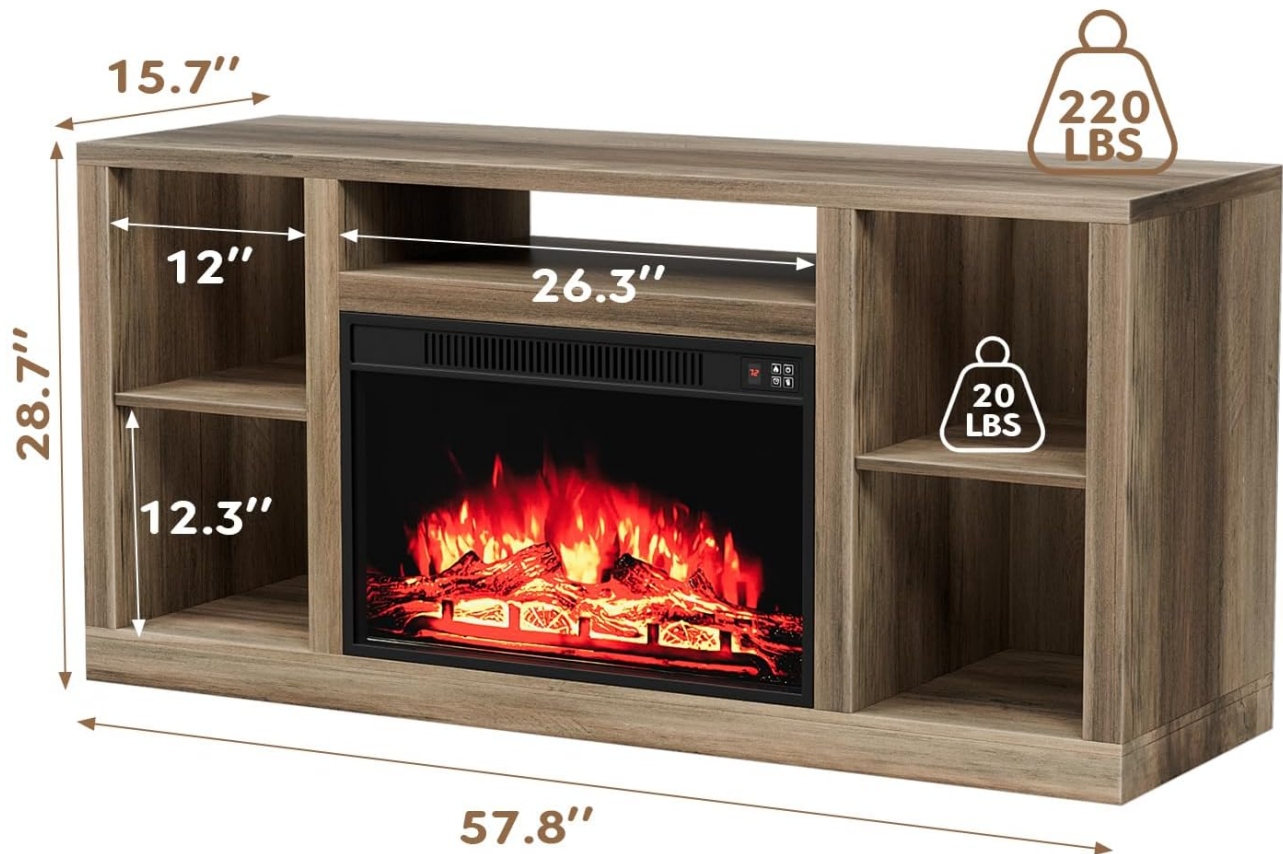

**Manufacture
GUARANTEE**



YESHOMY
PERFECT HOME CHOICE

Figure 4.1: Product Dimensions and Load Capacity.



Figure 4.2: Adjustable Shelf Mechanism.

5. OPERATING INSTRUCTIONS (ELECTRIC FIREPLACE)

The integrated electric fireplace provides warmth and ambiance. It can be operated via the control panel on the unit or the included remote control.

5.1. Fireplace Controls

- **Power Button:** Turns the fireplace on or off.

- **Temperature Control:** Adjusts the heat output from 65°F to 100°F. The fireplace can also operate without heat, providing only the flame effect.
- **Timer Function:** Set an automatic shut-off timer for 1 to 8 hours.
- **Flame Effect:** Features a 3D flame effect with adjustable brightness levels (3 levels).

5.2. Remote Control

The remote control allows convenient operation from a distance. Ensure the remote has working batteries and is pointed towards the fireplace unit.



Figure 5.1: Fireplace Control Panel and Remote.



Figure 5.2: Realistic Flame Effect and Remote Control Functions.

6. MAINTENANCE

Regular maintenance will help prolong the life and appearance of your TV stand and fireplace.

- **Cleaning the Stand:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that may damage the finish.
- **Cleaning the Fireplace:** Ensure the fireplace is unplugged and cool before cleaning. Use a soft, dry cloth to wipe the glass and exterior. Do not spray liquids directly onto the unit.
- **Dusting:** Regularly dust all surfaces, including the interior of the storage shelves, to prevent dust buildup.
- **Inspecting Cables:** Periodically check power cords for any signs of wear or damage. Replace immediately if any damage is found.

7. TROUBLESHOOTING

This section addresses common issues you might encounter. For problems not listed here, please contact customer support.

Problem	Possible Cause	Solution
Fireplace does not turn on.	Not plugged in; power switch off; remote batteries dead.	Ensure unit is plugged into a working outlet. Check the main power switch on the unit. Replace remote batteries.
No heat output from fireplace.	Heat function is off; temperature setting too low; air intake/output blocked.	Activate heat function via control panel/remote. Increase temperature setting. Ensure vents are clear.

Problem	Possible Cause	Solution
Missing parts during assembly.	Packaging error; parts in second box.	Verify both packages have arrived. Double-check all packaging materials. Contact YESHOMY customer support with the specific part number.
Unit is unstable after assembly.	Screws not fully tightened; uneven floor.	Re-tighten all assembly screws. Place the unit on a level surface or use shims if necessary.

8. SPECIFICATIONS

Feature	Detail
Brand	YESHOMY
Model Name	Electric Fireplace TV Stand
Model Number	YH-TS1056GGY1
Color	Barnwood
Product Dimensions (D x W x H)	15.7"D x 57.8"W x 28.7"H
Recommended TV Size	Up to 65+ Inches
Material	Wood (Oak Wood Frame)
Number of Shelves	4 (adjustable)
Item Weight	64 pounds
Assembly Required	Yes
Fireplace Heat Range	65°F - 100°F
Fireplace Timer	1-8 Hours
UPC	755524661656

9. WARRANTY AND SUPPORT

YESHOMY products are designed for quality and durability. For specific warranty details, please refer to the documentation included with your purchase or visit the official YESHOMY website.

If you require assistance with assembly, have questions about operation, or need to report missing/damaged parts, please contact YESHOMY customer support. Have your model number (YH-TS1056GGY1) and purchase information ready for faster service.

Additional protection plans may be available for purchase to extend coverage beyond the standard warranty. Please check with your retailer for options such as 2-Year or 3-Year Protection Plans.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BJK45XM7>

More documents and user manuals: <https://manuals.plus/>