

ECONTROLLY AKB32606601

ECONTROLLY AKB32606601 Replacement Remote Control User Manual

For LG DVD Recorder Models: RCT689H, RC689D, RCT699H, AKB73155301

1. INTRODUCTION

This manual provides instructions for the ECONTROLLY AKB32606601 replacement remote control. This remote is designed to function as a direct replacement for several LG DVD Recorder models, including RCT689H, RC689D, RCT699H, and AKB73155301. No programming is required for operation; simply install batteries to begin use.

2. SETUP

2.1 Battery Installation

The remote control requires two (2) AAA batteries for operation. Please follow the steps below to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover downwards to open it.
3. Insert two new AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.





Figure 1: Back view of the remote control, illustrating the battery compartment location.

Note: Batteries are not included with the remote control. Always use new alkaline batteries for optimal performance and to prevent leakage.

3. OPERATING INSTRUCTIONS

This remote control is designed for intuitive use with compatible LG DVD Recorders. Point the remote directly at your DVD recorder and ensure there are no obstructions between the remote and the device.





Figure 2: Front view of the remote control, displaying all functional buttons.

3.1 Key Functions Overview

- **POWER (DVD/VCR):** Turns the DVD recorder or VCR function on/off.
- **TV POWER:** Turns the connected television on/off.
- **EJECT OPEN/CLOSE:** Opens or closes the disc tray.
- **INPUT:** Switches the input source on the television.
- **CH+/CH-:** Changes television channels up or down.
- **V+/V-:** Adjusts television volume up or down.
- **Number Buttons (0-9):** Used for direct channel selection or inputting numerical data.
- **PAUSE/STEP:** Pauses playback or advances frame by frame.
- **PLAY:** Starts or resumes playback.
- **STOP:** Stops playback.
- **HOME:** Accesses the main menu or home screen.
- **CH/TRK:** Navigates between chapters or tracks.
- **DISC MENU/LIST:** Displays the disc menu or a list of content.
- **Navigation Buttons (Up, Down, Left, Right, ENTER):** Used to navigate menus and confirm selections.
- **FAV CH:** Accesses favorite channels.
- **DISPLAY:** Shows on-screen information.
- **RETURN:** Returns to the previous screen or menu.
- **BACKWARD/FORWARD:** Fast backward/forward during playback.
- **SKIP:** Skips to the next or previous chapter/track.
- **AUDIO:** Changes audio tracks or languages.
- **SUBTITLE:** Toggles or selects subtitle options.
- **ZOOM:** Zooms in or out on the picture.

- **LSKIP:** Skips to a specific interval.
- **REC:** Starts recording.
- **REC MODE:** Selects recording mode.
- **DUBBING:** Initiates dubbing function.
- **TITLE:** Accesses the disc title menu.
- **PALY MODE:** Selects playback mode.
- **MARKER-SEARCH:** Searches for marked points.
- **THUMBNAIL:** Displays content as thumbnails.
- **CHP.ADD:** Adds a chapter.
- **TV/VCR:** Switches between TV and VCR modes.
- **TIMEShift:** Activates or deactivates the Time Shift function.
- **CLEAR:** Clears input or selections.

4. MAINTENANCE

4.1 Battery Replacement

When the remote control's performance degrades or it stops responding, it is likely time to replace the batteries. Follow the battery installation steps in Section 2.1. Always replace both batteries simultaneously with new ones.

4.2 Cleaning

To clean the remote control, gently wipe its surface with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or excessive moisture, as these can damage the remote's electronics.

5. TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new AAA alkaline batteries.
 - Ensure there are no obstructions between the remote control and the DVD recorder's infrared sensor.
 - Confirm the remote is pointed directly at the DVD recorder.
- **Specific buttons not working:**
 - This may indicate a faulty button or a low battery. Try replacing the batteries first.
 - Ensure the remote is compatible with the specific function you are trying to use (e.g., TV functions require the TV to be connected and responsive to IR signals).

6. SPECIFICATIONS

Feature	Detail
Brand	ECONTROLLY

Model Number	AKB32606601
Compatible Devices	LG DVD Recorders (RCT689H, RC689D, RCT699H, AKB73155301)
Connectivity Technology	Infrared (IR)
Power Source	2 x AAA Batteries (not included)
Product Dimensions	7 x 2 x 0.65 inches
Item Weight	3 ounces
Special Feature	Ergonomic design

7. WARRANTY AND SUPPORT

Specific warranty information for this ECONTROLLY replacement remote control is not provided in the product details. For any support inquiries or further assistance, please refer to the seller or manufacturer's contact information provided at the point of purchase.