

[Manuals.plus](#) /

› [PHILIPS](#) /

› Philips SFL7001T/10 LED Flashlight User Manual

PHILIPS SFL7001T/10

Philips SFL7001T/10 LED Flashlight User Manual

Model: SFL7001T/10

1. INTRODUCTION

Thank you for choosing the Philips SFL7001T/10 LED Flashlight. This manual provides important information regarding the safe operation, maintenance, and troubleshooting of your new flashlight. Please read this manual thoroughly before using the product and retain it for future reference.

Safety Information

- Do not look directly into the LED light beam. The intense light can cause temporary vision impairment or eye damage.
- Keep this product out of reach of children.
- Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the flashlight will not be used for an extended period to prevent leakage and damage.
- Dispose of used batteries according to local regulations.
- Do not attempt to disassemble or modify the flashlight. This will void the warranty and may cause damage or injury.

2. PACKAGE CONTENTS

Please check the package for the following items:

- 1 x Philips SFL7001T/10 LED Flashlight
- 4 x AAA Alkaline Batteries

3. PRODUCT OVERVIEW

The Philips SFL7001T/10 is a robust LED flashlight designed for daily use, offering high brightness and durability. Its aluminum housing ensures it is sturdy and IPX4 waterproof, making it suitable for various environments.



Image 1: Philips SFL7001T/10 LED Flashlight. This image displays the sleek black aluminum body of the flashlight, highlighting its compact and durable design. The front lens and the textured grip are visible.

Components:

- **Head:** Contains the LED emitter and adjustable lens for zoom function.
- **Body:** The main housing, providing grip and protecting internal components.
- **Tail Cap:** Removable cap at the rear, housing the power button and battery compartment access.
- **Power Button:** Located on the tail cap, used to turn the flashlight on/off and cycle through modes.

4. SETUP

Battery Installation

Your Philips SFL7001T/10 LED Flashlight requires 4 AAA alkaline batteries (included).

1. Unscrew the tail cap of the flashlight by turning it counter-clockwise.

- 2. Insert the 4 AAA batteries into the battery compartment, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the flashlight.
- 3. Screw the tail cap back on by turning it clockwise until it is securely tightened. Do not overtighten.

Note: Incorrect battery orientation can prevent the flashlight from operating and may damage the device.

5. OPERATING INSTRUCTIONS

Power On/Off and Mode Selection

- **To Turn On:** Press the power button located on the tail cap firmly until it clicks.
- **To Cycle Modes:** With the flashlight on, lightly press the power button (without clicking) to cycle through the available light modes: High, Medium, Low, and Strobe.
- **To Turn Off:** Press the power button firmly until it clicks again.

Adjusting the Beam (Zoom Function)

The Philips SFL7001T/10 features an adjustable beam to focus the light from a wide flood to a narrow spot.

- To adjust the beam, gently push or pull the head of the flashlight forward or backward.
- Pushing the head forward will narrow the beam for a more focused, long-distance spot.
- Pulling the head backward will widen the beam for a broader area illumination (floodlight).

6. MAINTENANCE

Cleaning

- Wipe the exterior of the flashlight with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Keep the lens clean for optimal light output. Use a soft, lint-free cloth to gently wipe the lens.

Storage

- Store the flashlight in a cool, dry place away from direct sunlight and extreme temperatures.
- If the flashlight will not be used for an extended period (e.g., more than one month), remove the batteries to prevent potential leakage and damage to the device.

7. TROUBLESHOOTING

If you encounter issues with your flashlight, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Flashlight does not turn on.	• Batteries are dead or low. • Batteries are inserted incorrectly. • Tail cap is not fully tightened.	• Replace with new batteries. • Check battery polarity and reinsert correctly. • Tighten the tail cap securely.
Light is dim or flickers.	• Batteries are low. • Loose connection.	• Replace with new batteries. • Ensure tail cap is tight and batteries are seated properly.

Problem	Possible Cause	Solution
Beam adjustment (zoom) is stiff.	Dirt or debris in the mechanism.	Gently clean the exterior of the head with a soft cloth. Avoid forcing the mechanism.

If the problem persists after trying these solutions, please contact customer support.

8. SPECIFICATIONS

Model Number	SFL7001T/10
Brand	PHILIPS
Light Source	LED
Brightness	600 Lumens (Maximum)
Beam Distance	Up to 200 meters
Power Source	4 x AAA Alkaline Batteries
Runtime	Up to 25 hours (depending on mode and battery quality)
Water Resistance	IPX4 (Splash-proof)
Material	Aluminum
Dimensions (L x W x H)	Approximately 25 x 9 x 5.5 cm
Weight	200 g (without batteries)

9. WARRANTY AND SUPPORT

Philips products are manufactured to the highest standards and are designed to provide reliable performance. This product is covered by a manufacturer's warranty against defects in materials and workmanship under normal use. The specific terms and duration of the warranty may vary by region. Please refer to the warranty card included with your purchase or visit the official Philips website for detailed warranty information.

For technical support, service, or warranty claims, please contact Philips customer service through their official website or the contact information provided in your product packaging.

Philips is a registered trademark. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BJKWDMQS>

More documents and user manuals: <https://manuals.plus/>