

[Manuals.plus](#) /

› [Anthter](#) /

› Anthter Professional Blender User Manual

Anthter Professional Blender

Anthter Professional Blender User Manual

Model: Professional Blender

1. INTRODUCTION

Thank you for choosing the Anthter Professional Blender. This high-power appliance is designed to simplify your kitchen tasks, offering exceptional performance for blending, crushing, grinding, and pureeing. With its robust 950W motor and durable stainless steel components, you can effortlessly prepare a wide range of recipes, from smooth purees and refreshing smoothies to crushed ice and ground ingredients.

Please read this manual thoroughly before first use to ensure safe operation and optimal performance of your blender. Keep this manual for future reference.





Image 1: The Anthter Professional Blender with a green smoothie in the glass jar. This image showcases the main unit and its primary function.

2. IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, always follow these basic safety precautions:

- Read all instructions before operating the blender.
- Do not immerse the motor base in water or other liquids. Clean only with a damp cloth.
- Always unplug the blender from the outlet when not in use, before assembling or disassembling parts, and before cleaning.

- Avoid contact with moving parts. Ensure the blender is properly assembled and the jar is securely locked onto the base before operation. The blender features a safety lock mechanism that prevents operation if the jar is not correctly seated.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- The blender is equipped with overheat and overload protection. If the motor stops due to overheating or overloading, unplug the unit and allow it to cool down for at least 15 minutes before resuming operation.
- Do not use attachments not recommended or sold by the manufacturer.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Always operate the blender on a stable, flat, and dry surface. The non-slip rubber feet provide stability during use.
- Do not blend hot liquids that exceed the maximum fill line, as this may cause pressure buildup and potential injury.
- Keep hands and utensils out of the container while blending to prevent the possibility of severe injury to persons or damage to the blender.
- This appliance is for household use only.

3. PARTS AND COMPONENTS

Familiarize yourself with the main parts of your Anthter Professional Blender:

- **Motor Base:** Contains the powerful 950W motor and control knob.
- **Blender Jar (1.5L / 50 Oz):** Made from BPA-Free Tritan material, with measurement markings.
- **Lid:** Securely fits on top of the blender jar.
- **Blade Assembly:** Features 4 high-grade stainless steel blades for efficient blending.
- **Control Knob:** Used to select speed settings and pulse function.

ANTHIER

BLENDER

- Size: 1.5L
- Material: Glass
- Easy to Clean with Dishwasher Safe Glass Jar and Lid



Image 2: The 1.5L BPA-Free Tritan blender jar with measurement markings and integrated stainless steel blades.



4-Layer German Stainless Steel Blades

4 pieces 3D heavy duty 304 stainless steel blades chops ice, vegetables, fruits, meat and smoothies in seconds.

Image 3: Close-up view of the 4-layer German stainless steel blades, designed for efficient chopping and blending.

4. SETUP AND FIRST USE

1. **Unpack:** Carefully remove all components from the packaging.
2. **Clean:** Before first use, wash the blender jar, lid, and blade assembly with warm, soapy water. Rinse thoroughly and dry. The jar and lid are dishwasher safe.
3. **Assemble:** Place the blender jar securely onto the motor base. Ensure it clicks into place, activating the safety lock.
4. **Plug In:** Plug the power cord into a standard 110V electrical outlet.

5. OPERATING INSTRUCTIONS

The Anthter Professional Blender features a versatile control knob for various blending needs:

- **"0" (Off):** The blender is off. Always ensure the knob is in the "0" position before plugging in or unplugging the unit,

or before assembling/disassembling parts.

- **"P" (Pulse):** Rotate the knob to "P" and hold for short bursts of high-speed blending. Release to stop. This is ideal for chopping, quick mixing, or breaking down larger pieces.
- **"1-4" (Variable Speeds):** Rotate the knob to select continuous blending speeds from 1 (low) to 4 (high).
 - **Speeds 1-2:** Suitable for softer ingredients like bananas, carrots, cucumbers, and for making smooth purees.
 - **Speeds 3-4:** Best for harder ingredients, crushing ice, grinding nuts, or blending coffee beans.

General Usage Tips:

- Always add liquids first when making smoothies or shakes to ensure smooth blending.
- Cut large ingredients into smaller pieces (approx. 1 inch) before adding them to the blender.
- Do not overload the blender. Refer to the maximum fill line on the jar.
- For thick mixtures, use the pulse function or add more liquid to help the ingredients circulate.



4 Speed Control

Speed 1-2

Great for banana, carrot, cucumber ect.



Speed 3-4

Best for ice, nuts, coffee ect.



Pulse Best for fruits and smoothies



Image 4: Illustration of the 4-speed control knob and examples of ingredients suitable for different speed settings.



Image 5: Visual representation of the blender's versatile functions, including chopping, grinding, blending, and emulsifying.

6. CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your blender.

Self-Cleaning Function:

The 1.5L BPA-Free Tritan jar features a convenient self-cleaning function:

1. After use, rinse the jar.
2. Add warm water (up to half full) and a drop of dish soap to the jar.
3. Place the jar securely on the motor base and secure the lid.
4. Turn the control knob to a medium speed (e.g., Speed 2 or 3) and let it blend for approximately one minute.
5. Empty the soapy water, rinse the jar thoroughly with clean water, and let it air dry.

Manual Cleaning:

- **Blender Jar and Lid:** These parts are dishwasher safe. For manual cleaning, use warm, soapy water and a non-abrasive sponge. Be cautious around the sharp blades.
- **Motor Base:** Wipe the motor base with a damp cloth. Do not immerse the motor base in water or any other liquid.
- **Storage:** Store the blender in a clean, dry place.

7. TROUBLESHOOTING

If you encounter issues with your blender, refer to the table below for common problems and solutions:

Problem	Possible Cause	Solution
Blender does not turn on.	Not plugged in; Jar not properly seated; Overheat protection activated.	Ensure power cord is securely plugged in. Check that the blender jar is correctly locked onto the motor base. If the unit was recently used, unplug and allow it to cool for 15 minutes.
Motor smells or smokes.	Overloading; Prolonged continuous operation; New motor smell.	Unplug immediately. Reduce ingredients or add more liquid. Allow the motor to cool down completely (at least 30 minutes). A slight burning smell may occur during initial uses due to motor break-in, which is normal. If smoking persists, discontinue use and contact support.
Ingredients are not blending smoothly.	Too little liquid; Too many solid ingredients; Ingredients are too large.	Add more liquid. Reduce the amount of solid ingredients. Cut ingredients into smaller, uniform pieces. Use the pulse function to break down stubborn pieces.
Loud noise during operation.	Jar not seated correctly; Hard ingredients; Overloading.	Ensure the jar is securely locked. This blender is powerful, and some noise is normal, especially with hard ingredients or ice. Reduce load if noise is excessive.

If the problem persists after trying these solutions, please contact Anthter customer support.

8. PRODUCT SPECIFICATIONS

Feature	Specification
Brand	Anthter
Model	Professional Blender
Power	950W
Max RPM	Up to 30,000 RPM

Feature	Specification
Voltage	110 Volts
Capacity	1.5 Liters (50 Oz)
Jar Material	BPA-Free Tritan Glass
Blade Material	Stainless Steel (4-layer)
Color	Stainless Steel
Product Dimensions (DxWxH)	17.2"D x 8.11"W x 7.91"H
Item Weight	7.48 pounds
Controls Type	Knob (Pulse, 0, 1-4 Speeds)
Special Features	Multiple Speeds, Self-Cleaning, Safety Lock, Overheat/Overload Protection, Non-slip Feet

9. WARRANTY AND CUSTOMER SUPPORT

Your Anthter Professional Blender comes with a **3-YEAR WARRANTY** from the date of purchase. This warranty covers defects in materials and workmanship under normal household use.

The warranty does not cover damage resulting from accident, misuse, abuse, commercial use, unauthorized modification, or failure to follow the care and cleaning instructions.

For warranty claims, technical assistance, or any questions regarding your product, please contact Anthter Customer Support:

Website: [Visit the Anthter Store on Amazon](#)

Email: support@anthter.com

Phone: 1-800-XXX-XXXX

Please have your purchase receipt and product model information ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question