

[Manuals.plus](#) /

› [Andis](#) /

› Andis Slim Line 2 Cord/Cordless Trimmer Instruction Manual, Model 24800

Andis 24800

Andis Slim Line 2 Cord/Cordless Trimmer Instruction Manual

Model: 24800 | Brand: Andis

1. INTRODUCTION

The Andis Slim Line 2 Trimmer is designed for precise shaping and trimming of necklines, sideburns, and facial hair. This ultra-lightweight trimmer offers the convenience of both corded and cordless operation, making it suitable for various grooming needs. It features extra-sharp, stainless-steel T-blades and includes eight premium attachment combs for versatile styling.



Image 1.1: The Andis Slim Line 2 Cord/Cordless Trimmer, showcasing its sleek design and T-blade.

Key Features:

- **Cordless Operation:** Provides flexibility and convenience for trimming and shaping.
- **T-Blade Design:** Ensures clean and precise trimming of hair.
- **Multipurpose Use:** Ideal for trimming beards, mustaches, and light haircuts.
- **Ergonomic Handle:** Designed for a comfortable grip, allowing for easy and precise control.
- **Durable Construction:** Features durable metal housing and blade construction for long-lasting use.

2. SAFETY INFORMATION

To ensure safe operation and prevent injury or damage to the product, please adhere to the following safety guidelines:

- Always keep the trimmer away from water sources. Do not use near bathtubs, showers, basins, or other vessels containing water.
- Be cautious when handling the trimmer, as it has sharp blades. Avoid direct contact with the skin unless

intentionally trimming.

- Always clean the trimmer after use to prevent skin irritation or infection and maintain hygiene.
- Do not use the trimmer on infants or young children.
- Inspect the trimmer and power cord for any damage before each use. Do not operate if damaged.
- Keep out of reach of children and pets.

3. SETUP

3.1 Initial Charging

Before first use, ensure the trimmer is fully charged. Connect the dual-voltage charger to the charging port at the bottom of the trimmer and then plug it into a suitable power outlet. The indicator light will illuminate to show the charging status. Allow sufficient time for a full charge as indicated in the product packaging.



Image 3.1: Bottom view of the trimmer, highlighting the charging port for power connection.

3.2 Attaching Guide Combs

The trimmer comes with eight premium attachment combs to achieve various hair lengths. To attach a comb, select the desired size, align it with the trimmer blade, and gently push until it snaps securely into place. To remove, firmly grasp the comb and pull it away from the blade.

4. OPERATING INSTRUCTIONS

Follow these steps for effective and safe operation of your Andis Slim Line 2 Trimmer:

1. **Prepare the Trimmer:** Ensure the trimmer is adequately charged for cordless use, or connect the power cord for continuous operation.
2. **Select Comb (Optional):** Attach the desired guide comb for specific hair lengths, or use the trimmer without a comb for closer trimming and detailing.
3. **Power On:** Locate the power switch and slide it to the 'ON' position.
4. **Begin Trimming:** Gently place the blade against the skin and trim hair or beard following your desired shape and style. Move the trimmer against the direction of hair growth for best results.
5. **Clean After Use:** After completing your trim, turn off the trimmer and proceed with the cleaning instructions outlined in the Maintenance section.

Note on Blade Adjustment: The T-blade on the Andis Slim Line 2 Trimmer is factory-set for optimal performance and is not designed for user adjustment or 'zero-gapping'. Attempting to adjust the blades may damage the trimmer and void the warranty.

5. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your trimmer.

5.1 Cleaning the Blades

After each use, turn off the trimmer and remove any attached combs. Use the provided cleaning brush to carefully brush away loose hair from the blades and the trimmer head. For a more thorough cleaning, the blades can be wiped with a slightly damp cloth, then immediately dried completely to prevent rust.



Image 5.1: Close-up view of the T-blade, emphasizing the area to be cleaned and oiled.

5.2 Oiling the Blades

Regular oiling is essential for maintaining blade sharpness and smooth operation. Apply 1-2 drops of clipper oil (not included, but recommended by Andis) to the teeth of the blade while the trimmer is running. Allow the trimmer to run for a few seconds to distribute the oil evenly, then turn it off and wipe off any excess oil with a clean, dry cloth.

5.3 Storage

Store the trimmer in a cool, dry place, away from moisture and direct sunlight. Ensure the blades are protected, ideally with a blade guard, to prevent damage and maintain their sharpness.

6. TROUBLESHOOTING

If you encounter issues with your Andis Slim Line 2 Trimmer, refer to the following common troubleshooting tips:

- **Trimmer Does Not Turn On:**
 - Check if the battery is fully charged.

- If using corded, ensure the power cord is securely connected to both the trimmer and the power outlet.

- **Poor Cutting Performance:**

- Blades may be dirty or clogged with hair. Clean the blades thoroughly as described in the Maintenance section.
- Blades may require oiling. Apply clipper oil as instructed.
- If performance does not improve after cleaning and oiling, the blades may be dull and require replacement.

- **Excessive Noise or Vibration:**

- Blades may be dirty or require oiling. Clean and oil the blades.
- Ensure the blade is properly seated and secured.
- If noise persists, contact Andis customer support.

- **Finish Peeling or Damaged:**

- Avoid using harsh chemicals, abrasive cleaners, or solvents on the trimmer's finish, as these can cause damage. Use only a soft, damp cloth for cleaning the body.

7. SPECIFICATIONS

Brand	Andis
Model Number	24800
Power Source	Battery Powered (Cord/Cordless)
Blade Type	T-Blade
Recommended Uses	Beard, Mustache, Trimming
Color	Gray
Item Weight	0.51 Kilograms (1.12 Pounds)
Package Dimensions	8.27 x 5.31 x 4.61 inches
UPC	040102248009

8. WARRANTY AND SUPPORT

This Andis product is covered by a manufacturer's warranty. For detailed information regarding warranty terms, conditions, and duration, please refer to the warranty card or documentation included in your product packaging. It is recommended to retain your proof of purchase for warranty claims.

For technical assistance, troubleshooting beyond this manual, or to inquire about warranty service, please contact Andis customer support directly through their official website or the contact information provided in your product documentation.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question