

## LG AKB75675304

# LG AKB75675304 Smart TV Remote Control User Manual

Model: AKB75675304

## INTRODUCTION

This manual provides instructions for the proper setup, operation, and maintenance of your LG AKB75675304 Smart TV Remote Control. This remote is designed to provide convenient control over compatible LG Smart TVs, featuring dedicated buttons for popular streaming services like Netflix and Prime Video.

## SETUP

### Battery Installation

Before using the remote control, you must install two AA batteries.



**Figure 1:** Back view of the remote control with the battery cover.

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover off.
3. Insert two (2) AA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



**Figure 2:** Battery compartment with batteries inserted. Ensure correct polarity.

**Note:** Batteries are not included with the remote control. Always use new batteries and replace both batteries at the same time. Do not mix old and new batteries or different types of batteries.

## OPERATING INSTRUCTIONS

---

The LG AKB75675304 remote control provides intuitive access to your television's functions. Point the remote directly at the TV's remote sensor for optimal performance.



**Figure 3:** Front view of the LG AKB75675304 Remote Control with button layout.

## Button Functions

- **Power** ( ): Turns the TV on or off.
- **Number Buttons (0-9)**: Enters channel numbers or other numerical inputs.
- **VOL (+/-)**: Adjusts the volume level.
- **CH (Page Up/Down)**: Changes TV channels.
- **NETFLIX**: Direct access to the Netflix application.
- **prime video**: Direct access to the Prime Video application.
- **Home** ( ): Displays the Home menu or Smart TV interface.
- **Back** (←): Returns to the previous screen or menu.
- **Exit** (✕): Exits the current menu or application.

- **Directional Pad** (▲ Up, ▼ Down, ◀ Left, ▶ Right): Navigates through menus and options.
- **OK**: Confirms a selection.
- **CC/SUB**: Activates or deactivates Closed Captions or Subtitles.
- **Settings** (⚙️): Accesses TV settings.
- **GUIDE**: Displays the electronic program guide.
- **INFO**: Displays information about the current program.
- **SAP**: Selects Secondary Audio Program (if available).
- **MOVIES**: Direct access to a movie service or menu.
- **REC**: Initiates recording (if supported by TV and external storage).
- **Playback Controls** (◀◀ Rewind, ▶ Play, ⏸ Pause, ▶▶ Fast Forward, ■ Stop): Controls media playback.
- **Colored Buttons** (Red, Green, Yellow, Blue): These buttons perform specific functions depending on the current menu or application. Refer to your TV's on-screen display for their current purpose.

## COMPATIBILITY

The LG AKB75675304 remote control is compatible with a wide range of LG Smart TVs. While it provides basic functions for any LG branded TV, its advanced features, including dedicated streaming buttons, are optimized for specific Smart TV models. Below is a list of TV lines known to be compatible:

- **UN Line**: 43UN7300PSC, 49UN7300PSC, 50UN7310PSC, 50UN8000PSB, 50UN8000PSD, 55UN7100PSA, 55UN7310PSC, 60UN7310PSC, 65UN7100PSA, 65UN7310PSC, 70UN7310PSC, 75UN8000PSB, 82UN8000PSB, 86UN8000PSB
- **Nano Cell Line**: 49NANO80UNA, 55NANO80UNA, 65NANO80UNA, 49NANO81ANA, 49NANO81UNA, 55NANO81ANA, 55NANO81UNA, 65NANO81ANA, 65NANO81UNA, 49NANO85UNA, 55NANO85UNA, 65NANO85UNA, 75NANO85UNA, 49NANO86UNA, 55NANO86UNA, 65NANO86UNA, 55NANO90UNA, 65NANO90UNA, 75NANO90UNA, 86NANO90UNA, 55NANO91ANA, 55NANO91UNA, 65NANO91ANA, 75NANO91ANA, 49NANO81SNA, 55NANO81SNA, 55NANO86SNA, 65NANO81SNA, 65NANO86SNA, 75NANO90SNA, 86NANO90SNA
- **OLED Line**: OLED55BXPSA, OLED55CXPSA, OLED65BXPSA, OLED65CXPSA, OLED77CXPSA, OLED55C9PSA, OLED55B9PSB, OLED65E9PSA, OLED65C9PSA, OLED65B9PSB, OLED77C9PSB, OLED55B7P, OLED65B7P, OLED65E7P, OLED55C7P, OLED65C7P
- **LM Line**: 32LM620BPSA, 32LM621CBSB, 32LM625BPSB, 43LM6300PSB, 43LM631COSB
- **SM Line**: 49SM8000PSA, 55SM8100PSA, 55SM8600PSA, 55SM9000PSA, 65SM8100PSA, 65SM8600PSA, 65SM9000PSA, 86SM9070PSA
- **UM Line**: 43UM7300PSA, 43UM7500PSB, 43UM7510PSB, 49UM7300PSA, 50UM7360PSA, 50UM7500PSB, 50UM7510PSB, 55UM7470PSA, 55UM7520PSB, 55UM7650PSB, 60UM7270PSA, 65UM7470PSA, 65UM7520PSB, 65UM7650PSB, 70UM7370PSA, 75UM7510PSB, 82UM7570PSB, 43UM751C0SB, 49UM731C0SA, 50UM751C0SB, 55UM761C0SB, 60UM721C0SA, 65UM761C0SB, 751C0SB
- **LK Line**: 32LK610BPSA, 32LK615BPSB, 32LK611C, 43LK571C, 43LK5700PSC, 49LK5700PSC, 43LK5750PSA, 49LK5750PSA
- **SK Line**: 55SK9500PLA, 65SK9500PLA, 55SK8000PSA, 65SK8000PSA, 75SK8000PSA, 55SK8500PSA, 65SK8500PSA
- **UK Line**: 49UK631C, 55UK631C, 65UK651C, 75UK651C, 43UK6310PSE, 49UK6310PSE, 43UK6510PSF, 50UK6510PSF, 43UK6520PSA, 50UK6520PSA, 75UK6520PSA, 86UK6520PSA, 43LK5750PSA, 49LK5750PSA, 55UK6360PSF, 55UK6530PSF, 55UK6540PSB, 65UK6540PSB, 70UK6540PSA
- **SJ Line**: 55SJ8000, 55SJ800A, 55SJ8500, 60SJ8000, 60SJ800A, 60SJ8500, 65SJ8000, 65SJ8000A, 65SJ8A, 65SJ80000000A, 65SJ8A, 65SJ800000008500, 65SJ9500, 75SJ8570, 86SJ9570, 49SJ8000, 55SJ8000, 65SJ8000, 55SJ9500, 65SJ9500, 86SJ9570
- **UJ Line**: 43UJ7500, 49UJ750, 55UJ7500, 65UJ7500, 55UJ6585, 60UJ6585, 65UJ6585, 70UJ6585,

75UJ6585, 43UJ6300, 49UJ6300, 55UJ630, 60UJ6300, 43UJ6525, 43UJ6565, 49UJ6565, 49UJ6525, 55UJ6545, 60UJ6545, 65UJ6545

This list is not exhaustive. If your LG TV is a Smart TV, this remote control is likely to provide basic and smart menu access.

## MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Care:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage.
- **Storage:** Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures.

## TROUBLESHOOTING

Problem	Solution
Remote control is not responding.	<ul style="list-style-type: none"><li>• Check if the batteries are inserted correctly with the correct polarity.</li><li>• Replace the batteries with new ones.</li><li>• Ensure there are no obstructions between the remote control and the TV's sensor.</li><li>• Point the remote directly at the TV's sensor.</li></ul>
Specific buttons are not working.	<ul style="list-style-type: none"><li>• Clean the remote control, especially around the non-working buttons, to remove any debris.</li><li>• Ensure the TV model is fully compatible with all features of this remote. Some advanced functions may require specific TV firmware or hardware.</li></ul>
Smart TV buttons (Netflix, Prime Video) are not launching apps.	<ul style="list-style-type: none"><li>• Ensure your TV is connected to the internet.</li><li>• Verify that the Netflix and Prime Video applications are installed and updated on your Smart TV.</li><li>• Check your TV's settings for any remote control or app launch configurations.</li></ul>

## SPECIFICATIONS

- **Model Name:** AKB75675304
- **Brand:** LG
- **Controller Type:** Button Control
- **Connectivity Technology:** Infrared
- **Compatible Devices:** Television
- **Supported Devices Quantity:** 1
- **Number of Buttons:** 25
- **Color:** Black
- **Power Source:** 2 x AA Batteries (not included)
- **Product Dimensions:** 3 x 5 x 8 cm
- **Product Weight:** 100 g

## WARRANTY AND SUPPORT

---

For specific warranty information, please refer to the documentation provided with your original television purchase or contact LG customer support directly. This remote control is an accessory, and its warranty may be tied to the main product or have a separate limited warranty.

For further assistance or technical support, please visit the official LG website or contact their customer service department in your region. Ensure you have your TV model number and the remote control model number (AKB75675304) available when seeking support.