

[Manuals.plus](#) /

> [Apple](#) /

> Apple TV Siri Remote (3rd Generation) User Manual

Apple MNC73AM/A

Apple TV Siri Remote (3rd Generation)

INSTRUCTION MANUAL

Introduction

This manual provides comprehensive instructions for the setup, operation, and maintenance of your Apple TV Siri Remote (3rd Generation). Designed for precise control, this remote enhances your Apple TV experience with its intuitive features and voice command capabilities.

Product Overview

The Apple TV Siri Remote (3rd Generation) features a sleek design with a touch-enabled clickpad and dedicated buttons for various functions. It is built for comfortable handling and efficient navigation of your Apple TV.





Image 1: Front view of the Apple TV Siri Remote (3rd Generation), showing the clickpad, menu, TV, play/pause, volume, and mute buttons, along with the power button at the top.





Image 2: Back view of the Apple TV Siri Remote (3rd Generation), featuring the Apple logo and a smooth silver finish.

Key Features:

- **Touch-Enabled Clickpad:** For precise navigation, selecting titles, and swiping through content.
- **Siri Voice Control:** Activate Siri to search for content, control playback, and more using your voice.
- **Dedicated Buttons:** Includes buttons for power, TV/Control Center, Menu/Back, Play/Pause, Volume Up/Down, and Mute.
- **USB-C Charging:** Convenient port for recharging the remote's internal battery.

Setup

Pairing the Siri Remote with Apple TV:

1. Ensure your Apple TV is powered on and connected to your television.
2. Bring the new Siri Remote close to your Apple TV (within 3-4 inches).
3. Press any button on the new remote. Your Apple TV should display a message indicating that the remote is pairing.
4. If the remote does not pair automatically, press and hold the **TV/Control Center button** and the **Volume Down button** simultaneously for 5 seconds. This will put the remote into pairing mode.
5. Follow any on-screen instructions to complete the pairing process.

Charging the Siri Remote:

The Siri Remote (3rd Generation) includes a built-in rechargeable battery. To charge the remote:

1. Locate the USB-C port on the bottom edge of the remote.
2. Connect a USB-C cable (not included) to the remote and the other end to a USB-C power adapter or a USB-C port on a computer.
3. The remote will begin charging. A full charge typically takes a few hours. You can check the battery level on your Apple TV in Settings > Remotes and Devices > Remote.

Operating Instructions

The Siri Remote offers several ways to interact with your Apple TV. Familiarize yourself with the buttons and gestures for optimal use.





Image 3: A hand holding the Apple TV Siri Remote (3rd Generation), demonstrating its ergonomic design and how it fits in the hand for easy operation.

Using the Clickpad:

- **Navigate:** Swipe your thumb across the clickpad surface to move between items on the screen.
- **Select:** Press the center of the clickpad to select a highlighted item.
- **Fast-forward/Rewind:** During playback, use a circular gesture on the outer ring of the clickpad to quickly scrub through video content. Swipe clockwise to fast-forward, counter-clockwise to rewind.

Siri Voice Commands:

- Press and hold the **Siri button** (microphone icon) to activate Siri.
- Speak your command clearly into the remote's microphone.
- Release the Siri button when you are finished speaking.
- Examples: "Find action movies," "Play the latest episode of [show name]," "What's the weather like?"

Button Functions:

- **Power Button** (circle with vertical line icon): Turns your TV or receiver on/off.
- **TV/Control Center Button** (TV screen icon): Press once to go to the Apple TV app or Home Screen. Press and hold to open Control Center.
- **Menu/Back Button** (left arrow icon): Press once to go back to the previous screen. Press and hold to return to the Home Screen.
- **Play/Pause Button** (triangle and two vertical lines icon): Plays or pauses content.
- **Volume Up/Down Buttons** (+ and - icons): Controls the volume of your TV or receiver.
- **Mute Button** (speaker with a cross icon): Mutes or unmutes the audio.

Maintenance

Cleaning the Remote:

To clean your Siri Remote, use a soft, lint-free cloth. Dampen the cloth slightly with water if necessary. Avoid using abrasive materials, aerosols, or cleaning sprays directly on the remote.

Battery Care:

The remote contains a non-user-replaceable rechargeable lithium-ion battery. For optimal battery life, avoid exposing the remote to extreme temperatures. Recharge the remote when the battery level is low, as indicated on your Apple TV.

Troubleshooting

Problem	Solution
Remote is unresponsive.	• Ensure the remote is charged. Connect it to a USB-C power source. • Restart your Apple TV by unplugging it from power for 6 seconds, then plugging it back in. • Try re-pairing the remote (see "Pairing the Siri Remote with Apple TV" in the Setup section).
Siri is not responding.	• Make sure you are pressing and holding the Siri button while speaking. • Check your Apple TV's internet connection. Siri requires an active internet connection. • Verify Siri is enabled in Apple TV Settings > General > Siri.
Volume buttons not controlling TV.	• Ensure your TV is compatible with HDMI-CEC (Consumer Electronics Control) or that you have manually configured the remote to control your TV's volume. • Go to Apple TV Settings > Remotes and Devices > Volume Control and select the appropriate option (e.g., TV via IR, Auto via HDMI).

Specifications

Model Number	MNC73AM/A
ASIN	B0BJLD7KGM
Dimensions (L x W x H)	1.04 x 6.93 x 2.62 inches
Item Weight	4.2 ounces
Battery Type	1 Lithium Ion battery (included, non-replaceable)
Charging Port	USB-C
Special Features	Ergonomic, Rechargeable, Voice Search
Color	Silver
Manufacturer	Apple

Compatibility:

The Apple TV Siri Remote (3rd Generation) is compatible with the following Apple TV models:

- Apple TV 4K (3rd generation)
- Apple TV 4K (2nd generation)
- Apple TV 4K (1st generation)
- Apple TV HD

Warranty and Support

For information regarding product warranty, please refer to the warranty documentation included with your original Apple TV purchase or visit the official Apple Support website. Apple provides various support resources, including online guides, troubleshooting articles, and direct customer service.

Official Apple Support: For further assistance, visit support.apple.com.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question