

WELOV S25

WELOV S25 Lightweight Cordless Vacuum Cleaner User Manual

Model: S25 | Brand: WELOV

1. SAFETY INSTRUCTIONS

Please read all safety instructions carefully before using the WELOV S25 Cordless Vacuum Cleaner. Keep this manual for future reference.

- Do not use the appliance outdoors or on wet surfaces.
- Do not allow children to operate the vacuum cleaner. Close supervision is necessary when used near children.
- Do not pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without dust cup and/or filters in place.
- Turn off the appliance before connecting or disconnecting the motorized brush.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.

2. WHAT'S INCLUDED

The WELOV S25 Cordless Vacuum Cleaner package includes the following components:

- Main Body (Handheld Unit)
- Extension Tube (Red)
- Power Brush (Floor Tool with LED lights)
- Crevice Tool

- 2-in-1 Upholstery Tool
- Power Adapter (Charger)
- Wall Mount Bracket
- Screw Package for Wall Mount
- Extra HEPA Filter

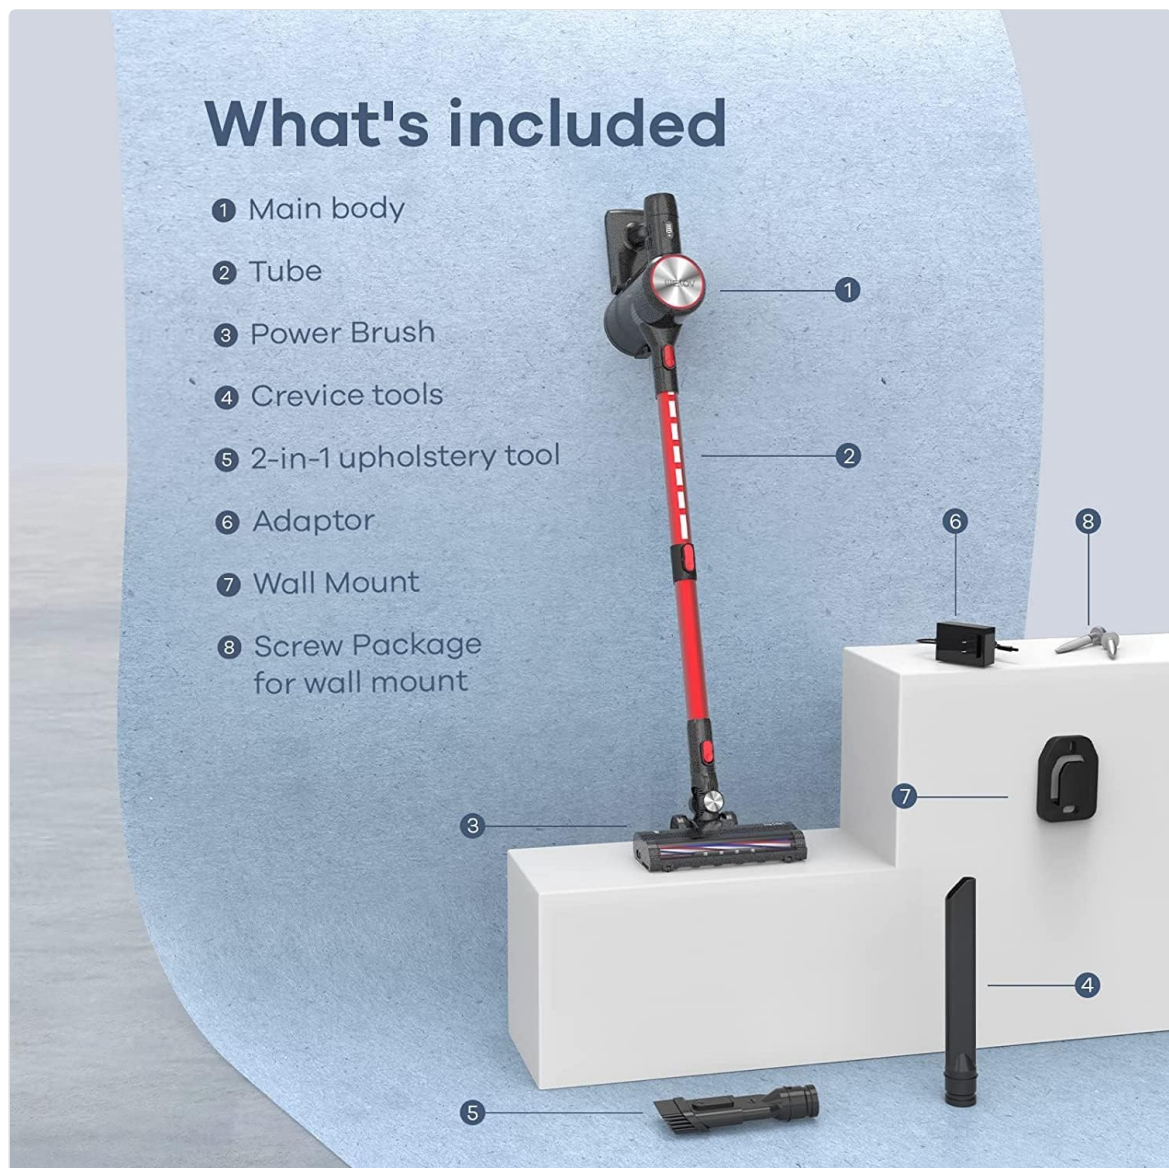 


Image: All components included in the WELOV S25 package, laid out clearly. This includes the main body, extension tube, power brush, various attachments, charger, and wall mount accessories.

3. ASSEMBLY

Follow these steps to assemble your WELOV S25 Cordless Vacuum Cleaner:

1. **Connect the Extension Tube:** Align the main body with the extension tube and push until it clicks securely into place.
2. **Attach the Power Brush:** Connect the power brush to the other end of the extension tube, ensuring it clicks firmly.
3. **Install Accessories:** For handheld use, attach the crevice tool or 2-in-1 upholstery tool directly to the main body. For extended reach, attach them to the extension tube.

Easy Installation and Removal

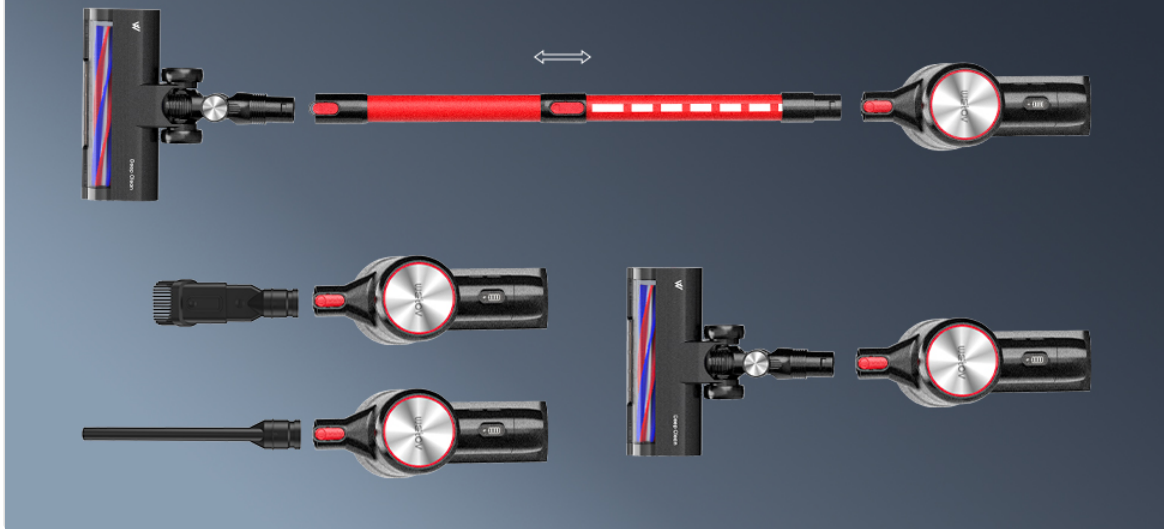 


Image: A visual guide demonstrating the simple click-in mechanism for assembling the main body, extension tube, and various cleaning attachments.

Video: This video demonstrates the unboxing and assembly process of the WELOV S25 Cordless Vacuum Cleaner, showing how to connect the main unit, extension wand, and floor brush, as well as other accessories.

4. CHARGING THE BATTERY

Before first use, fully charge the vacuum cleaner. A full charge typically takes 3-4 hours.

1. Connect the power adapter to the charging port on the main body of the vacuum cleaner.
2. Plug the adapter into a wall outlet.
3. The battery indicator lights on the main body will illuminate to show the charging status. All lights will be solid when fully charged.
4. For convenient storage and charging, use the included wall mount bracket.

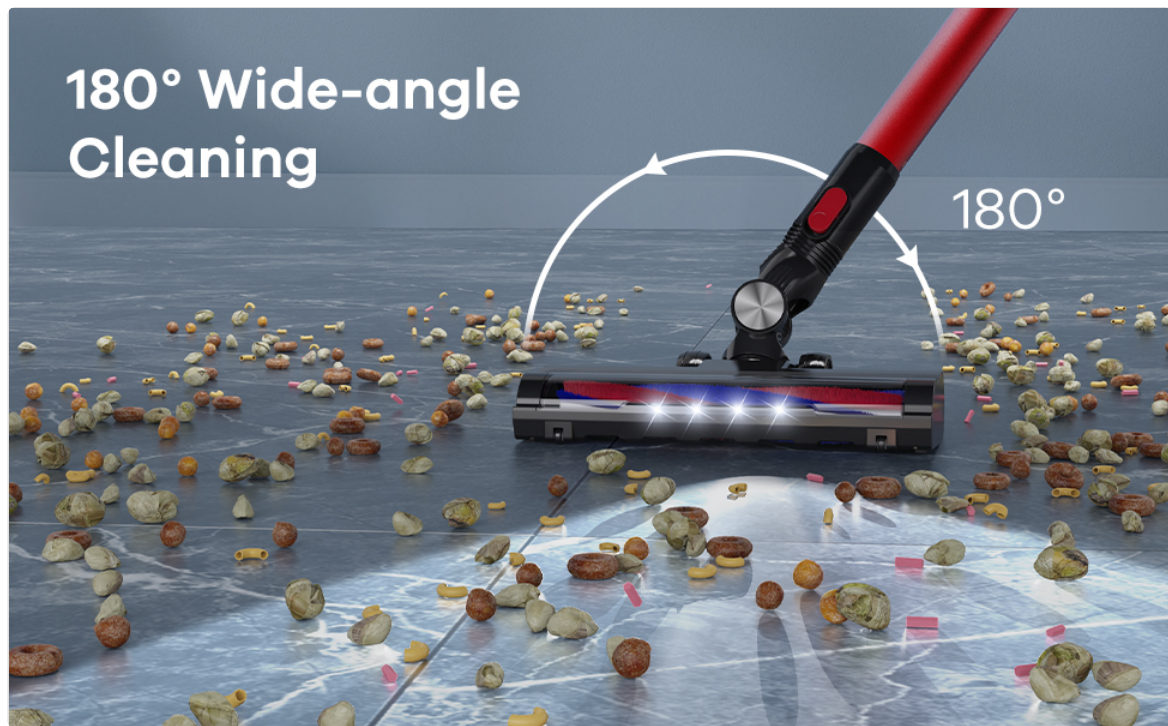 


Image: This image illustrates the two available charging modes for the vacuum cleaner, including direct plug-in and wall-mounted charging.

Video: This video segment demonstrates how to plug in the charger and shows the battery indicator lights during the charging process.

5. OPERATING INSTRUCTIONS

The WELOV S25 offers versatile cleaning options for various surfaces.

5.1 Power On/Off and Suction Modes

- Press the power button on the main body to turn the vacuum on.
- Press the mode button to switch between two suction modes: standard (for everyday cleaning) and max (for stubborn dirt and deep cleaning).
- The LED indicator on the power brush illuminates the cleaning path, making dust and debris visible in dimly lit areas.

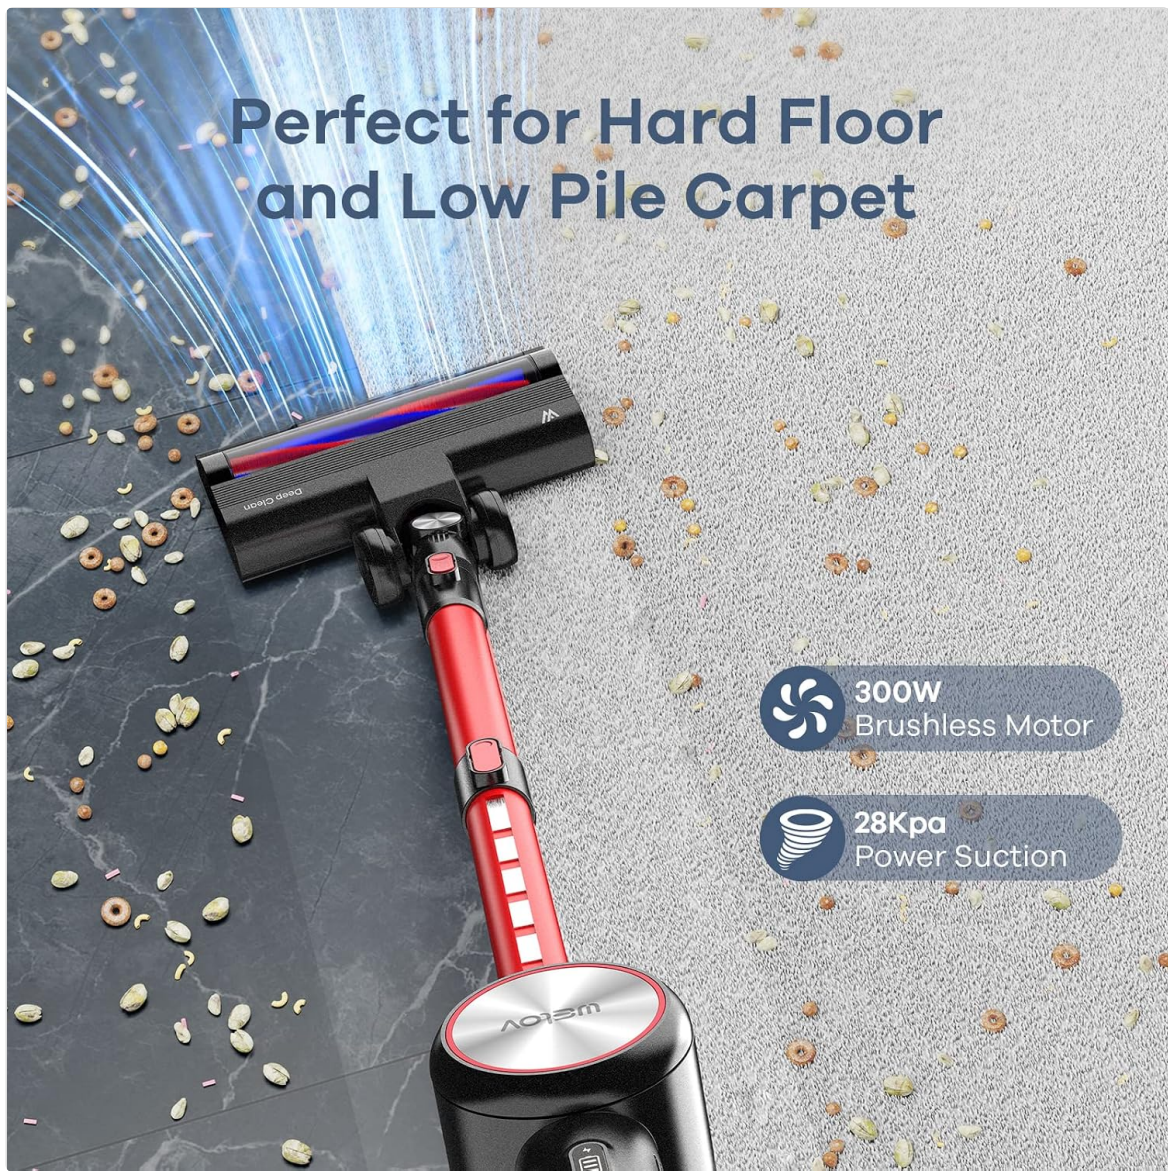 


Image: The WELOV S25 vacuum cleaner in action, effectively cleaning both hard floors and low-pile carpets, highlighting its 300W brushless motor and 28Kpa powerful suction.

28Kpa Max Suction



Slow Speed $\geq$ 40Mins



High Speed $\geq$ 20Mins



Image: This image illustrates the 28Kpa Max Suction capability of the WELOV S25, detailing approximate runtimes of 40 minutes on slow speed and 20 minutes on high speed.

5.2 Versatile Cleaning with Attachments

- **Floor Cleaning:** Use the power brush with the extension tube for efficient cleaning of hard floors and low-pile carpets. The flexible head allows for 180° wide-angle cleaning and 90° vertical movement.
- **Handheld Mode:** Detach the extension tube and power brush to convert the unit into a handheld vacuum. Attach the crevice tool for tight spaces or the 2-in-1 upholstery tool for furniture and delicate surfaces.



Image: The WELOV S25 vacuum cleaner showcasing its 180-degree wide-angle cleaning capability, allowing for easy maneuverability around obstacles.

Converts to Handheld Vacuum



Image: A visual representation of the WELOV S25 transforming into a handheld vacuum, suitable for cleaning curtains, car interiors, and furniture.

Video: This video demonstrates the WELOV S25 in action, vacuuming both tiled and carpeted floors, showcasing its maneuverability and suction power. It also highlights the LED lights on the brush head.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

6.1 Emptying the Dustbin

- To empty the dustbin, hold the main body over a trash can.
- Press the one-touch release button on the dustbin to open the bottom flap and release collected debris.

6.2 Cleaning the Filters

The WELOV S25 features a 4-stage high-efficient filter system, including a HEPA filter and a stainless steel strainer. These filters are washable.

1. Twist and pull to remove the dustbin from the main body.
2. Remove the HEPA filter and stainless steel strainer from the dustbin.
3. Rinse both filters under running water until clean. Ensure they are completely dry before reinserting.
4. Reassemble the filters and dustbin, then reattach to the main body.



Image: An exploded view illustrating the 4-stage high-efficient filter system, including the sponge filter, cyclone filter, stainless steel strainer, and HEPA filter.



Image: A close-up showing the internal components of the 4-stage high-efficiency filter system, emphasizing its ability to capture 99.99% of dust.

Video: This video segment demonstrates how to empty the dustbin with a one-touch release and how to remove and wash the filters for thorough cleaning.

7. TROUBLESHOOTING

If you encounter any issues with your WELOV S25, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is not charged.	Charge the battery fully.
Low suction power.	Dustbin is full or filters are clogged.	Empty the dustbin and clean the filters.
Brush roll not spinning.	Hair or debris tangled in the brush roll.	Remove any tangled hair or debris from the brush roll.
Short battery life.	Using max suction mode continuously.	Switch to standard mode for longer runtime. Ensure battery is fully charged before use.

8. SPECIFICATIONS

Key technical specifications for the WELOV S25 Cordless Vacuum Cleaner:

Feature	Detail
---------	--------

Feature	Detail
Brand	WELOV
Model	S25
Special Feature	HEPA, Lightweight
Filter Type	Cartridge (Washable HEPA, Stainless Steel Atrainer)
Is Cordless?	Yes
Capacity	0.7 Liters
Wattage	300 watts
Recommended Uses	Hard Floor, Low Pile Carpet, Pet Hair
Form Factor	Handheld, Stick
Battery Type	Lithium-Ion
Noise Level	75 Decibels
Battery Life	Up to 45 minutes (Slow Speed)
Product Dimensions	13 x 5 x 9 inches
Item Weight	2.65 pounds



300W Brushless Digital Motor

Easily Clean Any Messes

Image: An internal view of the WELOV S25 main body, highlighting the 300W brushless digital motor for efficient cleaning.

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included in your product packaging or contact WELOV customer service directly. Contact details can typically be found on the official WELOV website or through your retailer.