

- [Manuals.plus](#) /
- › [Limitless Innovations](#) /
 - › Limitless TikiTunes Pro Portable Bluetooth Speaker User Manual

Limitless Innovations TIKITUNES-PRO-028

Limitless TikiTunes Pro Portable Bluetooth Speaker User Manual

Model: TIKITUNES-PRO-028

INTRODUCTION

The Limitless TikiTunes Pro is a portable Bluetooth speaker designed to provide audio playback and ambient lighting. It features a 360-degree speaker design for immersive sound and an LED flame light with multiple modes. This device is built for portability and can connect with up to 100 other TikiTunes Pro speakers for a synchronized audio experience.

TikiTunes Pro™

BLUETOOTH® SPEAKER + AMBIENT LIGHT



Image: The TikiTunes Pro speaker, showcasing its ambient light feature, positioned on an outdoor table alongside a smartphone.

PRODUCT COMPONENTS

Familiarize yourself with the various parts and controls of your TikiTunes Pro speaker.

TikiTunes Pro™

COMPONENTS



Image: A detailed diagram illustrating the various components of the TikiTunes Pro speaker, including the control panel, ambient light, and threaded insert.

- **Control Panel:** Located on the top, contains all operational buttons.
- **Ambient Light:** The central section that emits the LED flame effect.
- **Threaded Insert:** Located at the bottom for mounting accessories (e.g., poles).
- **USB-C Charging Port:** For connecting the charging cable.
- **Speaker Grille:** Located at the base for audio output.

SETUP

Charging the Speaker

Before first use, fully charge your TikiTunes Pro speaker.

1. Connect the included 36-inch Type-C to USB-A cable to the charging port on the speaker.

2. Connect the USB-A end of the cable to a compatible USB power adapter (not included).
3. The battery indicator light will show charging status. A full charge typically takes several hours.

The speaker is equipped with a 4000 mAh battery, providing up to 12 hours of playtime on a full charge.



Image: Top view of the TikiTunes Pro control panel, highlighting the speaker's battery life of up to 12 hours.

Power On/Off

- To power on, press and hold the **Power button** for 3 seconds.
- To power off, press and hold the **Power button** for 3 seconds.

Bluetooth Pairing

Pair your TikiTunes Pro with a Bluetooth-enabled device to stream audio.

1. Ensure the speaker is powered on. The Bluetooth indicator light will flash, indicating it's in pairing mode.
2. On your device (smartphone, tablet, laptop), navigate to the Bluetooth settings.

3. Select "TikiTunes Pro" from the list of available devices.
4. Once connected, the Bluetooth indicator light will remain solid.

OPERATING INSTRUCTIONS

Audio Playback

- **Play/Pause:** Press the **Play/Pause button** to play or pause audio.
- **Volume Up:** Press the **'+' button**.
- **Volume Down:** Press the **'-' button**.
- **Next Track:** Press and hold the **'+' button**.
- **Previous Track:** Press and hold the **'-' button**.



Image: A user interacting with a smartphone, demonstrating the TikiTunes Pro's 360-degree room-filling audio capability.

Flame Light Modes

The TikiTunes Pro features a 3-mode LED flame light.

- Press the **Flame button** to cycle through the light modes:
 - a. Flickering Flame
 - b. Solid Light
 - c. Off



Image: A hand pressing the flame button on the TikiTunes Pro, activating its flickering LED flame effect.

Multi-Sync (PartySync™) Mode

Connect up to 100 TikiTunes Pro speakers for a synchronized audio experience.

1. Ensure all speakers are powered on and not connected to any Bluetooth device.
2. On the **first speaker** (which will be the primary speaker), press the **PartySync™ button**. The indicator light will flash.
3. On each **additional speaker**, press the **PartySync™ button**. They will automatically connect to the primary speaker.
4. Once all desired speakers are connected, pair your device to the primary speaker via Bluetooth as described in the

"Bluetooth Pairing" section.

5. Audio will now play simultaneously across all connected TikiTunes Pro speakers.



Image: A woman on a patio with multiple TikiTunes Pro speakers, illustrating the Party Sync Technology for connecting up to 100 speakers.

MAINTENANCE

To ensure the longevity and optimal performance of your TikiTunes Pro speaker, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe the exterior of the speaker. Do not use abrasive cleaners or solvents.
- **Water Resistance:** The TikiTunes Pro has an IPX6 rating, meaning it is resistant to high-pressure water jets. It is not designed for submersion. Ensure the charging port cover is securely closed when exposed to water.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures when not in use for extended periods.
- **Battery Care:** For best battery life, avoid fully discharging the battery frequently. Charge the speaker regularly, even if

not in use, to maintain battery health.



Image: The TikiTunes Pro speaker positioned near a pool, emphasizing its IPX6 water-resistant and dust-tight design.

TROUBLESHOOTING

If you encounter issues with your TikiTunes Pro, refer to the following common problems and solutions:

Problem	Solution
Speaker does not power on.	Ensure the battery is charged. Connect the speaker to a power source using the provided USB-C cable.

Problem	Solution
Cannot pair with Bluetooth device.	• Ensure the speaker is in pairing mode (flashing Bluetooth indicator). • Make sure Bluetooth is enabled on your device. • Move the speaker closer to your device. • Forget "TikiTunes Pro" from your device's Bluetooth list and try pairing again. • Ensure no other devices are currently connected to the speaker.
No sound or low volume.	• Increase the volume on both the speaker and your connected device. • Ensure the speaker is properly paired and connected. • Check if the audio source is playing.
Flame light is not working.	Press the Flame button to cycle through the light modes. Ensure the speaker has sufficient battery charge.
PartySync™ mode not connecting.	• Ensure all speakers are powered on and not individually paired to any Bluetooth device. • Press the PartySync™ button on the primary speaker first, then on each secondary speaker. • Ensure speakers are within range of each other.

SPECIFICATIONS

Detailed technical specifications for the Limitless TikiTunes Pro speaker:

Model Name	YTY-21700-4000mAh-3.7V
Item Model Number	TIKITUNES-PRO-028
Brand	Limitless Innovations
Speaker Type	Component
Special Feature	Portable, LED Flame Light, Multi-Sync
Compatible Devices	Smartphone, Tablet, Laptop
Connectivity Technology	Bluetooth
Wireless Communication Technology	Bluetooth
Speaker Maximum Output Power	10 Watts
Power Source	Battery Powered
Battery Capacity	4000 mAh
Playtime	Up to 12 hours
Water Resistance Rating	IPX6
Product Dimensions	3.98"D x 3.98"W x 7.4"H
Item Weight	1.48 pounds
Included Components	36" Type-C to USB-A Cable

UPC

850031971325



7.4"

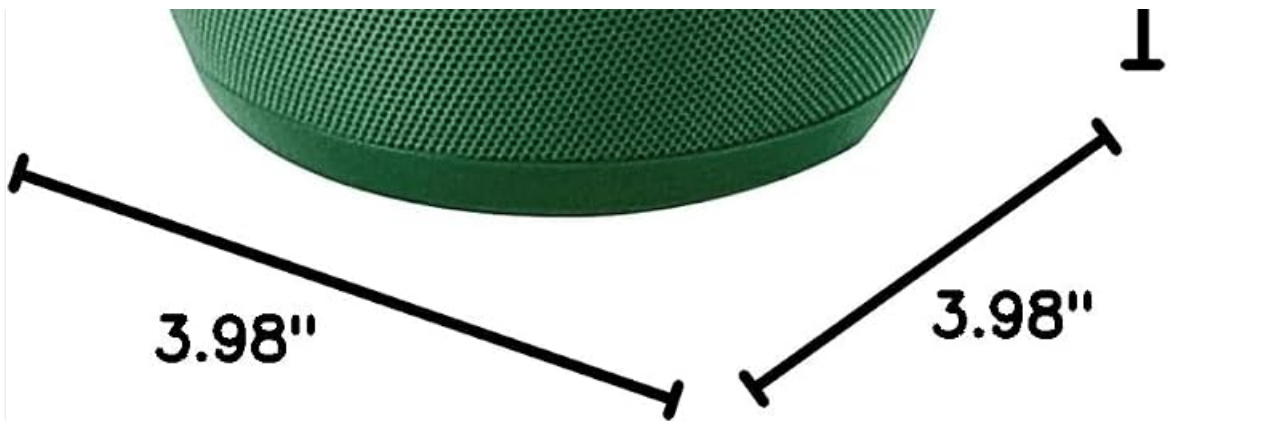


Image: A diagram illustrating the physical dimensions of the TikiTunes Pro speaker: 3.98 inches (depth), 3.98 inches (width), and 7.4 inches (height).

WARRANTY INFORMATION

The Limitless TikiTunes Pro speaker comes with a limited warranty. For specific details regarding warranty coverage, duration, and terms, please refer to the warranty card included with your product or visit the official Limitless Innovations website.

CUSTOMER SUPPORT

For further assistance, technical support, or inquiries about your Limitless TikiTunes Pro speaker, please visit the official Limitless Innovations website or contact their customer service department.

[Visit the Limitless Innovations Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BJMGWFFT>

More documents and user manuals: <https://manuals.plus/>