

[Manuals.plus](#) /

> [SUNVIVI](#) /

> Sunvivi 26-Quart Electric Roaster Oven Instruction Manual

SUNVIVI ZER008

Sunvivi 26-Quart Electric Roaster Oven Instruction Manual

Model: ZER008

1. PRODUCT OVERVIEW

The Sunvivi 26-Quart Electric Roaster Oven is a versatile kitchen appliance designed for roasting, baking, and slow cooking. It serves as an excellent alternative to traditional ovens and slow cookers, simplifying meal preparation and saving space. Its unique features include a visible lid for monitoring cooking progress, and specialized defrost and warm functions.



Figure 1.1: Sunvivi 26-Quart Electric Roaster Oven in use, showcasing its capacity with a roasted turkey.

This roaster is equipped with a liftable rack and a removable enamel-on-steel roasting pan, ensuring fast, even heat distribution and easy cleanup. It is ideal for large meals, holiday dinners, and family gatherings, capable of accommodating 14-28lb turkeys.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended household use.

3. COMPONENTS AND ASSEMBLY

Your Sunvivi Electric Roaster Oven comes with essential components designed for ease of use and efficient cooking.

Included Components:

- Roaster Oven Base
- Removable Enamel-on-Steel Roasting Pan
- Lifiable Roasting Rack
- Viewing Lid with Handle



Free Oven To

Prepare Other Dishes



Figure 3.1: The roaster oven with its removable pan and rack, designed for easy preparation and cleanup.

Assembly:

1. Place the Roaster Oven Base on a stable, heat-resistant surface.
2. Insert the Removable Roasting Pan into the Roaster Oven Base.
3. Place the Lifiable Roasting Rack inside the Removable Roasting Pan.
4. Position the Viewing Lid securely on top of the Roasting Pan.

Video 3.1: A demonstration of assembling the Sunvivi roaster oven, showing the placement of the pan and rack.

4. SETUP

Before first use, ensure all packaging materials are removed. Wash the removable roasting pan and rack with warm, soapy water, rinse thoroughly, and dry completely. Wipe the exterior of the roaster base with a damp cloth. Do not immerse the base in water.

5. OPERATING INSTRUCTIONS

The Sunvivi Electric Roaster Oven offers precise temperature control and versatile functions for various cooking needs.

Temperature Control:

The roaster features a full-range temperature control knob, allowing you to set temperatures from 150°F to 450°F. It also includes specific settings for 'KEEP WARM' and 'DEFROST'.

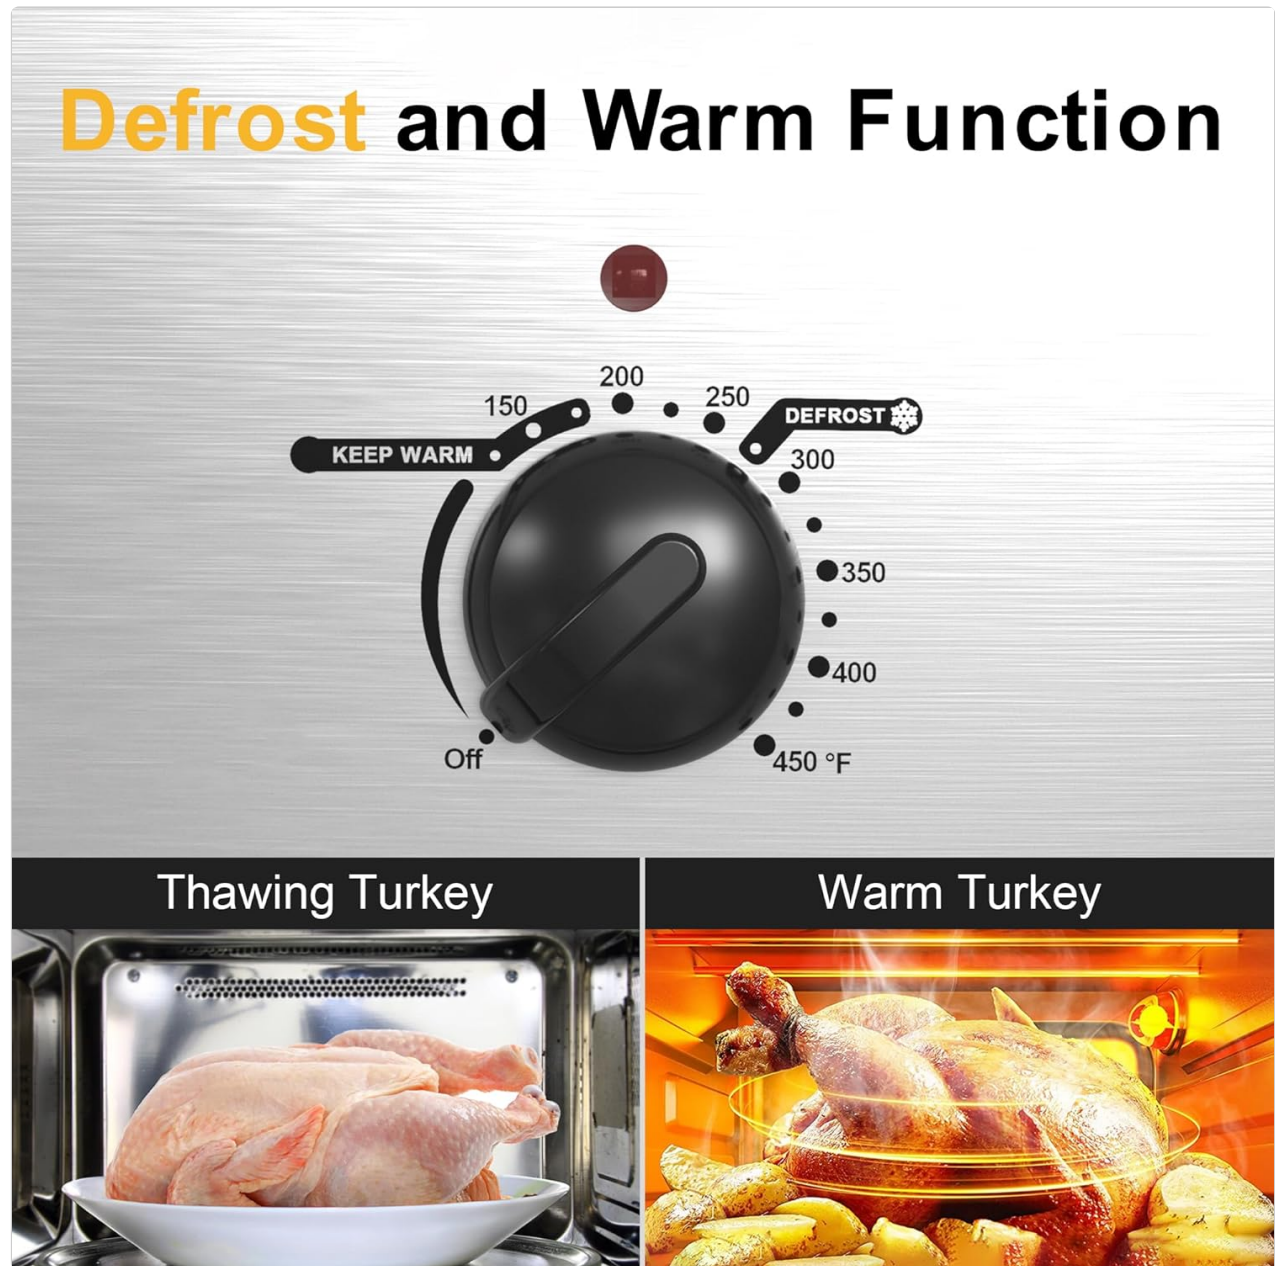


Figure 5.1: Detailed view of the temperature control knob and its various settings.

Defrost/Warm Function:

- **Defrost Setting:** This innovative feature allows you to defrost and roast a turkey from frozen in hours, significantly reducing preparation time.
- **Warm Setting:** Use the 'KEEP WARM' setting to maintain your cooked food at an ideal serving temperature without overcooking.

Visible Lid Design:

The unique visible lid allows you to monitor the cooking process without lifting the lid. This helps to reduce heat loss, maintain a consistent temperature, and prevent steam burns, ensuring your food cooks perfectly and retains its moisture.

Say NO to Dry Turkey

Get a Crispy Skin and Juicy Meat



AIR CYCLE
HEATING



VISUALIZATION
TOP



150-450°F
ADJUSTABLE TEMP



Figure 5.2: The visible lid allows for easy monitoring of food during cooking.

Cooking Examples:

The large capacity and versatile temperature settings make this roaster oven suitable for a variety of dishes.

Video 5.1: An overview of the 26-Quart Roaster Oven, highlighting its features and capacity for large items like turkeys.

Video 5.2: Learn how to prepare a large batch of dog food using the Sunvivi Roaster, demonstrating its large capacity and versatility for various cooking needs.

Video 5.3: See the Sunvivi Electric Roaster Oven in action, cooking various dishes and showcasing its performance.

6. CLEANING AND MAINTENANCE

Proper cleaning and maintenance will ensure the longevity and optimal performance of your roaster oven.

Cleaning:

- Always unplug the roaster oven and allow it to cool completely before cleaning.
- Remove the roasting pan and rack. These components are dishwasher safe or can be washed by hand with warm, soapy water.
- Wipe the exterior of the roaster base with a damp cloth. Do not immerse the base in water or any other liquid.
- For stubborn food residue in the roasting pan, soak it in warm, soapy water before scrubbing.

For Family and Friends



Figure 6.1: The removable pan and rack make cleaning effortless, contributing to an enjoyable kitchen experience.

Video 6.1: A detailed look at the Sunvivi Electric Roaster Oven's large capacity and easy-to-clean features, including the removable pan and rack.

7. TROUBLESHOOTING

If you encounter any issues with your Sunvivi Electric Roaster Oven, please refer to the common troubleshooting tips below. If the problem persists, contact customer support.

Problem	Possible Cause	Solution
Roaster does not turn on	Not plugged in; Power outlet malfunction; Temperature knob set to 'OFF'	Ensure plug is securely in outlet; Check circuit breaker; Turn temperature knob to desired setting.
Food not cooking evenly	Incorrect temperature setting; Overcrowding the pan	Adjust temperature as per recipe; Avoid overfilling the pan to allow for proper heat circulation.
Lid is steaming excessively	Normal during cooking; Lid not seated properly	This is normal. Ensure lid is securely placed to minimize steam escape.

8. SPECIFICATIONS

Feature	Detail
Brand	SUNVIVI
Model Name	Electric Roaster Oven
Model Number	ZER008
Capacity	26 Quarts
Color	Silver
Material	Stainless Steel (Finish Type, Door Material Type)
Product Dimensions	15"D x 15.7"W x 23.8"H
Item Weight	17 pounds
Control Type	Knob
Temperature Range	150 - 450 Degrees Fahrenheit
Power Source	AC
Included Components	Roasting Pan

9. WARRANTY AND SUPPORT

Sunvivi is committed to providing the best experience to its customers and stands behind the quality of its electric roaster oven. Your product comes with a satisfaction guarantee.

- **Warranty:** The product may be covered by a 1-5 year warranty. Please refer to your purchase documentation for specific warranty details.
- **Free Replacement:** Enjoy 365 days of free replacement for eligible issues.

- **Customer Support:** If your product fails to meet your expectations or you require assistance, please contact Sunvivi customer service. They are available to provide a great solution at any time.