

ASHATA ASHATAvu9d8f7erc360

ASHATA K12 Mini Wearable Watch User Manual

Model: ASHATAvu9d8f7erc360

INTRODUCTION

The ASHATA K12 Mini Wearable Watch is a versatile device designed for fitness and sports, featuring an integrated HD camera for video recording. This smart watch offers a full touch screen, a 280mAh battery, and supports up to 256GB memory card capacity for storing recorded content. It is suitable for various outdoor and indoor activities, providing a convenient way to capture moments.

WHAT'S IN THE BOX

- 1 x Mini Camera (Wearable Watch)
- 1 x Strap
- 1 x Manual
- 1 x USB Cable

SPECIFICATIONS

Brand	ASHATA
Model Number	ASHATAvu9d8f7erc360
Screen Size	1.3 Inches (Visible screen diagonal: 2" / 4 cm)
Memory Storage Capacity	256 GB (Max supported)
Battery Capacity	280 Milliamp Hours
Connectivity Technology	USB
Operating System	Windows, OS X
Special Feature	Pedometer, HD Video Recording
Item Weight	4.6 ounces

SETUP

1. Initial Charging

Before first use, fully charge the ASHATA K12 Mini Wearable Watch. Connect the provided USB cable to the watch and a power source (e.g., computer USB port or USB wall adapter). The charging indicator on the screen will show the charging status.

2. Inserting the Memory Card

The device supports up to a 256GB capacity memory card (not included). Locate the memory card slot on the watch. Carefully insert the memory card into the slot until it clicks into place. Ensure the card is inserted correctly to avoid damage.



Image: The ASHATA K12 Mini Wearable Watch, illustrating the location of the memory card slot and the mode switch for recording.

Power On/Off and Display Control

- **To Power On:** If the device is off, long press the multi-function button for 2 seconds.
- **To Turn On Display Screen (from video state):** Short press the multi-function button.
- **To Power Off:** (Implicit, usually long press the multi-function button again or through menu options if available).



Image: The ASHATA K12 Mini Wearable Watch display, showing the time and battery indicator, illustrating the screen's appearance when active.

Video Recording

- **Start Recording:** Short press the record button for 2 seconds.
- **Stop Recording:** Short press the record button for 2 seconds again.



Image: The ASHATA K12 Mini Wearable Watch shown in a room setting, indicating its capability for HD video recording at 1280x720p resolution.



Image: A close-up view of the ASHATA K12 Mini Wearable Watch, highlighting the camera lens and emphasizing clear picture quality and easy operation for starting/stopping recording.

Mode Switching

The device features a physical switch for mode selection:

- **Toggle the switch to the left:** For continuous recording.
- **Toggle the switch to the right:** For separate recording (e.g., audio-only recording if supported, or distinct video files).



Image: The ASHATA K12 Mini Wearable Watch, illustrating the mode switch position and its function for different recording types.

SETTING THE TIME

The ASHATA K12 Mini Wearable Watch automatically reads the time from a configuration file on the memory card. Follow these steps to set or update the device's time:

1. Ensure a memory card is inserted into the watch.
2. Connect the watch to a computer using the provided USB cable. The watch should appear as a removable disk drive.
3. Navigate to the root directory of the memory card.
4. Locate a file named **"time.txt"**. If this file does not exist, it will be generated automatically the first time you power on the watch with a memory card inserted.
5. Open the **"time.txt"** file using a plain text editor (e.g., Notepad on Windows, TextEdit on macOS).
6. Edit the content of the file to reflect the current date and time. The format must be precise. For example, if the current date is October 26, 2024, and the time is 14:30:00, the content should be: **2024-10-26 14:30:00**
7. Save the **"time.txt"** file.

- 8. Safely eject the watch from your computer.
- 9. Power on the watch. It will read the updated time from the **"time.txt"** file upon booting.

*Note: Incorrect formatting of the **"time.txt"** file may prevent the time from updating correctly. Ensure the format is exactly YYYY-MM-DD HH:MM:SS.*

MEMORY CARD USAGE

The ASHATA K12 Mini Wearable Watch supports memory cards up to 256GB capacity. A memory card is essential for storing all recorded videos and other data. Ensure you use a high-quality memory card for optimal performance.

- **Capacity:** Supports up to 256GB.
- **Insertion/Ejection:** Carefully insert and eject the memory card to prevent damage to the card or the device slot.
- **Formatting:** It is recommended to format the memory card periodically, especially if you experience recording issues. This can typically be done by connecting the watch to a computer and formatting the card through your operating system's file management tools.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Time/Date is incorrect	"time.txt" file not updated or incorrectly formatted.	Follow the "Setting the Time" instructions precisely. Ensure the format is YYYY-MM-DD HH:MM:SS.
Cannot record video	No memory card inserted, memory card full, or memory card error.	Ensure a memory card is inserted. Check available space. Try formatting the memory card.
Device not turning on	Low battery or device malfunction.	Charge the device fully. If the issue persists, contact customer support.
Poor video quality	Lighting conditions, camera lens obstruction, or inherent device limitations.	Ensure adequate lighting. Clean the camera lens. Note that video quality is HD (1280x720p) but may vary based on environment.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the watch body and screen. Do not use harsh chemicals or abrasive materials.
- **Lens Care:** Gently wipe the camera lens with a microfiber cloth to ensure clear recordings.
- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures when not in use.
- **Battery:** To prolong battery life, avoid fully discharging the battery frequently. Charge it regularly.

WARRANTY AND SUPPORT

For warranty information or technical support regarding your ASHATA K12 Mini Wearable Watch, please refer to the warranty card included in your product packaging or visit the official ASHATA website. You may also contact ASHATA customer service directly for assistance with product issues or inquiries.

ASHATA Official Store: <https://www.amazon.com/stores/ASHATA/page/07B17FA8-992A-44A0-8F2E-B6A29E3207A3>

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BJQ5MSN6>

More documents and user manuals: <https://manuals.plus/>