

[Manuals.plus](#) /

› [ASHATA](#) /

› ASHATA Soundbar Remote Control User Manual for HTL9100, HTL5120, HTL7180, YKF297, 006

ASHATA ASHATAdyomkunv58552

ASHATA Soundbar Remote Control User Manual

Model Compatibility: HTL9100, HTL5120, HTL7180, YKF297, 006 Soundbars

1. SETUP INSTRUCTIONS

1.1 Battery Installation

The remote control requires two (2) AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



Figure 1: Battery compartment with cover removed, illustrating the correct orientation for AAA battery insertion.

Note: Always replace both batteries at the same time with new ones. Do not mix old and new batteries, or different types of batteries.

2. OPERATING INSTRUCTIONS

This replacement remote control is designed for sensitive and responsive operation with compatible soundbar models HTL9100, HTL5120, HTL7180, YKF297, and 006. Ensure a clear line of sight between the remote control and the soundbar's infrared receiver.





Figure 2: Overview of the ASHATA Soundbar Remote Control buttons.

2.1 Button Functions

- **Power Button ():** Turns the soundbar ON or OFF.
- **IN / ARC / OPTICAL / USB:** Selects the input source for the soundbar.
- **Volume (+/-):** Increases or decreases the main volume level.
- **Mute ():** Mutes or unmutes the sound.
- **Play/Pause ():** Plays or pauses media playback (if applicable via USB or other sources).
- **Previous/Next Track (/):** Skips to the previous or next track (if applicable).
- **BASS (+/-):** Adjusts the bass level.
- **TREBLE (+/-):** Adjusts the treble level.
- **SOUND:** Cycles through various sound modes (e.g., Movie, Music, Voice).
- **SURROUND (OFF/ON):** Toggles surround sound effect.
- **AUTO VOL. (OFF/ON):** Activates or deactivates automatic volume leveling.
- **NIGHT (OFF/ON):** Toggles night mode for reduced dynamic range.
- **AUDIO SYNC (+/-):** Adjusts audio delay for synchronization with video.
- **DIM:** Adjusts the display brightness of the soundbar.

3. MAINTENANCE

3.1 Cleaning

To maintain the remote control's appearance and functionality, clean it regularly with a soft, dry cloth. Do not use liquid cleaners, abrasive pads, or chemical solvents, as these may damage the surface or internal components.

3.2 Battery Care

- Remove batteries if the remote control will not be used for an extended period to prevent leakage.
- Dispose of used batteries according to local regulations.

3.3 Durability

The remote control is constructed from premium ABS material, designed for durability and wear resistance. Avoid dropping the remote or exposing it to extreme temperatures or moisture.

4. TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity.
 - Replace old batteries with new AAA batteries.
 - Ensure there is a clear line of sight between the remote control and the soundbar's infrared receiver. Obstructions can block the signal.

- Confirm the soundbar is powered on.

- **Specific buttons not working:**

- Clean the remote control surface, especially around the unresponsive buttons, to remove any dirt or debris.
- If only certain functions are not working, verify that your soundbar model supports those specific functions.

5. SPECIFICATIONS

Feature	Detail
Item Type	Soundbar Remote Control
Material	ABS
Model	AN MR21GA (Replacement for YKF297 006)
Battery Type	2 x AAA (Not Included)
Applicable Models	HTL9100, HTL5120, HTL7180, YKF297, 006 Soundbars
Package Dimensions	6.69 x 1.97 x 0.79 inches
Item Weight	2.01 ounces
Manufacturer	ASHATA

6. WARRANTY AND SUPPORT

Specific warranty information for this product is not available in the provided data. For details regarding warranty coverage, technical support, or replacement parts, please contact the manufacturer, ASHATA, directly or refer to the product packaging.

You may visit the ASHATA store on Amazon for additional product information:[ASHATA Store](#)

© 2023 ASHATA. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BJQCPNN6>

More documents and user manuals: <https://manuals.plus/>